

Adams 2025.1

Release Guide

Corporate Office

Hexagon Manufacturing Intelligence
78 Portsmouth Road Cedar House
Cobham, Surrey KT11 1HY
United Kingdom
Telephone: (+44) 02070686555

Worldwide Web

<http://www.hexagon.com>

Support

<http://simcompanion.hexagon.com/>

Disclaimer

This documentation, as well as the software described in it, is furnished under license and may be used only in accordance with the terms of such license.

Hexagon reserves the right to make changes in specifications and other information contained in this document without prior notice.

The concepts, methods, and examples presented in this text are for illustrative and educational purposes only, and are not intended to be exhaustive or to apply to any particular engineering problem or design. Hexagon assumes no liability or responsibility to any person or company for direct or indirect damages resulting from the use of any information contained herein.

User Documentation: Copyright © 2025 Hexagon AB and/or its subsidiaries. All Rights Reserved.

This notice shall be marked on any reproduction of this documentation, in whole or in part.
Any reproduction or distribution of this document, in whole or in part, without the prior written consent of Hexagon is prohibited.

This software may contain certain third-party software that is protected by copyright and licensed from third party licensors. Additional terms and conditions and/or notices may apply for certain third party software. Such additional third party software terms and conditions and/or notices may be set forth in documentation and/or at [Third party software information](#) (or successor website designated by Hexagon from time to time). Portions of this software are owned by Siemens Product Lifecycle Management, Inc. © Copyright 2025.

The Hexagon logo, Hexagon, MSC, MSC Adams, MD Adams, and Adams are trademarks or registered trademarks of Hexagon AB and/or its subsidiaries in the United States and/or other countries. FLEXIm and FlexNet Publisher are trademarks or registered trademarks of Flexera Software. Parasolid is a registered trademark of Siemens Product Lifecycle Management, Inc.

All other trademarks are the property of their respective owners.

ADAM:V2025.1:Z:Z:Z:DC-OPS-PDF

Adams 2025.1 Release Guide

Adams 2025.1 Release Guide	3
Preface	13
Welcome to Adams 2025.1	14
About Hexagon	15
Overview	15
About Virtual Product Development and Adams	15
Technical Support	15
Web	15
Phone and Email	19
Training	19
Course Information and Registration	19
What's New	20
General	22
Issue Resolved	22
Adams Car	25
Changing the Default Variant Name	26
ADM (Adams Dataset Model) Output Consistent for Submodels	27
Synchronize Subsystem Changes	28
Property File Auditor	29
Parameter Variables Support Ranges & Allowed Values	29
Leafspring Editor Enhancements	30
Integration of Adams Car with Nexus Compute	32
Issues Resolved	32
Known Issues	38

Adams 2025.1 Release Guide

Adams Controls	40
Issues Resolved	40
Known Issues	40
Adams Driveline	41
Known Issues	41
Adams Durability	42
Acoustic Workflow for Uncoupled Fluid-Structure Modes in Flex Bodies	42
Issues Resolved	43
Adams Explore	44
Issues Resolved	44
Adams Flex	45
Issues Resolved	45
Known Issues	45
Adams Insight	47
Issues Resolved	47
Adams Machinery	48
Bearing AT – Misalignment	48
Gear AT Spline Fast Contact Modeling - Redesign	49
Improved Visualization of Imported Bearings	49
Issues Resolved	50
Known Issues	51
Adams PostProcessor	53
Change Default Order or Curve Colors & Styles	53
Issues Resolved	54
Known Issues	54
Adams Solver	56

Adams 2025.1 Release Guide

User-Defined Friction Model in Stiction	56
CONTACT Slip Direction Utility Subroutine	56
HHT Integrator Improvements	56
Issues Resolved	57
Known Issues	58
Adams Tire	59
FLEXRIM Data	59
Issues Resolved	59
Known Issues	60
Adams Vibration	61
Issues Resolved	61
Known Issues	61
Adams View	62
CAD Interoperability Version Support	62
Updated Graphics Toolkit	63
User-Specified Segments for Extrusion & Revolution Geometries	63
Note: CAD-resident Density Values	63
Issues Resolved	64
Known Issues	66
Adams 2024.2 Release Notes	71
Adams Car	73
Testrig Subsystems	73
Event Pre- and Post-Actions	74
Variant Improvements	74
Reordering Variants	75
Leafspring Support for True Batch Mode	75

Adams 2025.1 Release Guide

Adams Controls	75
FMU Encryption for Flex Bodies	75
Adams Co-simulation Interface	76
Supported Versions of Software for Marc Co-simulation	76
Adams Flex	77
Global and Modal Stiffness and Mass Scaling of Flexible Bodies	77
MNF Generation Default Yields Faster Animations	77
Adams Machinery	78
Gear AT Spline Joint – Microgeometry & Imported Measurements	78
Romax to Adams Support for Cutout Gear Blanks	79
Romax Non-Linear Stiffness Connection Now Maps to General Bushing	80
Mechatronics	80
New Step and Filter Options for Signals	80
Adams PostProcessor	81
Print to PDF	81
Adams RealTime	81
Adams Solver	82
New RAMP Function	82
Arguments	82
Adams View	82
CAD Interoperability Version Support	82
Aggregate Mass Improvements	83
Function Builder – Bracket Highlights	84
Function Builder – Built-in Search Field	84
Adams 2024.1 Release Notes	86
Adams Car	88

Communicator Map	88
Edit in Template	89
Show & Hide Subsystems	90
Flexible Rim	90
User-Defined Plot and Report Templates	91
Tension Leafspring (Without Shackle)	93
Adams Co-simulation Interface	94
Supported Versions of Software for Marc Co-simulation	94
Adams Durability	94
Rainflow – Fatigue Cycle Counting	94
Acoustic Pressure Recovery in Flexible Bodies	96
Adams Flex	97
Rotor Dynamics Effects in Flex Bodies	97
Adams Machinery	99
GearAT: Gear MicroGeometry Variations	99
GearAT: Exact Gear Tooth Measurements	100
Romax to Adams	102
REXS File Import	102
Adams Solver	103
Utility Subroutines for Contact Node Incidents	103
New Handling of Angles – ADVANCED_ROTATION	104
Adams Tire	104
Runtime Inflation Pressure Changes (FTire)	104
Adams View	105
Importing CAD with Density – New Defaults	105
CAD Interoperability Version Support	106

Adams 2025.1 Release Guide

Adams 2023.4 Release Notes	108
Adams Car	109
New Menu Structure	109
New API For Optimization & Multi-Run Applications	112
Improvements to Low-Speed Reverse Parking Events	112
Adams Co-simulation Interface	113
Supported Versions of Software for Marc Co-simulation	113
Adams PostProcessor	113
New 2D Order Plots from 3D FFT Plots	113
Adams Real Time	115
Separate Cores for Tires	115
Real Time Animation on Linux Discontinued after 2023.4	115
Adams Solver	115
New Contact Measurement Functions	115
Contact Performance Improvement	116
Adams View	116
CAD Interoperability Version Support	116
Adams 2023.3 Release Notes	118
Adams Car	119
Point Motion Actuators	119
Background Simulation Shell Shows ACF Filename	119
Improvements to Events	120
Car True Batch Mode	120
Adams Controls	121
New FMU File-Saving Options	121
Encrypted FMUs for dSPACE SCALEXIO	122

Adams 2025.1 Release Guide

Adams Co-simulation Interface	122
Supported Versions of Software for Marc Co-simulation	122
Adams Flex	122
Improved Flex-to-Rigid Swap	122
Adams Machinery	123
BearingAT: Cylindrical Roller Bearings Without Inner Ring	123
Adams PostProcessor	123
Performance Improvements with Large Flexible Bodies	123
Order Analysis Plotting	124
Abbreviation Option for Plot Unit Labels	125
Adams Real Time	126
New Setup Guide for VI-grade Driving Simulator	126
Tire Performance Improvements & New Capabilities	126
Belt Dynamics and 3D Enveloping Contact in Real Time	126
Adams View	126
CAD Interoperability Version Support	126
Adams 2023.2 Release Notes	128
Adams Car	129
Adams Car Preferences	129
Request Map Editor Updates	130
Adams Controls	131
Allow Additional Files when Building FMUs	131
Adams Co-simulation Interface	131
Supported Versions of Software for Marc Co-simulation	131
Adams Drill	132
Adams Drill 2022.4 is the Last Release	132

Adams 2025.1 Release Guide

Adams Linear	132
FE_PARTs Work with Adams Linear & Animation	132
Adams Machinery	132
GearAT: Multi-Gear Shafts	132
Adams Real Time	133
Update Earlier Adams Car FMUs	133
Adams Solver	133
Direct Export to .mat (HDF5) Format	133
Adams View	134
Warnings & Errors Now Color-Coded	134
CAD Interoperability Version Support	134
Adams 2023.1 Release Notes	136
Adams Car	137
Automatic Ride Height Adjustment in Suspension Analyses	137
Adams Co-simulation Interface	137
Supported Versions of Software for Marc Co-simulation	137
Adams Drill	138
Adams Drill 2022.4 is the Last Release	138
Adams Linear	138
Linear Support for FE_PARTs	138
Adams Machinery	138
Romax to Adams Translator: Expanded List of Elements	138
Gear AT: New orientation method for cylindrical gear pair by clearance study	139
EMag AT: New Detailed Motor Type	141
Adams PostProcessor	142
Animation Performance Improvements	142

Adams Real Time	143
Switching Mini-Maneuvers in Real Time	143
Parametric Support for dSPACE FMUs	143
Adams Solver	143
New INTEGRATOR Setting: ADAPTIVITY	143
Adams Vibration	144
ODS Animation Performance Improvements	144
Adams View	144
New Nonlinear Bushing Element	144
AutoSave in Adams View & Adams Car	145
CAD Interoperability Version Support	146
Running Adams Products	147
Starting Adams Products	148
Starting Adams Products on Linux	148
To start a product on Linux:	148
Starting Adams Products on Windows	149
To start a product on Windows:	149
To start a product from DOS shell in Windows:	149
Setting Preferences	151
Setting Preferences on Linux	151
To display the Registry Editor:	151
Setting Preferences on Windows	151
To display the Settings dialog box:	151
Setting Your Working Directory	152
To set your working directory:	152
Tool Tips	153

To display tool tips:	153
Getting Help	154
Online Help	155
Versions of Web Browsers	155
Accessing the Online Help	155
To get help on a dialog box:	156
To get general help on your product:	156
To open the Adams online help from the Adams Toolbar:	156
To open the Adams online help from the Start Menu:	156
Navigating through the Help	156
Left Pane Adjustment	157
Searching	157
Printing	158
To print a file:	158
Index	158
Tutorials and Examples	160
To access the tutorials and examples:	160
Supported Versions of Integration Products	161
Support for Easy5 and MATLAB	162
Easy5	162
MATLAB	162
Supported Environments for Adams Real Time	163
Concurrent SIMulation Workbench	163
dSPACE SCALEXIO	163
Supported Versions of Integration Products	164

Preface

Welcome to Adams 2025.1	14
About Hexagon	15
Technical Support	15

Welcome to Adams 2025.1

Thank you for purchasing Adams 2025.1. Adams is motion simulation software for analyzing the complex behavior of mechanical assemblies. With it, you can test virtual prototypes and optimize designs for performance, safety, and comfort, without having to build and test numerous physical prototypes.

About Hexagon

Overview

Hexagon is the leading global provider of virtual product development (VPD) tools, including simulation software and professional services. Hexagon helps companies make money, save time, and reduce costs associated with designing, testing, producing, and supporting manufactured products.

Hexagon works with thousands of companies worldwide, in hundreds of industries, to develop better products faster by using information technology, software, and services to enhance and automate the product design and manufacturing process. Simulating your product performance reduces development costs, time to market, and warranty costs.

About Virtual Product Development and Adams

You've heard it before: manufacturing companies today face intense global competition, demanding customers, fragmented markets, increasing product complexity, compressed product cycles, price and profit pressures, strict regulatory and liability environments, systems integration and supply chain issues, skyrocketing costs of testing and physical prototyping, and on and on...

What you don't often hear, though, is a strategy for enabling your company to improve your new product development process to meet these challenges.

Whether you are delivering airplanes, automobiles, ships, biomedical devices, golf clubs or children's toys to your customers, Hexagon's goal is to help you improve your new product development process, allowing you to be significantly better at your concept development, design, testing, and production activities through the application of VPD.

VPD is an environment that uses an integrated combination of both simulation software technology and traditional techniques to design, test, manufacture, and support products. The result is that cost-effective designs that meet all performance, safety, durability, and reliability requirements can be brought to market in less time and for less cost.

Adams, as part of VPD, is focused on enhancing your ability to make better product development decisions, explore innovative design alternatives, and consistently get the product right. It is the world's most widely used mechanical system simulation software. It enables you to produce virtual prototypes, realistically simulating the full-motion behavior of complex mechanical systems on your computers and quickly analyzing multiple design variations until an optimal design is achieved. This reduces the number of costly physical prototypes, improves design quality, and dramatically reduces product development time.

Technical Support

For help with installing or using an Hexagon product, contact Hexagon technical support. Our technical support provides technical assistance on questions related to installation and use of the software. For further details please see the Technical Support Usage Guide, which is accessible via our support web site.

You can reach Hexagon technical support on the web, by telephone, or e-mail.

Web


Go to the Hexagon web site at www.hexagon.com, scroll down and click on *Services & Training*. Here, you can find a wide variety of support resources including Product Updates, Discussions, Technical Articles,

Preface

and Documentation updates.

In addition, we provide several excellent sources of online information:


- *SimCompanion*: Find solutions to problems in this repository of troubleshooting tips, examples, and frequently asked questions. To access the SimCompanion, go to:
<https://simcompanion.hexagon.com/>
- *Nexus*: Find support resources including Knowledge Hub, Community forums, Documentation Center. Go to <https://nexus.hexagon.com/home/> . Click **Sign In**.

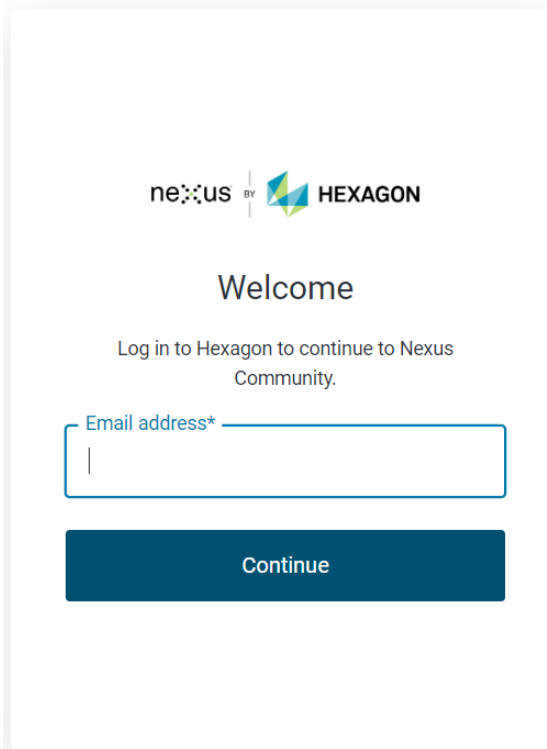

The screenshot shows a login page for 'nexus BY HEXAGON'. The page has a clean, white background with a light gray border. At the top center, the logo consists of the word 'nexus' in a sans-serif font, followed by a small 'BY' and the 'HEXAGON' logo (a stylized blue and green hexagon) and the word 'HEXAGON'. Below the logo, the word 'Welcome' is centered in a large, bold, sans-serif font. Underneath 'Welcome', the text 'Log in to Hexagon to continue to Nexus Community.' is centered in a smaller font. Below this text is a text input field with a blue border and a blue cursor. The label 'Email address*' is positioned to the left of the input field. Below the input field is a dark blue button with the word 'Continue' in white, centered text.

Preface

Click  to add a product.

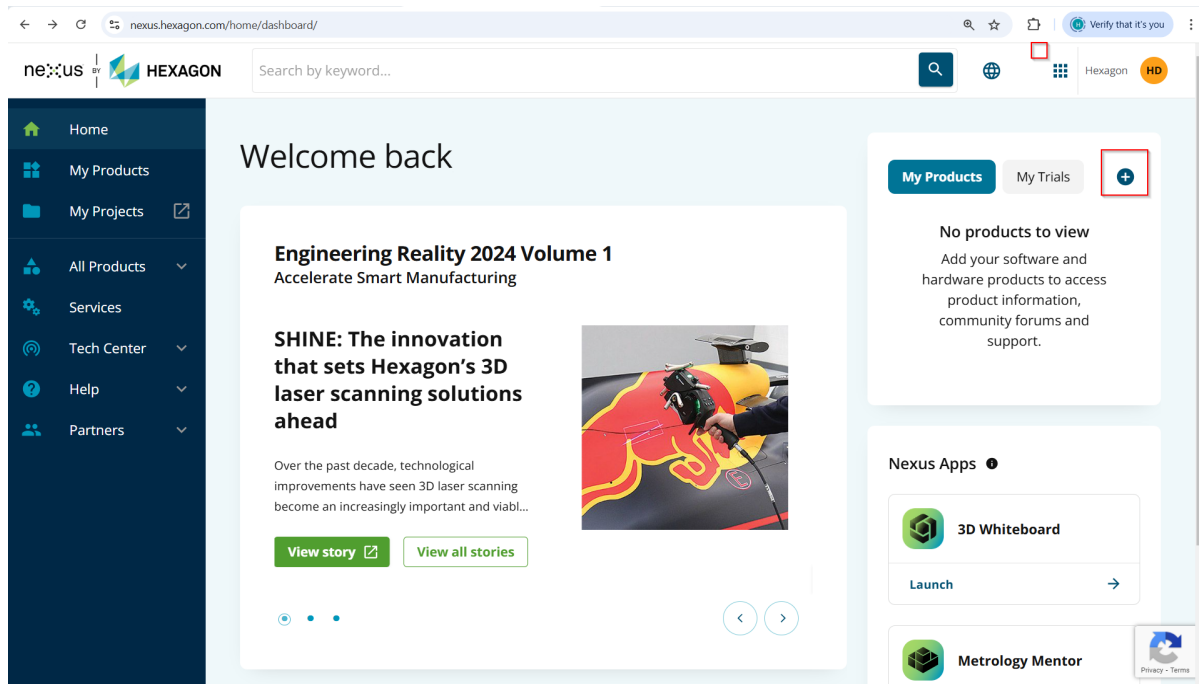

Select **Software(s)** and select **Adams** from the dropdown list of displayed products.

Add an owned product Close X

If you own a product and it isn't showing in your Nexus portal, please add it manually here. Simply select the relevant options and add product information below to be able to manage your products.


☐ Hardware(s) ☒ Software(s)

Products


Add products →

Preface

Adams is added to **My Products**.

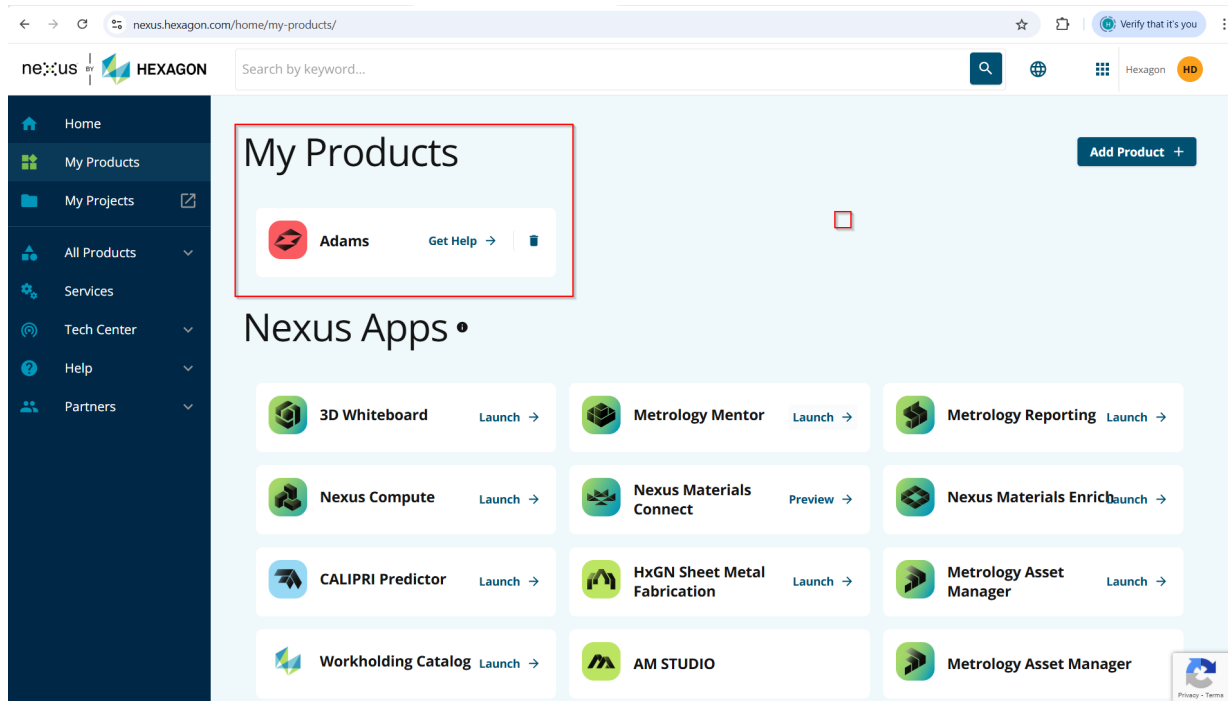

Click on **Get Help** to access **Knowledge hub**, **Community forums**, and **Documentation Center**.

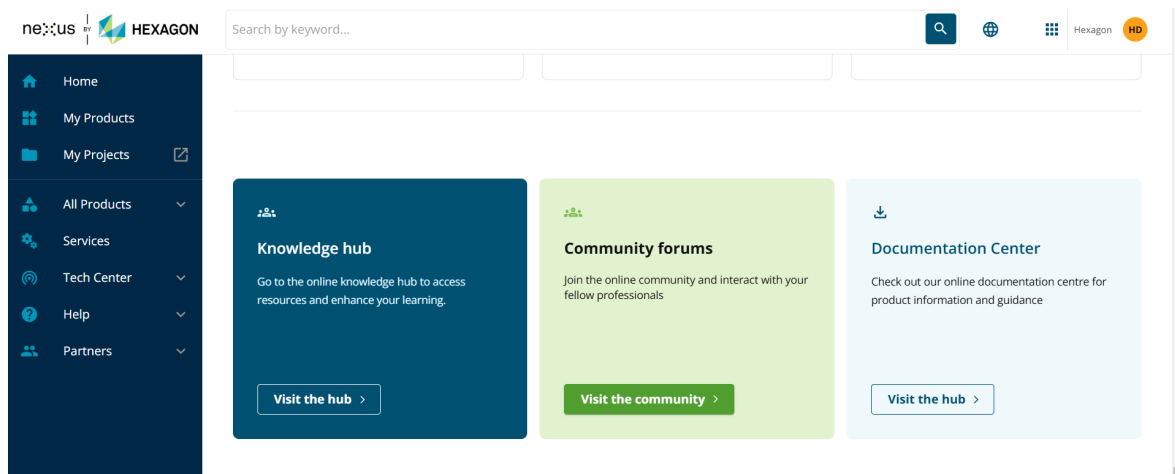

Note:

Alternatively, you can access this page by going to <https://nexus.hexagon.com/home/dashboard/> and clicking My Products, select Software, and then select Adams.

- **Knowledge hub** to access resources such as technical articles and enhance your learning
- **Community forums** when you are looking for peer support, as well as technical expertise. Many of our consultants, developers, and technical support staff monitor the forums. To sign up for the

Preface

forums, go to [Adams - Nexus Community](#) and view the Adams discussions in the Community Forums.

- **Documentation Center** for product information and guidance To view the documentation, go to [Adams - Documentation Center](#)

Phone and Email

For a current list of phone numbers and language based email addresses please visit our support [web site](#).

Training

Hexagon training provides comprehensive training in Virtual Product Development. We offer standard and customized training courses in the application of CAE tools to solve from basic to complex problems within any industry. We offer over 100 courses in our state-of-the-art classroom facilities and individual computer graphics laboratories at training centers throughout the world. All of our courses emphasize hands-on computer laboratory work to facilitate skills development. We are uniquely positioned to optimize your investment in design and simulation software tools.

Our industry experienced expert staff is available to customize our course offerings to meet your unique training requirements. For the most effective training, we also offer many of our courses at our customer's facilities.

We specialize in customized training based on our evaluation of your design and simulation processes, which yields courses that are geared to your business. In addition to traditional instructor-led classes, we also offer video courses, interactive multimedia training, web-based training, and a specialized instructor's program.

Course Information and Registration

For detailed course descriptions, schedule information, and registration call the Training Specialist at +1 800 426-1066 or visit www.hexagon.com.

What's New

General	22
Adams Car	25
Adams Controls	40
Adams Driveline	41
Adams Durability	42
Adams Explore	44
Adams Flex	45
Adams Insight	47
Adams Machinery	48
Adams PostProcessor	53
Adams Solver	56
Adams Tire	59
Adams Vibration	61
Adams View	62
Adams 2024.2 Release Notes	71
Adams 2024.1 Release Notes	86
Adams 2023.4 Release Notes	108
Adams 2023.3 Release Notes	118
Adams 2023.2 Release Notes	128
Adams 2023.1 Release Notes	136

General

Issue Resolved	22
----------------------	----

Issue Resolved

ADMS-121746	Getting Started - Gear AT Lead screw Setup motion page is different
ADMS-121718	Getting Started - Some pages in the Gear AT document are different
ADMS-121384	"Evaluate the Fixed Step Integrator" help page "Fixed Step Integrator Option" hyperlink does not point to the correct help page
ADMS-121040	IPIT for the general bushing parameters Online help is incorrect.
ADMS-120742	Create/Modify Joint Motion Actuator Documentation confusing for limits
ADMS-120604	Adams durability getting started guide - MSC.Fatigue no longer supported
ADMS-120352	Incorrect KB Article reference 1-KB12433 in FD Element help documentation
ADMS-120271	Update help to add KROLRAD under MEASURCHANNELS block in as a requirement for LOADED_RADIUS
ADMS-120246	Documentation shows wrong link for 'interface model_browser...' commands.
ADMS-119495	Adams Flex MNF -> Optimizer online Help erroneously includes a "Formatting" field that is no longer valid and has been removed from the UI.
ADMS-119437	Component Mode Synthesis equation no1 is missing
ADMS-119035	Documentation needs to mention that requests are not saved in results files of binary or ASCII format
ADMS-118940	TDFT assumes that the Velocity is constant during fitting of the Enveloping Data
ADMS-118877	Online Help Search is not working correctly for environment variables name search
ADMS-118792	Broken link in Adams Vibration documentation
ADMS-118640	Correction required in the documentation for definition of the TRANS function

What's New

ADMS-118565	Minor Error in the Getting Started > Gear AT help documentation
ADMS-118456	Docs link to Release Notes not proper
ADMS-118445	Incorrect documentation for Utility Subroutine N_CONTACT_INCIDENTS output arguments
ADMS-118421	Corrected content in About Hexagon section
ADMS-118387	Typo in documentation (ADAMS_DECLARE_THREADSAFE)
ADMS-118120	Wrong documentation for Environment Variable MSC_ADAMS_THREAD_AFFINITY_SET0
ADMS-118096	Incorrect Extended Definition for ADAMS_DECLARE_THREADSAFE Documentation
ADMS-117776	TDFT documentation figure "Plotting Section" is used to label the "Message Window"
ADMS-117754	New subsystem can be created from non-existing template if template of same name and file origin is available in-session.
ADMS-117549	More clear documentation need for the statement regarding the floating marker that belongs to flexible body node.
ADMS-116994	Update turn radius -request user1140 help
ADMS-116599	Placement of Theory of Flexible Bodies content in TOC is incorrect
ADMS-116598	Equations for some invariants are missing from online Help in Adams Flex Theory Guide
ADMS-116592	Solver Settings Dynamics category F1 help documentation INTEGRATOR help hyperlink does not work in Adams online help
ADMS-116308	Broken link in 'Introducing Adams View Libraries' documentation
ADMS-116111	Leaf Spring Editor documentation does not have right information about leaf profile points definition
ADMS-114754	Link to 'Technical Support' in Adams Machinery > GearAT > Help documentation does not work
ADMS-114389	Maxflex product help documentation images need to be updated with latest GUI images
ADMS-77277	Documentation does not have detail information on "Delay_Logic_Array" used in DELAY Function
ADMS-63407	SETVELIC is a Solver utility function which is used to set initial velocities for Parts, FE Parts, Flex Bodies and Point Masses. It is currently undocumented.
ADMS-56671	MSC_ADAMS_NO_INFO_ON_SHELL=FALSE doesn't work
ADMS-46686	Printing string containing percent symbol using USRMES fails

What's New




	with C++ solver
ADMS-42104	Adaptivity argument on integrator command is silently ignored
ADMS-33554	Implementation and documentation do not match for sine control type for open loop control method
ADMS-27864	During quasi-statics, our torque converter model should not set slip=0, torque=0
ADMS-13769	There is no documentation for LOC_CENTERED

Adams Car

Changing the Default Variant Name	26
ADM (Adams Dataset Model) Output Consistent for Submodels	27
Synchronize Subsystem Changes	28
Property File Auditor	29
Parameter Variables Support Ranges & Allowed Values	29
Leafspring Editor Enhancements	30
Integration of Adams Car with Nexus Compute	32
Issues Resolved	32
Known Issues	38


Changing the Default Variant Name

When using assembly and/or subsystem variants, the baseline or nominal model configuration is known as the “default” variant. In past versions, the user had no control over this variant name. Users can now set a descriptive string for the default variant:

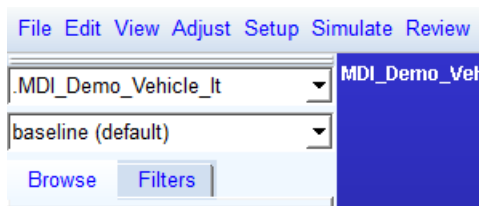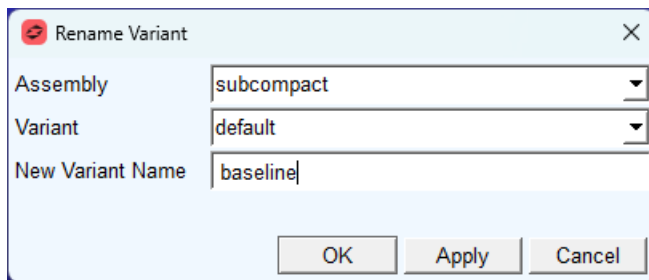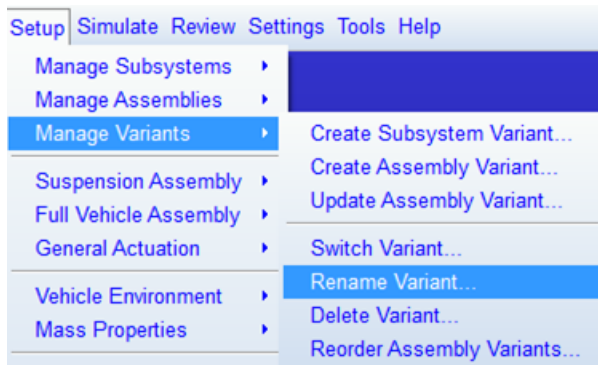


ADM (Adams Dataset Model) Output Consistent for Submodels

Users now have control over the sequence of elements written to the adm file by Adams Car. These new options allow for adm files that are more easily compared in a text editor as the general data blocks can retain similar relative positions. See the Preferences panel for the Assembly Submodel Order options:

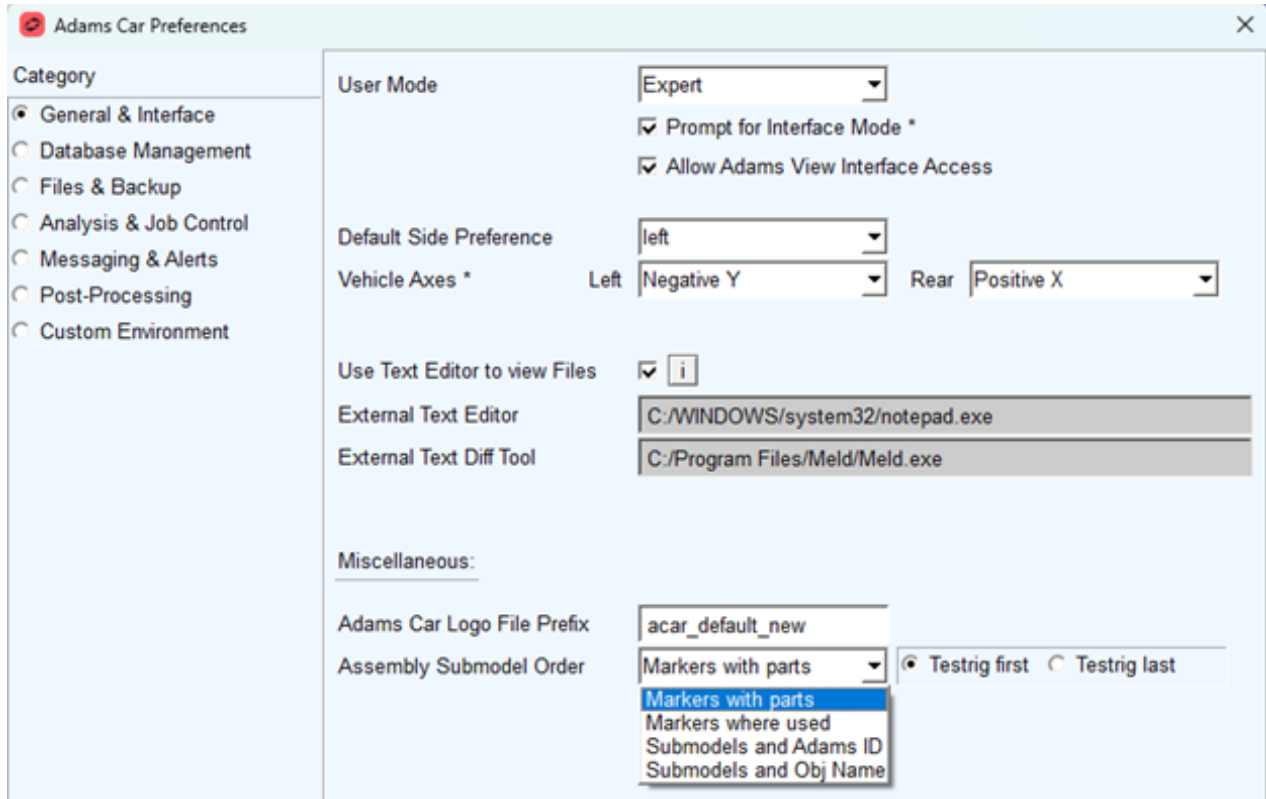

Synchronize Subsystem Changes

When multiple Assemblies are loaded in an Adams Car session, it is now possible to make a change to a Subsystem and have that change be applied to all Subsystems that are currently loaded. When saving a Subsystem, a new option is presented to *Synchronize equivalent Subsystems* if this Subsystem is referenced in multiple loaded Assemblies:

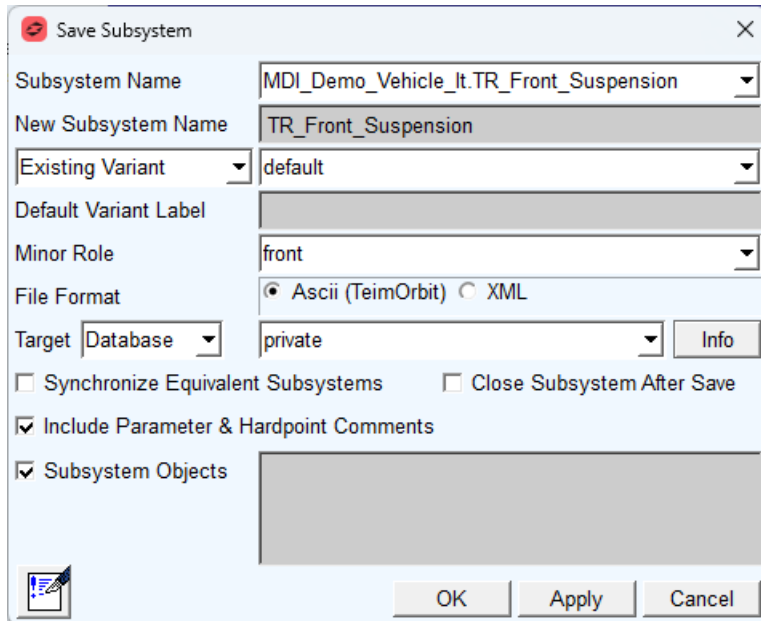

The 'Save Subsystem' dialog box contains the following fields and options:


- Subsystem Name:** MDI_Demo_Vehicle_It.TR_Front_Suspension
- New Subsystem Name:** TR_Front_Suspension
- Existing Variant:** default
- Default Variant Label:** (empty)
- Minor Role:** front
- File Format:** Ascii (TeimOrbit) (selected), XML
- Target:** Database, private
- Info:** (button)
- ☐ Synchronize Equivalent Subsystems
- ☐ Close Subsystem After Save
- ☒ Include Parameter & Hardpoint Comments
- ☒ Subsystem Objects
- OK, Apply, Cancel:** (buttons)

Property File Auditor

Since the introduction of Property File Lists, an Adams Car model may have references to many property files, but not all of them may be necessary. This release introduces a new tool called the Property File Auditor.


This tool queries a given assembly or subsystem, either on disk or loaded in session, and lists all files referenced by that model. For example, an assembly will contain references to several subsystems, and those subsystems will refer to templates, property files, modal neutral files, etc. The Auditor will mark files as not found or not used, and give the user the option to remove unused file references. Use the menu

picks: Setup → Model Diagnostics → Model Auditor...

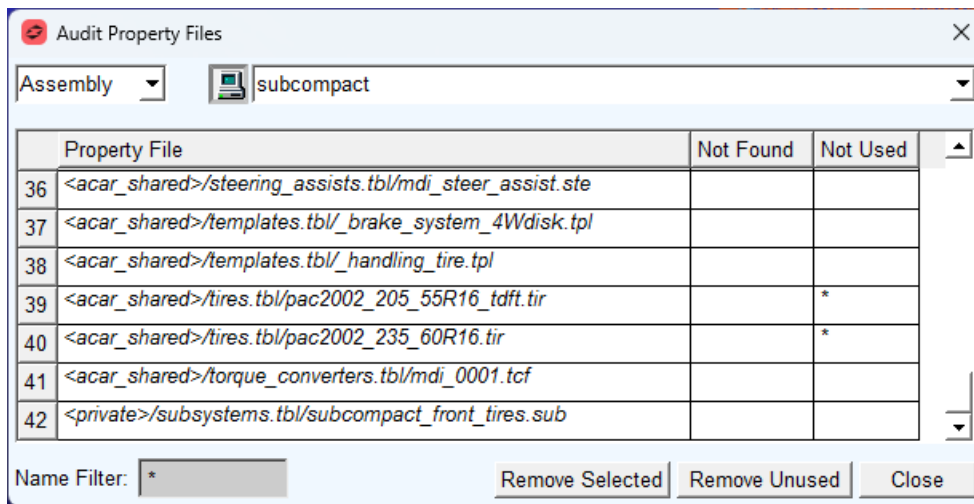

Parameter Variables Support Ranges & Allowed Values

Parameter Variables in Adams Car now support user-defined ranges and allowed values. The following image shows an Absolute Range selection where the user can enter a Minimum & Maximum value:

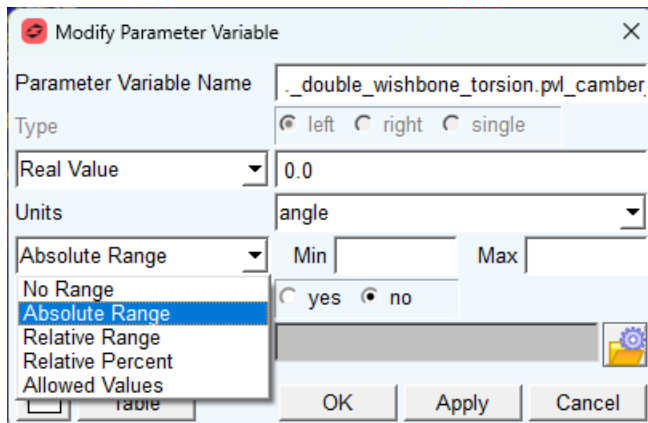


The range will be used in Adams Insight and other, similar, tools when doing variation studies.

What's New

Leafspring Editor Enhancements

Creating detailed leafspring elements in Adams Car is easier in this release of Adams. Specifically it is now possible to create leafsprings with:

- Variable widths (shown in green, below)
- Orthotropic (composite) material properties

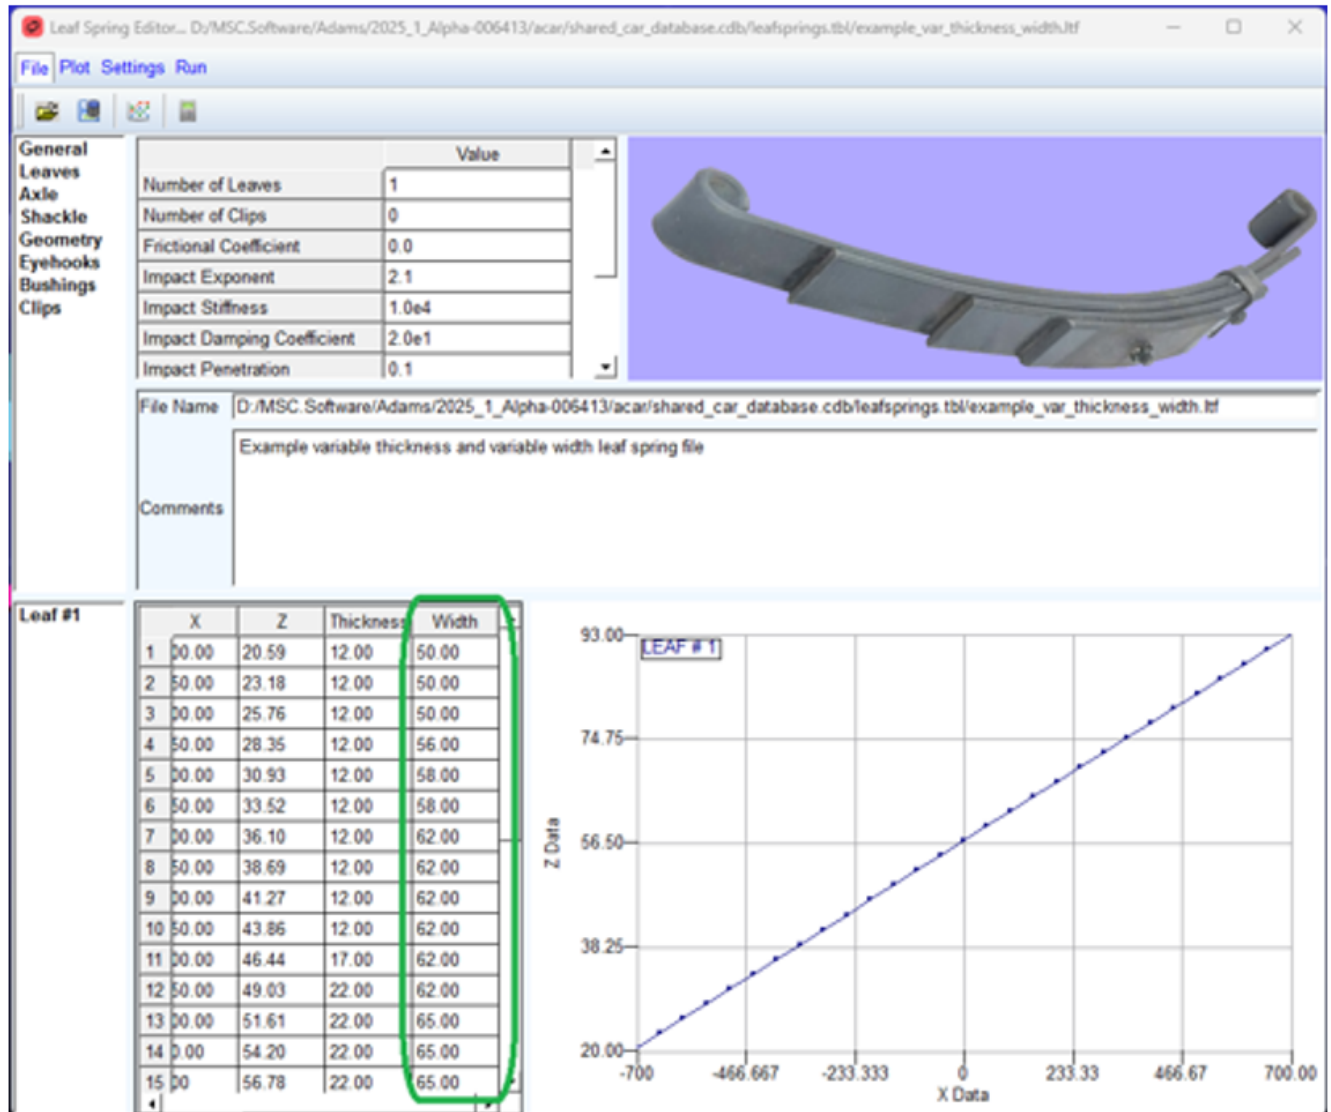

What's New

Leaf Spring Editor... J:/obj/prod/release/acar/shared_car_database.cdb/leafsprings.tbl/e:

File Plot Settings Run

General
Leaves
Axle
Shackle
Geometry
Eyehooks
Bushings
Clips

	Leaf 1
Front Displacement to Contact Bumper	0.0
Front Contact Bumper Height	0.0
Number of Contact Points Rear	NotApplicable
Rear Displacement to Contact Bumper	0.0
Rear Contact Bumper Height	0.0
Number of Elements Front	7
Number of Elements Rear	8
Gap Distance Front	NotApplicable
Gap Distance Center	NotApplicable
Gap Distance Rear	NotApplicable
Seat (Leaf Center) Thickness	22.0
Seat (Leaf Center) Width	65.0
Z-offset Leaf	0.0
E-Modulus	70000
G-Modulus	29000
Density	2.5e-06
Damping Ratio	0.02
ASY	0.8
ASZ	0.8
Fitting Points	

Integration of Adams Car with Nexus Compute

To take advantage of Nexus Compute from Adams Car, users can define the environment variable HMI_ACAR_CLOUD and set it to on (ensure lowercase). This adds a Nexus button to the graphics window, enabling users to connect to Nexus. Shortcuts are also added to the event contextual menu, ACF runner, DOE menu to run A/Car simulations on Nexus Compute.

Issues Resolved

ADMS-122047	Assembly and Solver settings file info was not propagated to the XML formatted results file if the assembly object did not have comments. This has now been corrected.
ADMS-121669	Save as xml type leaf spring file after changing the value of fitting algorithm in editor leads to failure of leaf spring regeneration
ADMS-121540	Curve Manager shows damping instead of loss angle for a GBU
ADMS-121528	When modifying an input communicator interactively, and submitting the dialog box without making any changes, a wrong but benign alert would appear claiming non-unique traits.
ADMS-121476	Error when updating the bumper height more than 45 in leaf spring
ADMS-121420	When saving as a new variant, the variant name is not updated in drop-down menu on Model Browser
ADMS-121388	Parameters for custom spring UDE aren't read from subsystem variant.
ADMS-121373	Speed up opening/editing/closing a .fmd file from the FMU export dialog box by avoiding unnecessary assembly operations.
ADMS-121351	Hardpoint comments not detected with variants and get overridden upon subsystem save
ADMS-121215	The Split Mu Braking full vehicle event does not work for long vehicles (e.g. tractor with semi-trailer).
ADMS-120897	Data of tire fmu array is changed when saving as ASCII file format
ADMS-120803	Solver error after changing diameter of simplified anti-roll bar
ADMS-120314	Custom bumpstop UDEs defined in subsystem variants aren't read properly in 2024.1.1.
ADMS-120152	Markers for the ARB profile are oriented different in the newer versions
ADMS-120150	Error message when .acar.cfg file contains ENVIRONMENT entry with spaces in its value.

What's New

ADMS-120138	Unable to import shell files to ground in Adams Car Standard Interface
ADMS-120043	When a subsystem contains connectors and associated bushings with differing names, opening and saving the model produces a bad subsystem file.
ADMS-119988	Adams crashing when using an old version template
ADMS-119891	Adams Car session crashed when the subsystem contained more than 9 external graphics
ADMS-119882	Saving Testrig Subsystem does not create any backup files
ADMS-119801	Wrong value for parameter type length in .sub for a custom UDE
ADMS-119758	Suspension Alignment not correctly saved in DBox for Suspension Variant in Full Vehicle Assembly
ADMS-119736	Flexbody dynamic limit, characteristic length, and stability factor not handled correctly in subsystem variant
ADMS-120244	Adams Insight does not evaluate metrics selected by users for DOE study
ADMS-119371	Car Preferences not saving/loading correctly when Car plugins are used
ADMS-119130	In Adams Car, when the leaf spring property file modify dialog box is active, pressing F1 does not bring up the online help page
ADMS-119100	An error is issued when saving a generic assembly without a testrig (and using a custom or an empty assembly class string).
ADMS-119065	Importing a plot template to cross plot onto an existing plot does not cross plot when only one analysis is selected
ADMS-119064	Typo in subsystem file, flexbody scaling data
ADMS-118907	Saving with different assembly class results in incorrect .asy file contents.
ADMS-118809	In Adams Car, when exporting an Adams Insight experiemnt. wrong factors and kpi's (objectives) when running a DOE with spmm event set
ADMS-118708	The flexible rim now uses Adams Car cdb aliases to reference mnf files.
ADMS-118707	The leaf spring regeneration does not update the bushing displacement, velocity and force requests
ADMS-118548	Adjustment for number of cross sections for the flex rim does not work and seems to be hardcoded
ADMS-118509	In leaf spring regeneration process the newly generated leaf spring property file(*.lrf) from the working directory gets deleted and user can not reference it in the leaf spring editor

What's New

ADMS-118491	Flex Rim - Automatic exchange of property file is not documented
ADMS-118449	"Add bead mass only" option in Flex Rim pre-processing does not work properly when tire property file contains comment with "\$ MASS_BEAD" string. Modified MNF file is not written out.
ADMS-118400	Ride height adjustment of springs stays active during quasi-static skidpad setup
ADMS-118397	A fully collapsed event browser tree fully expands with every event browser refresh which is triggered with every right- or left-click on event sets or events
ADMS-118396	Event Builder not capturing GUI data changes after analysis execution
ADMS-118379	In Adams Car, when running an event using files_only analysis mode it does not prompt for overwrite. Instead, it overwrites without asking. It happens even if "prompt to overwrite existing events" is checked in Preferences-> Messaging & Alerts
ADMS-118110	When trying to delete a symmetric reduction gear pair in the template builder, only the selected object was deleted, instead of both. This has now been corrected.
ADMS-117906	SVC report rear suspension for hop and tramp natural frequencies are reported as zero for _solid_axle template.
ADMS-117888	Anti-roll bar is broken after modification from beam to simple and back to beam representation
ADMS-117865	Error in subsystem file when opening and saving model containing general parts and flexible parts with the same name.
ADMS-117853	Body fmu reference marker y-location was wrong after assembly repositioning
ADMS-117796	Icons appear incorrect after moving entire assembly.
ADMS-117793	Exporting a Car model as FMU for realtime unnecessarily disassembles and reassembles the model multiple times as it adds each signal subsystem.
ADMS-117758	Adams Car session is crashing when publishing an assembly with a modified wheel template.
ADMS-117579	assembly_info() crashes on Windows if assembly contains a string parameter variable longer than 260 characters
ADMS-117572	In Adams Car DOE simulations is executed twice if the calculator button is pressed in the Adams Insight interface.
ADMS-117302	Orientation and Scale options are not working on Render (slp) and Stereo (.stl) file import in Car
ADMS-117203	Creating a subsystem with a General Parameter having the

What's New

	same name as a Parameter Variable causes a crash.
ADMS-116862	Incorrect reference marker location when calculating inner turn diameter for dual wheels
ADMS-116860	In Adams Car, Event sets are not be deleted from event browser if library is deleted.
ADMS-116733	Adams Car Template Builder Interface General Part Wizard removes selected objects
ADMS-116728	In Adams Car, the files listed under "Edit files..." in the event browser is wrong for an event of type suspension external files.
ADMS-116727	External files with more than one file per axle does not work for truck plugin
ADMS-116711	Incorrect node is used for the connection with flexible body when switch part refers to a mount part.
ADMS-116670	In the Adams Car Python API docs, the information on how to retrieve the event instance is not to be found under the event class.
ADMS-116669	Event browser marks successful simulation as failure when user defined sensor in model halts the simulation.
ADMS-116624	Assembly variant with suspension testrig wheel changes isn't working
ADMS-116623	In Adams Car, after running a copied Event Set a question dialog "overwrite?" pops although events were renamed in some cases
ADMS-116604	parametric expression of ac_airspring install_value not saved correctly when modified
ADMS-116550	Static analysis failed due to model changes when using the same set of Car database
ADMS-116471	In Adams Car, if a suspension event is created for a front and a rear assembly and then the assembly of the second event is closed, an error is returned when right-clicking on the event set.
ADMS-116305	SPMM simulation mentions variables not being thread-safe
ADMS-116189	Mass and inertia values not getting applied to wheel (flexible rim), when changed in the modify wheel dialog box.
	Fields are now disabled and wheel part mass/inertia is set to 0.0 instead of 0.01.
ADMS-115975	Centerline_marker and BSpline is not moved when the subsystem built with anti-roll bar feature of type FE-part is shifted
ADMS-115974	Incorrect component test results in Adams car-ride 2024.1.1 for small amplitudes excitation in general bushing
ADMS-114799	XML saved in Tire Testrig with numbers entered in dialog boxes

What's New

	end up with trailing numerals
ADMS-114742	Suspension analysis simulation failed when executed for 'External files' event with two lcf with different coordinate system modes.
ADMS-114589	Explicit use of "save_subsystems=no" upon assembly close was not sufficient to prevent all interactive prompts when subsystems or the assembly itself had unsaved changes. This has now been corrected.
ADMS-114445	Adams Car - Curve Manager - "Property file comments" dialog box F1 help is not available
ADMS-113972	Some requests are written in adm file even if the "remove requests" option is selected in FMU export.
ADMS-112944	Bushing orientation looks incorrect on Modify Bushing dialog
ADMS-112849	In the road builder dialog box in Adams Car for new grid obstacles, the number of rows added are not corresponding to the input if no rows previously were present.
ADMS-110507	In Adams Car, A pop mentioning the last edited file in the Event Builder is shown when editing a bushing or other xml style property file using visual editor
ADMS-107224	Spline symmetry repair produces bad results in some cases.
ADMS-103057	Component analysis settings applied to the dialog prior to setting up the corresponding testrig parameters will now be retained, if neither assembly, variant or actuator type was changed.
ADMS-99827	Adams Car session crashed when attempting to remove the stabilizer bar subsystem from the assembly via the model tree.
ADMS-118876	In the Event Browser of Adams Car, if an item is selected and the status of any event changes, the selection is removed.
ADMS-92766	When using the shared "File > Import" dialog to import results and request files in Adams Car, tire force graphics are not displayed during animation. This has been addressed by adopting the Car analysis management process in the "File > Import" dialog in the Car standard interface. To revert to the previous "File > Import" for those files, please use the View mode.
ADMS-86548	Repeated and rapid modification of Communicator in Template Builder can lead to unresponsive Communicator dialog box
ADMS-84702	Using actuators in dcf-files does not work if the application and identifier strings are undefined (i.e. "unknown") and the str_role and str_minor_role solver strings in the actuator do not match the corresponding variables of the parent subsystem model.

What's New

ADMS-79871	Several file save operations as part of analysis submission did not honor the backup and alert settings under preferences. This has now been corrected for suspension, vehicle and component analyses types, as well as exports to Insight.
ADMS-63229	The capacity factor data, using the torque converter example file (mdi_0001.tcf), does not allow the torque converter to develop enough torque to keep the engine spinning with the transmission when the vehicle is descending the hill with the throttle off.
ADMS-60991	In Adams Car the logged command when creating an event is divided into several commands (1-20) and sometimes parameters assignments are missing from the log. User wants event macro to get executed only once for an event by condensing all its parameters.

Known Issues

ADMS-119349	Difference in the Load transfer path compared to the property file provided as per design
ADMS-113473	Issue with prefix added to the marker created on the mount part
ADMS-103654	SENSOR "testrig.event_monitor_sensor" triggers at mini maneuver start although abort time and end condition value have not been reached
ADMS-85240	The suspension level compliance event does not use or populate a loadcase spline. Instead, point force actuators are created to apply loads on the wheel (e.g. pfl_inboard_lateral_force_cp). The til_wheel force request has zero lateral and longitudinal force, however vertical (normal) force returns correct force values. The point force actuator's request gives correct force for lateral & longitudinal direction and can be used as a workaround for lateral and longitudinal force output.
ADMS-75038	Under some conditions the flat part of obstacles in road geometry do not shade properly. Try precision shading to improve, but not solve, the issue.
ADMS-72303	Under some conditions, Adams Car is reporting incorrect wheel/spring, wheel/shock ratio and wheel rate for suspension and full vehicle SVC analyses.
ADMS-71370	Defining a large Initial Steer angle (e.g. 5 radians) as defined under Static Set-up in the Event, the static solution should return with a 5 radians initial steer angle applied to the steering wheel but returns with an incorrect steer angle instead.
ADMS-63369	When opening a template containing an Fe_Part, an Fe_Part is created based on the configuration saved in the template file. Whereas, when a Subsystem is opened then it is updated based on subsystem parameters. This updating may cause unnecessary updates of the Fe_Part, slowing the model opening time.
ADMS-61940	The user runs any standard simulation on a full vehicle truck model, the powertrain subsystem stays behind and the rest of the vehicle is moving in forward direction in animation. However, this issue is not observed if the user switches to a binary results file format. The animation works fine if results are stored in results file binary format.
ADMS-50937	The caster output of the dynamic suspension analysis produce slightly different results when compared with static analysis. This could be happening due to slight difference in the compliance matrix computation as constraints are different between two analysis. The results of the geometric axis method

What's New

	are matching, it slightly differs when using instant axis method.
ADMS-42918	The exported request file from Adams Car doesn't have IDs and names in it for few components.
ADMS-40443	Adams Postprocessor on plotting Aligning Torque - Steer and Camber Compliance curves shows incorrect units. Instead of showing $\text{deg-sec}^2/\text{kg-m}^2$, it shows $\text{deg-sec}^2/\text{kg}$.
ADMS-21716	Adams Car bushing geometry disappears during animation when animating a second time after first running the animation successfully and then clicking the reset button

Adams Controls

Issues Resolved	40
Known Issues	40

Issues Resolved

ADMS-115703	Assembly binary file model_name.asy added to unparameterized FMU
ADMS-114640	Can't modify controls_plant object without ERROR messages
ADMS-109147	Error when selecting event set file option when exporting FMU

Known Issues

ADMS-117264	Simulation works in GUI but not from Terminal
-------------	---

Adams Driveline

Known Issues	41
--------------------	----

Known Issues


ADMS-108774	During a bench test analysis in Adams Driveline, we observed incorrect engine RPM behaviour when the brakes are engaged while the vehicle remains at a stand-still.
-------------	---

Adams Durability


Acoustic Workflow for Uncoupled Fluid-Structure Modes in Flex Bodies	42
Issues Resolved	43

Acoustic Workflow for Uncoupled Fluid-Structure Modes in Flex Bodies

The Adams Durability workflow to recover acoustic pressure at Fluid-Structure Interface (FSI) nodes for coupled modes has been enhanced to support uncoupled fluid-structure modes coming from MSC.Nastran. The same **Durability - FSI Recovery...** menu option and resulting **Plot Fluid-Structure Interaction Recovery Points** dialog box is used to recover acoustic pressures for a weakly-coupled solution if the MNF contains uncoupled modes from MSC.Nastran.

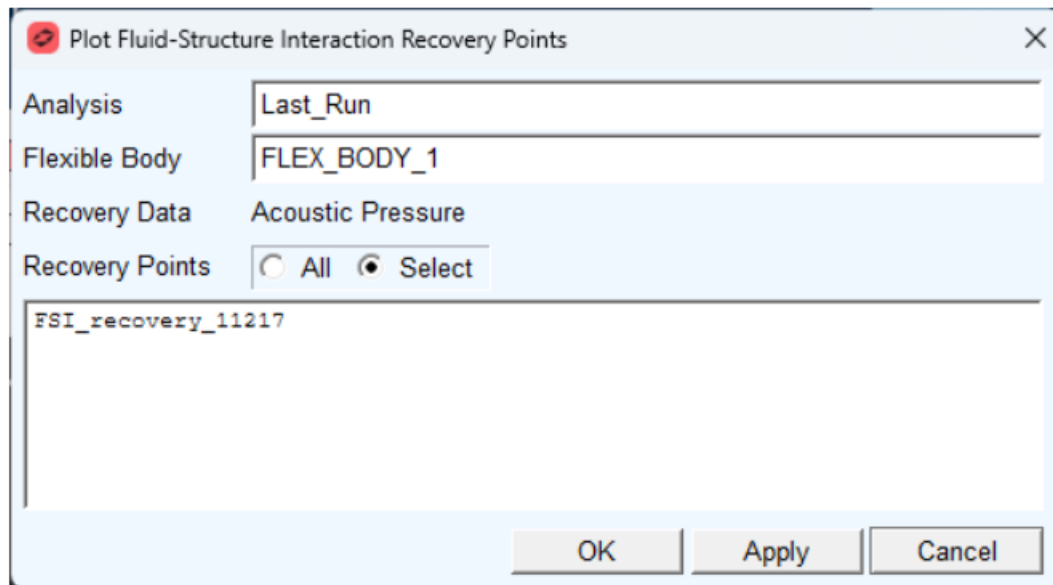

What's New

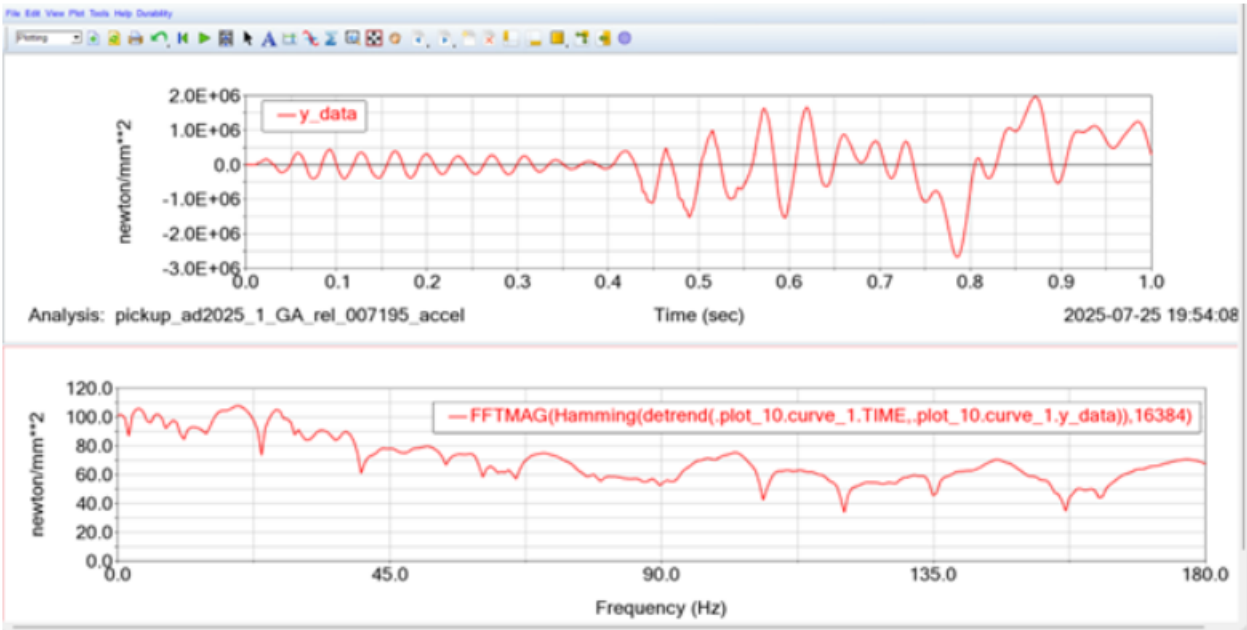

Important Guidelines on Recovering Acoustic Pressures from Uncoupled Modes

1. Currently, recovering acoustic pressures is processed from the output time step results. Thus, the accuracy of the solution will largely depend on the output step size. Acoustic pressure variations occur at high frequencies so a much smaller time step is required than typical output steps defined for Adams Car events. It is recommended that output time steps in the range of $2.5e-4$ be specified to capture high frequency content from these events. Unfortunately, this will result in much larger file sizes than normal.
2. Limitations in Adams PostProcessor's FFT plotting capability make it difficult to transform acoustic time histories to the frequency domain and convert the resulting data to Decibels with a reference pressure. It is possible to work around these limitations, and a New Feature Example is provided in this release to help guide the user on how to do this.

Issues Resolved

ADMS-121519	Bug in Durability Toolkit res2dur Command Prompt execution
-------------	--

Adams Explore

Issues Resolved	44
-----------------------	----

Issues Resolved

ADMS-78870	In Adams Explore, exporting the wheels of the testrig of a front suspension assembly may show a bad error message
------------	---

Adams Flex

Issues Resolved	45
Known Issues	45

Issues Resolved

ADMS-118319	Adams will terminate unexpectedly if execute the analysis with a combination of MNF mass and/or stiffness scaling and rigid body
ADMS-117265	Message window showing matrices with zero values for flexible bodies in Adams Car simulation with FORTRAN solver.
ADMS-33708	Markers on FE-part don't move as expected in the animation because the marker's positions and orientation were calculated incorrectly.

Known Issues

ADMS-117210	Vibration Design Objective - Modal_Energy_Kinetic_Energy produces incorrect value for RXY, RXZ and RYZ terms
ADMS-117119	Selecting a row from the "Modify Flexible Body Connection" does not highlight or select the Node ID. Consequently, this results in the Node ID not being copied along with the row information.
ADMS-103474	Shell Geometry does not look good for some complex shapes when generating FE Parts using XYZ coordinates
ADMS-100735	Model import or open not functioning as expected with FE Part.
ADMS-99003	Corrupted graphics when positioning of FE Part with preload
ADMS-97103	Saving flexible body inertia modeling as "rigid" at the subsystem level can result in error messages when opening the files in Adams version 2022.3 and beyond.
ADMS-87450	Simulations with rotating FE-part results in peaks, numerical singularities.
ADMS-81674	The I and J markers of bushings connecting two FE Parts with hollow cross-sections will get shifted in location if the model is exported as an Adams View command file (.cmd).
ADMS-76384	Under some conditions FE Parts will improperly reference the underlying graphical curve causing errors upon .cmd import and sometimes causing the Adams View session to become unresponsive.

What's New

Adams Insight

Issues Resolved	47
-----------------------	----

Issues Resolved

ADMS-118156	In Adams Car, if an unsaved (i.e. newly created) assembly is used for an Adams Insight run, Adams insight will show an error message about a file not being found.
-------------	--

Adams Machinery

Bearing AT – Misalignment	48
Gear AT Spline Fast Contact Modeling - Redesign	49
Improved Visualization of Imported Bearings	49
Issues Resolved	50
Known Issues	51

Bearing AT – Misalignment

The current Adams release allows you to take into account bearing fitting errors on a shaft and housing, respectively. One can apply misalignment of the inner and outer ring relative to the design (ideal) location and orientation.

This feature will help users determine positional tolerances of a bearing location. It is implemented for all types of Bearing AT radial bearings, i.e. deep groove ball bearing, cylindrical roller bearing, needle roller bearing, tapered roller bearing, and axial cylindrical roller bearing.

Modify Ball Bearing

Bearing Name: .Bearing_Testrig.ball

Def. by: 2 Parts; Ref Marker-> .Bearing_Testrig.ground.Bear_ref

Shaft Part: ☒ Z axis + .Bearing_Testrig.shaft

Block Part: ☐ Z axis - .Bearing_Testrig.ground

Ball Bearing Property File: ball/ball.bpf

Outer Ring connection: Fixed OR

Deviation

Inner Raceway deviation: ☐ Scale: 1.0 Phase: 0.0

Outer Raceway deviation: ☐ Scale: 1.0 Phase: 0.0

Misalignment Inner Ring

Eccentricity: Magnitude: 0.0 Phase: 0.0

Crossing angle: 0.0

Misalignment Outer Ring

Eccentricity: 0.0 Magnitude: 0.0 Phase: 0.0

Crossing angle: 0.0

Transition time: ☒ 1.0E-02

OK Apply Cancel

Gear AT Spline Fast Contact Modeling - Redesign


The Gear AT spline fast contact modeling option has been completely redesigned from the ground up. Instead of focusing on the resulting forces and torques for each misalignment defined in the fast workspace, the new approach captures the contact status directly—specifically, the positions of the contact points and the penetration at those points. This shift allows for significantly improved modeling of contact damping and friction in the fast solver, addressing what was previously one of its major limitations.

Additionally, data management has been fully restructured to overcome memory constraints and eliminate redundant storage of fast files when the same spline stage specifications are used multiple times within the model.

It's important to note that switching from the flex tooth model to the fast solver does not require adjustments to damping and friction parameters as previously to ensure accurate results.

Improved Visualization of Imported Bearings

When importing Romax models into Adams, the visualization of bearing elements has been improved to have accurate dimensions as well as visual indicators (red bands) that indicate the starting point of a revolution.

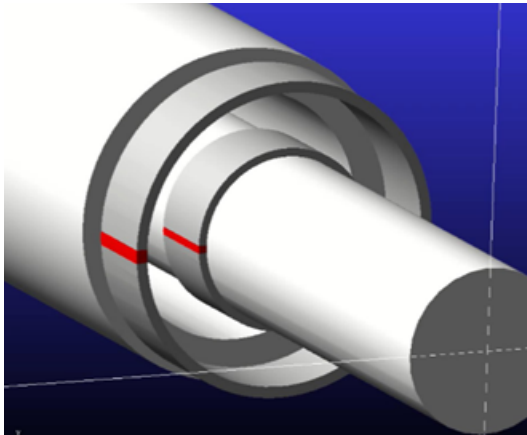

Issues Resolved

ADMS-122021	Minor documentation errors in "Gear AT Preprocess"
ADMS-121927	Bearing AT reference manual pdf file still displayed Adams version (2022) in Adams installation bearing_at directory
ADMS-121557	DGB Bearings FE Processing fails for too small fillet radius
ADMS-121274	The REXS import of Gear AT is hanging with a specific gear data.
ADMS-120860	CGM file creation failed during MKA measure import when number of Lead Measures greater than 1
ADMS-119975	Gear AT Worm Fast Preprocessing fails
ADMS-119792	When converting Romax Model to Adams Model via R2A, the rim diameter transferred to Gear AT is different than Romax.
ADMS-118989	Model with Bearing AT Ball Bearing stop in solver with NTHREADS>1
ADMS-118811	Errors in creating geometries while importing Romax model in Adams
ADMS-118688	Typographical error in the Gear AT documentation
ADMS-117303	Adams Solver has difficulty converging in dynamics when models contain Bearing AT deep groove ball bearing element supporting low bearing loads.
ADMS-117256	Error message appears when modified Simplified Gear Force element in Adams Car
ADMS-117255	Cylindrical Gear Element dialog box error messages
ADMS-117254	Dialog box error messages appears while creating Cylindrical Gear Element in Adams Car
ADMS-116974	Rollers are dislocated when we switch length units for the roller and needle bearing
ADMS-116180	Radius axis on advance results patterns was showing incorrect values for Flank Radius. This issue started with the release 2024.1.1.
ADMS-109548	Bearing AT Mesh preprocessing of a deep groove ball bearing failed when the ball diameter was smaller than 2.0 mm
ADMS-47207	Documentation needs to be improved regarding the analytical formulation of the motor. It should also provide details if torque ripple and stator force is considered in the calculation .

Known Issues

ADMS-100003	Gear AT Leadscrew solver crash if Leadscrew nut is too wide
ADMS-91552	The planetary gear built up in template builder does not keep the information in subsystem level
ADMS-85137	Wrong curvature calculation used in Hertz pressure in Hypoid gears for Gear AT
ADMS-76078	Changing the Adams unit system after creation of a belt system can cause the simulation to fail under some conditions and can cause issues with wizard file (.wzd) import.
ADMS-73283	Tooth shape appears incorrect under some conditions for trapezoidal pulley and belt when using certain DIN ISO standards.
ADMS-72681	Under some conditions for some specific inputs, the trapezoidal belt's pulley exhibits unexpected geometry.
ADMS-71381	In Adams Car, when a part is defined as symmetric then a mirror image of the part is created w.r.t center of the car. The direction of rotation (CW-CCW) is defined w.r.t to axis of revolution. In mirror image, both axis of revolution is opposite in direction to the global axis, i.e. towards the center of the car. Hence, the symmetric copy of the motor should have opposite sense of rotation (CW and CCW). This will make both wheels move forward.
ADMS-54852	Roller chain sprocket can be defined using geometry 'parameters'. Alternatively, it can be defined using 'outline' or 'ISO606' options. In case of 'outline' configuration, the force definition is incorrect, causing unreasonable time to balance the forces and run the simulation
ADMS-53853	The brushless DC motor does not run correctly as per the maximum angular velocity specified
ADMS-47208	Brushless DC motor exceeds the maximum torque specified by the user while designing the motor. This might be due to incorrect analytical formulation of the motor
ADMS-40348	The shape of links of silent chain can be specified in terms of curve coordinates. However, with certain set of inputs the curve is not generated correctly. The problem could be with plotting of the curve
ADMS-40177	3D spatial cable wrapping: for distantly placed pulleys (in the range of tens of meters) and very small misalignments angles, the cable wrapping algorithm fails
ADMS-38792	When a tensioner is placed in wrapping order of pulleys, the belt

What's New


	should be wrapped around the tensioner and simulation should exhibit the tension caused by the tensioner pulley. This does not happen in the case of smooth belt configuration.
ADMS-38594	Machinery elements like gear, pulley, cam, etc. can be constrained with other parts in the model in the form of revolute, fixed joints, etc. However, if these elements are to be constrained with flexible parts like flexible_body or fe_part then the attachment location need to be specially defined (e.g. NODE on a flexible_body). Hence, special marker has to be created preserving the location of joint. This is not properly working with fe_part.
ADMS-32067	Bearing disappears when selecting "reset to start" in animation control dialog.
ADMS-31960	Unable to change direction of motor in runtime with curve based method for motor.
ADMS-30608	If users run the motor with the exact rated condition of voltage and fluency and the external load (load on motor) is within the motor torque limit, then the AC motor is showing abnormal behavior since current is remaining constant but torque is changing as per load applied. Workaround is for the user to specify slightly lower supply voltage and frequency than is rated.
ADMS-22387	A broken translational joint on the tensioner in a belt systems is observed when reading bin file created on 2013.1 in later versions. Use .cmd as workaround

Adams PostProcessor

Change Default Order or Curve Colors & Styles	53
Issues Resolved	54
Known Issues	54

Change Default Order or Curve Colors & Styles

It is now possible to specify the order for curve color, style & symbol when creating new plots in PostProcessor:

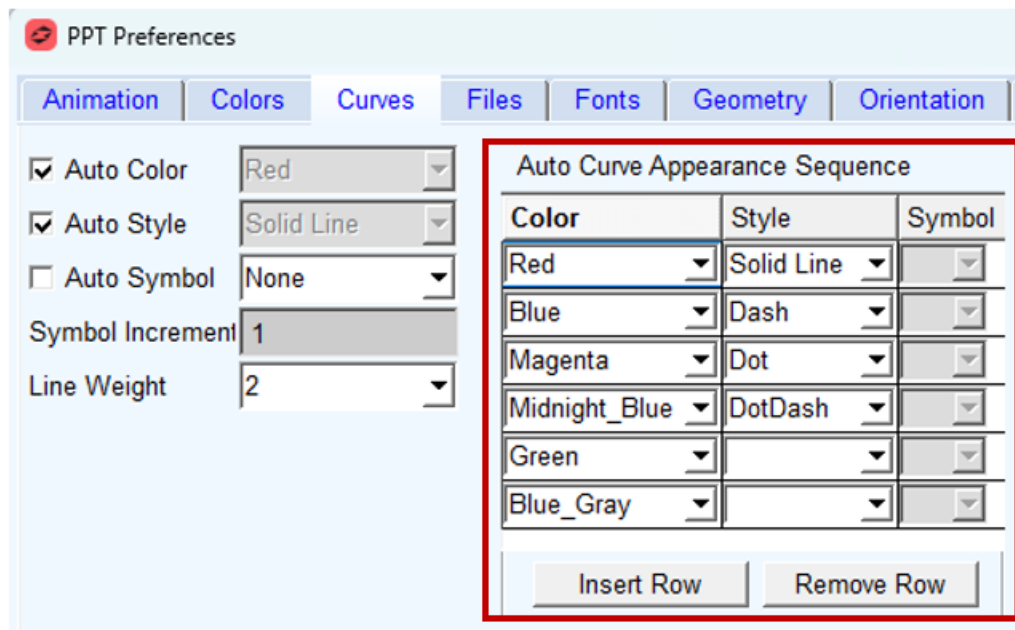

PPT Preferences

Animation | **Colors** | Curves | Files | Fonts | Geometry | Orientation

☒ Auto Color Red

☒ Auto Style Solid Line

☐ Auto Symbol None

Symbol Increment 1

Line Weight 2

Auto Curve Appearance Sequence		
Color	Style	Symbol
Red	Solid Line	
Blue	Dash	
Magenta	Dot	
Midnight_Blue	DotDash	
Green		
Blue_Gray		

Insert Row Remove Row

Issues Resolved

ADMS-120784	Field partially hidden in Post-processor when applying filter after numeric_results import
ADMS-120754	Column headers with "(" seem to cause issues when parsing during numeric data imported into PPT
ADMS-112747	Export to table option does not properly export data when multiple results are being exported
ADMS-111345	Text and numbers in a postprocessor are overlapping at a specific location when viewed in a VMware virtual machine.
ADMS-107844	Calculation and plotting of Bode plots is slow
ADMS-81355	Under some conditions, there is no X expression for the gain in the phase curve of a Bode plot in Adams PostProcessor
ADMS-60600	Adams fails to print top boarder line of postprocessor plot, on printing the postprocessor results in a pdf format.
ADMS-58625	Multiple cross plotting curves in Adams postprocessor can lead to missing plot curves. On clicking the refresh button or plot/page resizing, all curves appear correctly.
ADMS-23790	View-Reset GUI Dimensions only resets the graphics window (plot/animation) size but not the others (treeview and dashboard)

Known Issues

ADMS-118748	Issues with Vibration Analysis Frequency Response plotting
ADMS-118602	Request component names can include spaces without warning/error but then cannot be plotted
ADMS-106662	Clearance study overwritten with successive computations
ADMS-104580	Plotting multiple vibration analysis frequency responses at once
ADMS-102513	Light setting not retained with saved database model.
ADMS-91799	flex body plot deformation scale not matching plot values
ADMS-90601	Request (.req) file exported from Postprocessor has incomplete data
ADMS-88182	Adams PPT performance plotting issue (taking more time for operation) in Adams car 2022.2 compared with 2017.2
ADMS-87455	HTML file output from PostProcessor is not displaying in browser.

What's New

ADMS-81584	Under some conditions, values displayed in force graphic animation do not match the values for the same object as plotted in an XY plot.
ADMS-73207	Under some conditions, model display is misaligned in Adams PostProcessor animation when the model is saved as an Adams View database (.bin) file.
ADMS-72385	Plot page background turning black and sluggishness in plotting the curve (with large data points) is observed while using the Linux machine remotely through remote access tool such as DCV NICE from Windows machine.
ADMS-61808	Adams fails to show units(NO UNITS) for unitless curve on postprocessor plot when plotting unit less entity and unit entity on same axis.
ADMS-51786	In the Adams postprocessor for the FFT-3D plot, there is a mismatch/difference between the color of the contour plot and the legend.
ADMS-5552	No warning that velocity plots of CM in object measures when displacements are disabled in .res are actually Part Xform results

Adams Solver

User-Defined Friction Model in Stiction	56
CONTACT Slip Direction Utility Subroutine	56
HHT Integrator Improvements	56
Issues Resolved	57
Known Issues	58

User-Defined Friction Model in Stiction

Previously, user-defined friction models implemented as a CFFSUB subroutine were only active during the dynamic/sliding portion of the friction regime. The CFFSUB can now be used during the static/stiction regime as well.

The CONTACT statement (reference the C++ Solver Statements documentation for CONTACT) has a new value available for the STICTION argument:

CONTACT/ID, ..., STICTION = on/off/USER

When the USER option is encountered, Adams Solver will call the user-specified CFFSUB **for all values of slip velocity**.

If a user wants to compute friction with a CFFSUB only during the sliding regime (when slip velocity is greater than STICTION_TRANSITION_VELOCITY) and allow Adams Solver to use its built-in logic for the stiction regime, set STICTION = ON and provide a user-written CFFSUB.

CONTACT Slip Direction Utility Subroutine

A new utility subroutine, CONTACT_SLIP_DIRECTION, can be called from a user-written subroutine to determine the direction of slip in a CONTACT pair. User-written CNFSUB and CFFSUB subroutines are called once for each incident of a CONTACT; these subroutines may call CONTACT_SLIP_DIRECTION and receive a unit vector representing the relative slip direction.

HHT Integrator Improvements

The HHT integrator has been enhanced in the area of robustness. Improvements include the following:

- The integrator is forced to restart when a symbolic refactorization is detected,
- The integrator will fail when recurring Euler singularities are encountered.
- The minimum stepsize (HMIN) has been changed from 'machine precision' to be $1e-6 \cdot HMAX$, which matches the GSTIFF I3 integrator.
- An integrator restart will switch the corrector to be 'modified'.

Issues Resolved

ADMS-121059	State variable defined using the contact data cannot be used in differential equation DIFF
ADMS-120327	No Eigen Results found in generated result file (*.res)
ADMS-119902	Jacobian matrix statistics position is incorrect for HHT/Newmark integrator.
ADMS-119900	Debug output for constraints with GSTIFF/SI2 incorrectly has displacement where velocity should appear
ADMS-118435	Adams simulation may crash when a MOTION of type ACCELERATION has been de/activated by a solver command.
ADMS-118116	Session crashing sometimes when simulating model using VARVAL function for the GCON that is not using Pfaffian format
ADMS-117464	Setting MDI_ADAMS_CONTACT_OUT in Advanced Settings has no effect. A workaround is to use the NOCONTACTS attribute on the RESULTS statement.
ADMS-117441	Results are not the same when running a flexible rim model with NCS parameter greater than 50 (CDTire property file) and comparing 1thread to 4threads results.
ADMS-117364	Comments in .acf were not printed when running using background mode
ADMS-113301	Solver reports incorrect contact incident friction forces for Flex Contact
ADMS-112521	Fix the indeterministic behavior when using multithreading for C0 beam.
ADMS-110291	Simulations for some contact models may take a long time to start
ADMS-102576	HHT integrator smoothness score was not reported correctly in debug/eprint.
ADMS-7177	No warning message when simulating models having discrete GSEs in quasi-statics.

Known Issues

ADMS-117020	State Variable and the Request output do not match even if the same definition expression is used
ADMS-109152	Differences in results between analyses run with binary file and the exported cmd file.
ADMS-104772	Missing angle unit conversion when exporting .adm file
ADMS-100365	Inaccurate reporting of CPU Time in the Solver msg file at the end of the simulation on Windows11 22H2 systems. This issue is a regression that was introduced starting in Windows 11 22H2. No workaround or solution exists from Microsoft. Reporting of Elap
ADMS-97136	Cannot run the analysis by double clicking on the acf file.
ADMS-82810	The disabled element is recognized by the solver as enabled for the Contacts that refer to poly-lines
ADMS-71387	Slightly different simulation results (less than 1% difference in some outputs) may result when comparing simulation results run inside a View interactive session with results run in a View batch session.
ADMS-54854	The result file storage differs based on the "type" of request definition. This is confusing when plotting quantities from a results file.
ADMS-53889	Structure of the Analysis object is different with internal & external solver.
ADMS-16221	OUTPUT variables referencing deactivated BUSHING forces cause analysis failure. Workaround is to comment out or otherwise deactivate the OUTPUT variables.

Adams Tire

FLEXRIM Data	59
Issues Resolved	59
Known Issues	60

FLEXRIM Data

Flexible body parameters for the tire rim can now be stored in the CDTire property file. Variables such as damping ratio, mass invariants, generalized damping and selected modes are now retained in a data block named FLEXRIM. This means that flexible rim body parameters are saved with the model and the user does not have to modify the flexible body in every new session of Adams Car.

```

44 [CDTIRE_PARAMETERS]
45 CDT_MODEL_TYPE      = 50
46 CDT_INFLATION_PRESSURE = 0.23          $ [N/mm^2]
47 $-----
48 [FLEXRIM]
49 MODAL_NEUTRAL_FILE   = 'test_30_sol103_0_5doten04.nnf'
50 DAMPING_RATIO        = 'STEP5(FXFREQ, 1000, 0.01, 1600, 1.0)'
51 MASS_INVARIANTS      = 'full_coupling'
52 GENERALIZED_DAMPING  = 'full'
53 -----end

```

Issues Resolved

ADMS-121834	ftire_sd_eq_205_55R16.tir in acar_shared cdb is not a FTire property file.
ADMS-120551	Changing units in Adams View (e.g. first simulate with units in MMKS then change to units to MKS and simulate again) the tire model does not run properly.
ADMS-118775	Reference CRG file from a reposition file with Car CDB or mdids is not working
ADMS-116863	A threading issue in 2d stochastic road has been resolved. Also, the 2d stochastic uneven road (part of criAdams library) was improved for ISO 8608 and made more accurate.
ADMS-112621	Stress and deformation requests were added to better illustrate the (unchanged) tire-soil penetration behavior for multi-pass on soft soil tire road interactions.
ADMS-103385	When plotting my tire characteristics in the Tire Data Fitting Tool, the plot shows some weird line in between separate curves.
ADMS-76567	When running a vehicle with the soft soil tire model having soil properties with a sinkage exponent close to one, the tire model calculation takes a long time and looks instable.

What's New

Known Issues

ADMS-107729	FTire - remote option won't work when done through UI, in batch mode this works but have to configure passwordless ssh to work seamlessly.
-------------	--

Adams Vibration

Issues Resolved	61
Known Issues	61

Issues Resolved

ADMS-121466	The plot of Adams Vibration Input Channel's Plot Actuator is incorrect
ADMS-119965	Vibration Multi Run Script is not showing User Specified Frequencies in the script created
ADMS-105504	Adams Car with Vibration - Input Channel Part not allowing flex selection

Known Issues

ADMS-116590	Vibration actuator units is wrong, when template is saved on ascii format
-------------	---

Adams View

CAD Interoperability Version Support	62
Updated Graphics Toolkit	63
User-Specified Segments for Extrusion & Revolution Geometries	63
Note: CAD-resident Density Values	63
Issues Resolved	64
Known Issues	66

CAD Interoperability Version Support

The following table lists the versions of the supported CAD formats that can be imported and exported in Adams 2025.1.


Format	Import Version	Export Version
IGES (.igs)	5.2 & 5.3	5.3
STEP (.stp)	203/214/242 P	214
ACIS (.sat)	All → R27	Not Supported
CATIA V4 (.model, .dlv, .exp, session)	All 4.XX	Not Supported
CATIA V5 (.CATPart, .CATProduct)	R10 → R33	Not Supported
CATIA V6 (.3dxml)	2014X → 2022X	Not Supported
Pro/Engineer part files (.prt, .asm)	13 → Creo 9	Not Supported
Inventor (.ipt, .iam)	All → 2023	Not Supported
Solidworks (.sldprt, .sldasm)	99 → 2023	Not Supported
Unigraphics (.prt)	11.1 → NX CR 1953, 1957 and 1969, 2212	Not Supported
JT : JtOpen (.jt)	7.0 → 10.5	Not Supported

Updated Graphics Toolkit

Users may note slight differences in the graphical user interface of Adams View and related products. There has been a major upgrade in the underlying user interface framework; future versions of Adams will benefit from this in terms of looks and usability.

User-Specified Segments for Extrusion & Revolution Geometries

Extrusion & Revolution geometries can now specify the number of segments used to render curves, resulting in coarser or smoother curves displayed:

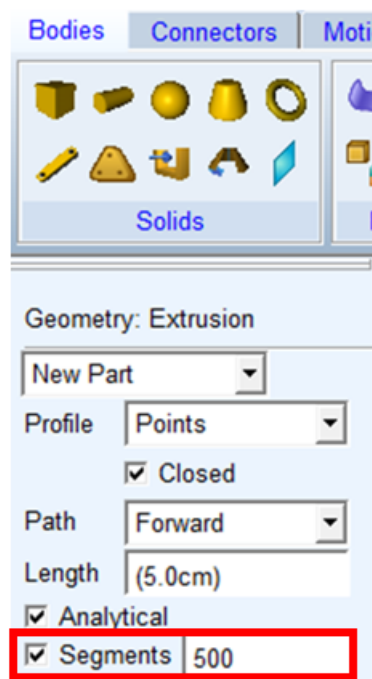

Note: CAD-resident Density Values

Those using CAD-resident density values upon geometry import prior to this release be advised: if subsequent changes to part densities are made and the model is exported via Adams View command file (.cmd), then the part creation commands in the .cmd file will contain the proper densities from the session at time of .cmd export but the "file geometry read" command for the parasolid which follows will overwrite those densities, reverting back to all the values in the CAD file.

This issue is resolved in this release (the cmd-writer now uses the "ignore_density=yes" argument). However, importing .cmd files you may have from previous releases would still suffer this problem. One must either manually insert this argument in their existing .cmd files or re-do any density changes in Adams View and re-export a .cmd file for the model.

Issues Resolved

ADMS-121392	Text I copy and paste into input fields in dialog boxes or the command prompt doesn't display correctly as plain text.
ADMS-121168	Part's mass failed update as per the changes in its density which is parameterized by design variable.
ADMS-120585	Performance degradation seen when loaded the customer cmd model into Adams View
ADMS-120547	Part Mass definition by "Geometry and Density" not functioning properly when parametrized density by design variable.
ADMS-120113	Failed to retain changed density value of part when export the CMD model and read in new Adams view session.
ADMS-119734	Error occurs when copying Tire object in the Model Browser and using External solver
ADMS-119635	Failed to modify part's mass property which is parametrized using python command.
ADMS-119173	Better error message needed for when variable type is tried to be changed
ADMS-118570	i/j_flip_normal is working in Python command createCurveToCurve
ADMS-118299	Executing python script in batch mode results in error when inputting a path to py file
ADMS-117884	Creation of Point2Point Measure using Adams Python Interface results in errors.
ADMS-117852	After importing the python , a plot is created but Adams crashes
ADMS-117213	Adams freezes when the spline reference exceeds the range
ADMS-116959	Cannot use the Tkinter module on linux
ADMS-116948	Showing the pyplots window in interactive mode while using with Adams
ADMS-116341	Nothing happens when the user swaps a rigid body for a flexible body, returns back to the rigid body state, then tries to get the flexible representation by right-clicking on the Model Browser, and selecting "Make Flexible (use previous)". The rigid body remains active while the flexible body is still inactive.
ADMS-115700	There should not be issue with number of characters in line in cmd file
ADMS-114259	RPC3 file import does not support to read file if the file path contains double-byte characters

What's New

ADMS-113603	Wrong mass moment of inertia calculated for discrete flexible link, using "properties" cross section input
ADMS-113335	When import the cad part with default "Ignore CAD Density" option and then edit the part density and export the CMD and read the exported CMD, part shows the before edit density value.
ADMS-113280	Adams Car template builder doesn't allow to close the template after modifying the flexible body connections
ADMS-112641	The read_binary_file function in AdamsPy accepts only the file_name as input and does not support other parameters which are available in the command language.
ADMS-110505	Command Server not working on Linux
ADMS-106678	DOE of model with Parasolid geometry may stop without error when the number of trial runs exceeds 1000.
ADMS-106260	Certain 'ANGLES' are used to get Direction Cosine Matrix generated by TMAT. When these Direction coises are used as input for ANGLES() function, it does not return same Euler angles which were used as input
ADMS-84026	Reset the MAXIT to default value 10 for dynamics if the value is set improperly to a large number by the user.
ADMS-76819	Adams crashing when opening the .bin file saved with 2019 version

Known Issues

ADMS-122121	Missing variable name in example in python startup documentation
ADMS-121981	Cannot createOutline between markers of different parts using Python
ADMS-121733	Inertia values found interchanged when compare the aggregate Mass info of the model without any Relative to marker and the part info.
ADMS-121625	Differing and partially incorrect information in the documentation for "Read Macro"
ADMS-121061	If the interface node id in a flexbody of a subsystem is not found, it matches to the closest 'any' node
ADMS-114260	Adams python interpreter waits for more input and cannot be stopped
ADMS-113172	Parametrization defined with rigid body do not retain when it is converted to flexible body by ViewFlex.
ADMS-110745	Part Extrusion loses Parametrization if the Part's global location is changed
ADMS-109148	When exporting obj files Adams overwrites geometries that have the same part name in different subsystems
ADMS-108550	When modifying the translational point motion to rotational point motion, or vice-versa, errors occur for initial conditions
ADMS-106688	when spline_read subroutine is used with external solver, simulation fails. AMD needs to allow BLOCK and ROUTINE arguments to coexist in Solver SPLINE statement.
ADMS-106129	Running Four-Post Vibration analysis twice results in a "conflicting IDs" error.
ADMS-104464	FE_PART section based on zy_points generic does not seem to be supported
ADMS-103576	Motion measure characteristic changes to torque unexpectedly.
ADMS-103051	Attached Creo 7 geometry file shows holes on surfaces.
ADMS-99994	Incorrect motion information in the log file when run analysis using *.acf file having the DEACTIVATE/MOTION command after SAVE/RELOAD.
ADMS-98341	Failure when loading python module matlab.engine in Adams View
ADMS-96894	Cable wrapping for system with many pulleys can fail

What's New

ADMS-95010	Model browser does not update after creating new state variable. User needs to close and reopen the Elements folder to see the update.
ADMS-94886	If session unit is set to 'mm' and design variable referenced for X values of spline, spline gets created with X values multiplied by 1000 Workaround: do not use design variable in this case.
ADMS-92342	A design variable with the AGGREGATE_MASS() function in it, along with referenced parts having user-defined masses does not properly update when the CM location of one of the parts is altered.
ADMS-90610	Adams View memory usage growing while creating many files in batch
ADMS-84401	For a specific binary file, when the scripted simulation is ran with "write Files only" option, the Parasolid file is not getting generated. External simulations then fail as the Parasolid file is not found.
ADMS-75791	When a State Variable is renamed or altered, the Model Browser scrolls back to the top.
ADMS-75145	SHL file generated by Adams with MMKS units does not import properly into an FE Part as an external geometry
ADMS-74664	There could be limitation in loading result files that are larger than 60GB, with contact incidences, in Adams View
ADMS-64810	The new object creation like state variable does not update in Model Tree in Adams Car automatically, manually refresh is required
ADMS-60930	The time it takes for Adams View to delete results from the Model Browser can be very long when the result size is large
ADMS-54340	Runtime clearance study results in incorrect clearance values for revolution geometry
ADMS-54234	The "marker modify" command does not work in the correct reference frame if the values supplied for 'location' are enclosed in parentheses
ADMS-53880	When opening an ASCII tire template with external CAD geometry, an error message is issued and the geometry is imported incorrectly. Users may workaround this issue in two ways: 1. Specify the CAD geometry directly in the tire property file. See mdids://acar_concept/tires.tbl/pac2002_255_40R19.tir for an example.

What's New

	2. Import the CAD geometry to the subsystem rather than the template.
ADMS-53516	In Adams Car if a joint Force is created and is modified with Display Attribute (e.g color/style/size of the line), the modifications in the display attribute will not retain during the animation, or after the animation is played.
ADMS-51334	Adams Online Help cannot be shown for some auto-generated Command Navigator dialog boxes
ADMS-50894	Exporting a .shl geometry file and then importing back into Adams can result in geometry differences for finely tuned rendering parameters on export/import.
ADMS-50747	Variable reference function "user_string" does not handle unit conversion properly in case of "mmks"
ADMS-48293	"Remove Parametric Expressions" option not working properly, incorrectly deletes parent object. This occurs when a force element, for example, references a state VARIABLE using a VARVAL() function; deleting the VARIABLE will incorrectly also delete the referencing object (the force element, in this example) even though "Remove Parametric Expressions" is chosen.
ADMS-47673	Table editor->Motions Table Editor Filter doesn't show "General Motion" option .
ADMS-46136	Adams fails to to translate hollow geometry(Box) having chamfer on its edge.
ADMS-45471	Some entity classes in adamspy do not support all properties for that entity
ADMS-45350	Incorrect results observed for flex analysis, when saving and opening the bin file multiple times.
ADMS-45099	For some of the imported IGES geometries of curves of degree 5, the shape may not match with the shape of source of the curve.
ADMS-44883	On importing bigger external pararsolid geometries(non-Adams) assembly models, Adams may fail to import some geometries.
ADMS-43081	Function expression is not retained in the BIN file.
ADMS-42738	If a marker (triad) is created on a curve to mark a specific location on curve, it is expected to retain the position while the curve-part is moving. However, the marker does not retain its position on a curve.
ADMS-42441	The ORI_GLOBAL() function in Adams does not work correctly for angles beyond 90 degrees
ADMS-41432	The calculated volume of a cylinder in Adams View is affected in an unexpected way while changing the cylinder side count (especially around the value of 20)

What's New

ADMS-40912	Adams datatable widget's performance is affected by number of rows and columns. User will experience slow datatable performance, If dealing with the huge (quite large number of rows and columns) tabular data in data table.
ADMS-40354	Range Measures cannot be referenced by other Measures using runtime expressions. Range measures only update at the end of a simulation.
ADMS-40080	Problem choosing curves when Legend and curve overlap on a plot
ADMS-39939	Parasolid file path not retained in the template file after saving the template as ASCII
ADMS-39459	Contact graphics is not displayed when animation is run after importing results of external solver
ADMS-39355	If a User Defined Element (UDE) definition lies in some library. User can create an instance from this definition in a model. However, if this model is saved as binary or command file then only the contents of the model are written in the file (and not th
ADMS-31937	When copying a cam system its follower motion will not be copied. Both cam systems will reference the same follower motion object.
ADMS-23976	On machines with multiple graphics hardware options, use of the "CPU integrated" graphics hardware (for example, "Intel HD Graphics") may cause problems with display of flexible bodies and FE parts in wireframe mode. The workaround is to use the other graphics hardware option (for example, the "NVIDIA Processor").
ADMS-22004	Zero volume of cylinders with 1 or 2 segments, with angle extension less than 360 degrees
ADMS-21941	Torsional springs missing when merge two models (each containing one) via "Model assemble" command. Workaround is to use a rotational sforce instead.
ADMS-20196	Force Display ON/OFF option is not working for the FE Load
ADMS-19599	Menu operations from Adams View for view manipulation (front, fit, zoom, etc) act upon the PostProcessor window if it is also open
ADMS-16288	Some options on the View Management Orient command not working correctly. Workaround is to rotate the View via the tools available in the graphics window and toolbar.
ADMS-12740	Error in Mass property calculated for copied part with the original part being a parasolid for some (not all) externally imported parasolid files

What's New

ADMS-5419	Want a documented search-order for locations when loading plugins
-----------	---

Adams 2024.2 Release Notes

Adams Car	73
Testrig Subsystems	73
Event Pre- and Post-Actions	74
Variant Improvements	74
Reordering Variants	75
Leafspring Support for True Batch Mode	75
Adams Controls	75
FMU Encryption for Flex Bodies	75
Adams Co-simulation Interface	76
Supported Versions of Software for Marc Co-simulation	76
Adams Flex	77
Global and Modal Stiffness and Mass Scaling of Flexible Bodies	77
MNF Generation Default Yields Faster Animations	77
Adams Machinery	78
Gear AT Spline Joint – Microgeometry & Imported Measurements	78
Romax to Adams Support for Cutout Gear Blanks	79
Romax Non-Linear Stiffness Connection Now Maps to General Bushing	80
Mechatronics	80
New Step and Filter Options for Signals	80
Adams PostProcessor	81
Print to PDF	81
Adams RealTime	81
Adams Solver	82
New RAMP Function	82
Arguments	82
Adams View	82


What's New

CAD Interoperability Version Support	82
Aggregate Mass Improvements	83
Function Builder – Bracket Highlights	84
Function Builder – Built-in Search Field	84

Adams Car


Testrig Subsystems

Changes to testrig hardpoints and parameters can now be saved to subsystem files. These subsystems can have variants, allowing for greater flexibility when working with testrigs:

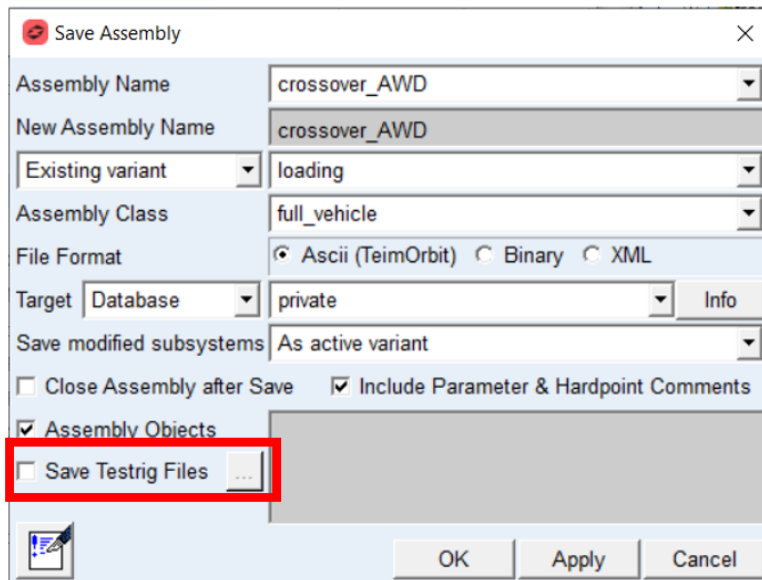

Event Pre- and Post-Actions


Simulation Events in Adams Car now allow for pre- and post-actions. These are used to execute custom logic before or after the simulation Event. Scripting commands can be written in either cmd language or Python and may be stored 'inline' with the model or as file references. Access this functionality by right-clicking an Event in the Event Browser, as shown:

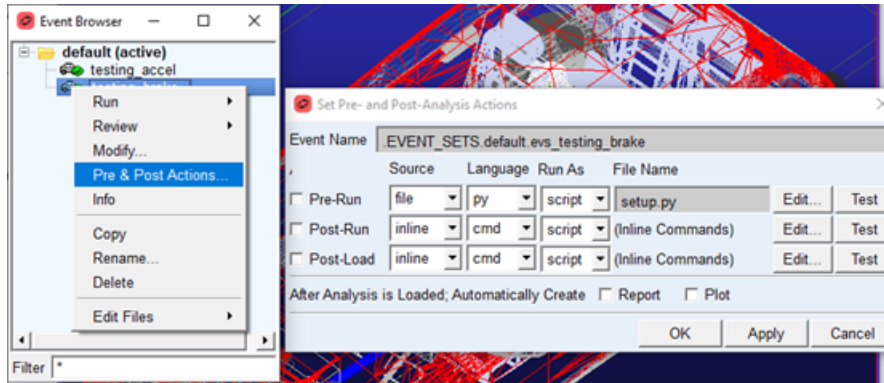

This new dialog box makes it easy to associate custom actions with specific events and to test these commands before applying.

Variant Improvements


Identifying the active Assembly and Subsystem variants is simpler now, as the variant name is displayed in both the display window and the Model Browser, as shown:

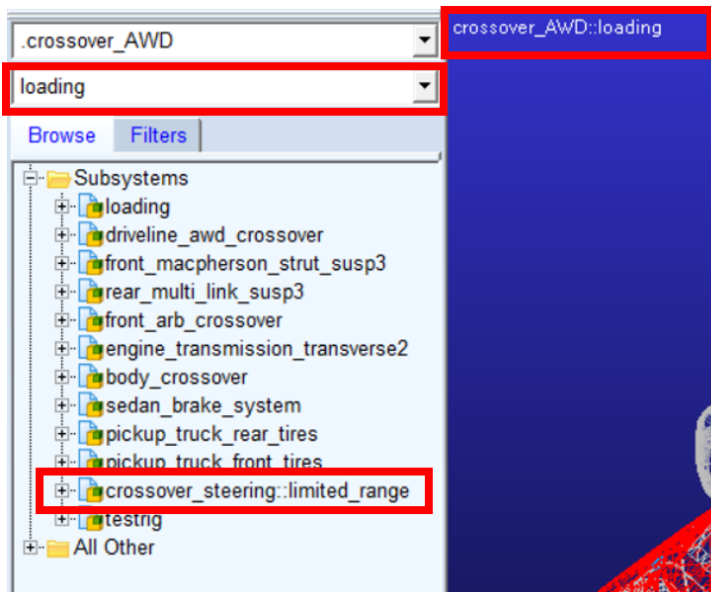

What's New

Reordering Variants

The order in which variants are presented can now be controlled using the Reorder Assembly Variants menu:

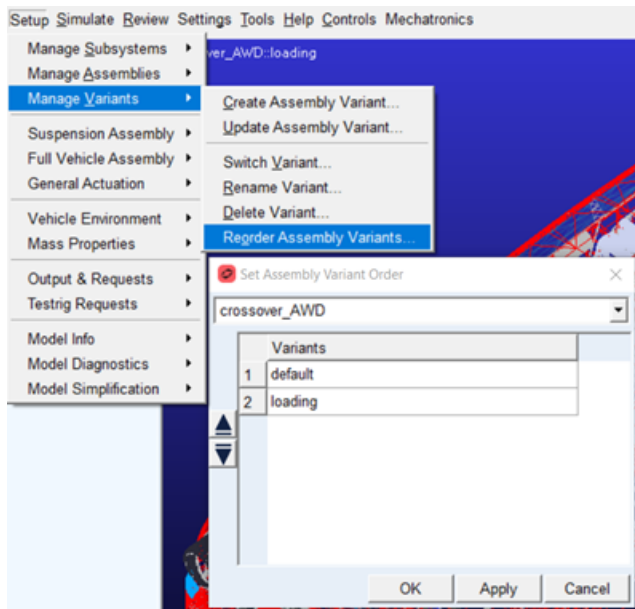

Leafspring Support for True Batch Mode

Previously, running Adams Car in batch mode without a valid graphical display (ex: a Linux compute node lacking graphics display libraries) would cause errors when trying to change/regenerate some models containing leafsprings. It is now possible to regenerate leafsprings in a vehicle model in batch mode whether a valid graphical display environment exists or not.

Adams Controls

FMU Encryption for Flex Bodies

Functional Mockup Units (FMUs) exported from Adams Controls now allow for encryption of flexible bodies. In past versions the Adams model and associated files could be encrypted, but the MNF flexible bodies could not be encrypted. In this version of Adams, the .mtx files representing the flexible body information will be encrypted within the FMU. When encryption is active, the MNF file is not included in the FMU file as the encrypted mtx files contain the needed information.

What's New

Adams Co-simulation Interface

Supported Versions of Software for Marc Co-simulation

An updated table of the Adams co-simulation Interface supported versions of Marc is shown below:

Marc version	ACSI supported version
Marc 2013.0	ACSI 2014.0, 2014.0.1
Marc 2013.1	ACSI 2014.0, 2014.0.1
Marc 2014.0	No support for ACSI
Marc 2014.1	No support for ACSI
Marc 2014.2*	ACSI 2015-2015.1, ACSI 2016* - 2019.0*
Marc 2015*	ACSI 2015-2015.1, ACSI 2016* - 2019.0*
Marc 2016 and later	ACSI 2015 and later

* The ACSI 2016 and later versions require a workaround for the case of Adams models co-simulating with Marc versions 2014.2 and 2015. Marc 2016 does not require this workaround. For details see the "Special

What's New


requirements to run Marc” section of the Adams product documentation (Online Help) under “Adams Co-simulation Interface.”

Adams Flex

Global and Modal Stiffness and Mass Scaling of Flexible Bodies

Adams flexible bodies now permit users to alter their natural frequencies via simple scaling factors. In previous releases one would have to have re-generated the modal neutral file (MNF) with different conditions. A scaling factor applied to all modes’ stiffness and a scaling factor applied to all modes’ mass are now available. Also, scaling of individual modes’ stiffnesses is now supported.

These factors are set in fields in the Modal ICs table accessible for the Flexible Body Modify dialog where they can be parameterized with design variables in addition to simply entering values. Refreshing the table will display the altered natural frequencies. Altered natural frequencies are also displayed in the Adams Solver message file (.msg). Adams View command language and Adams Python scripting language support these new features too. Adams Car users can access this functionality in the same ways and also can set these factors in Adams Car subsystem files.

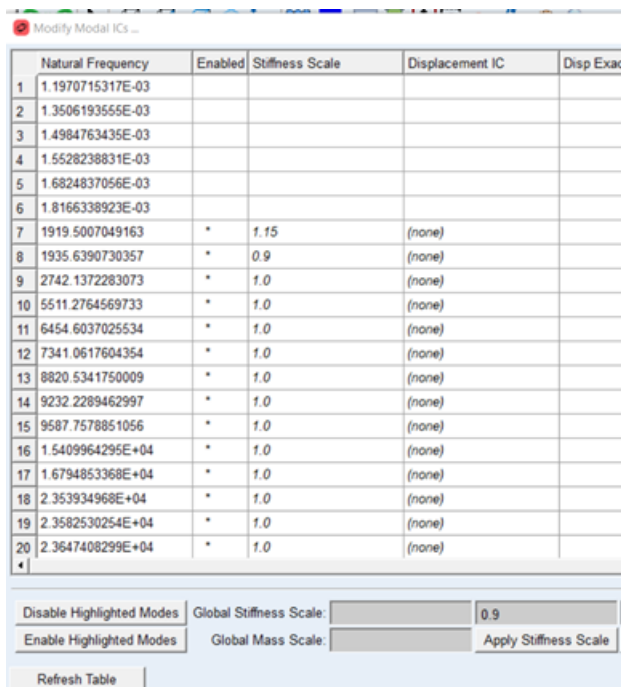

	Natural Frequency	Enabled	Stiffness Scale	Displacement IC	Disp Exact
1	1.1970715317E-03				
2	1.3506193555E-03				
3	1.4984763435E-03				
4	1.5528238831E-03				
5	1.6824837056E-03				
6	1.8166338923E-03				
7	1919.5007049163	*	1.15	(none)	
8	1935.6390730357	*	0.9	(none)	
9	2742.1372283073	*	1.0	(none)	
10	5511.2764569733	*	1.0	(none)	
11	6454.6037025534	*	1.0	(none)	
12	7341.0617604354	*	1.0	(none)	
13	8820.5341750009	*	1.0	(none)	
14	9232.2289462997	*	1.0	(none)	
15	9587.7578851056	*	1.0	(none)	
16	1.5409964295E+04	*	1.0	(none)	
17	1.6794853368E+04	*	1.0	(none)	
18	2.353934968E+04	*	1.0	(none)	
19	2.3582530254E+04	*	1.0	(none)	
20	2.3647408299E+04	*	1.0	(none)	

Disable Highlighted Modes Global Stiffness Scale: 0.9

Enable Highlighted Modes Global Mass Scale: Apply Stiffness Scale


Refresh Table

MNF Generation Default Yields Faster Animations

Animations containing flexible bodies load faster when the MNF files have been produced using the ‘MNF Optimizer’ found in the Adams Flex toolkit and the ‘Platform Specific’ Formatting option. In past versions of Adams, the Flex toolkit would use ‘Standard Portable’ as the default for Formatting. This option has been removed from the Flex toolkit dialog box (it is still available on the command line of the Flex toolkit, if needed) and MNF files are now optimized using the setting ‘Platform Specific’, which loads faster in animations and works on all platforms.

What's New

MNF files generated by MSC Nastran, starting in 2024.2 Beta, will use, by default, this same “platform specific” setting.

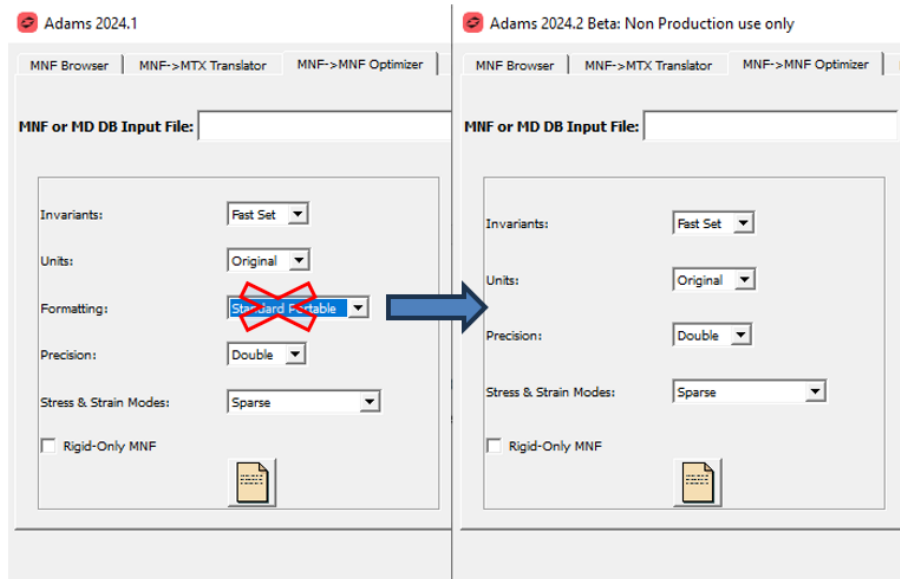


Adams Machinery

Gear AT Spline Joint – Microgeometry & Imported Measurements


For spline joints in Gear AT it is now possible to import measured profiles and microgeometry. This allows for very high-fidelity models of spline joints:



What's New

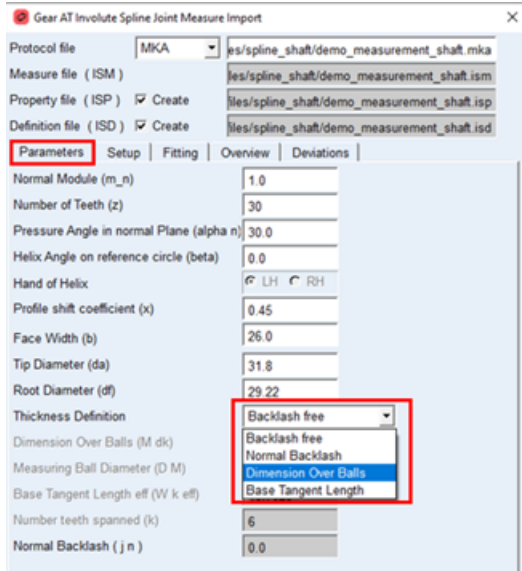


Visualization tools provide rich previews:

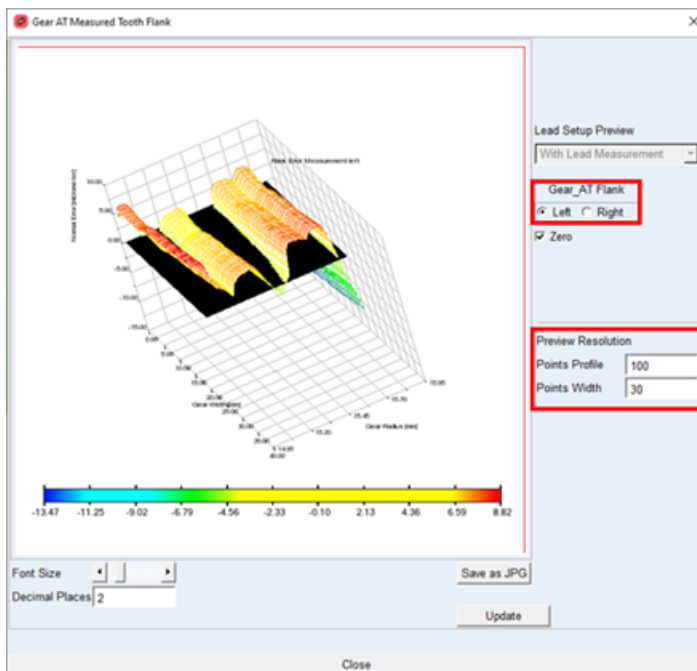

Romax to Adams Support for Cutout Gear Blanks

In previous releases, cylindrical gears (spur and helical) modeled via Adams Machinery only supported a pure cylindrical disk geometry for the gear blank. With this release of Adams, such gears' blanks can be modeled with so-called bosses and cutouts. As such, the import of Romax models with such geometry features in the blanks is now better supported with these features being represented in the resulting Adams model.

What's New

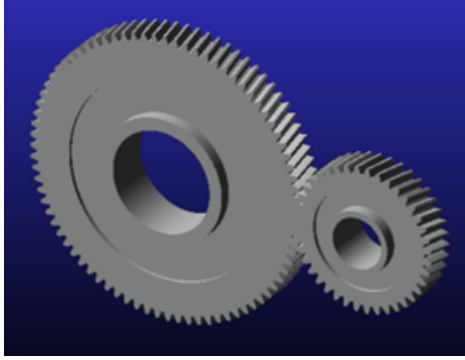

Romax Non-Linear Stiffness Connection Now Maps to General Bushing

In previous releases, the Romax six degree-of-freedom non-linear stiffness component was mapped to an Adams FIELD object upon import of a Romax model into Adams View. With this release of Adams, it is now mapped to the general bushing object. The general bushing is easier to work with and more closely aligns with the usage intent of the Romax non-linear stiffness component compared to the FIELD object.


Mechatronics

New Step and Filter Options for Signals

Mechatronics Signals (Actuators, Transducers, Inputs & Outputs) have two new options:


Step - to turn the signal on/off at any point in time,

Filter - to apply a simple Butterworth filter (ie: a lowpass filter) to a signal.

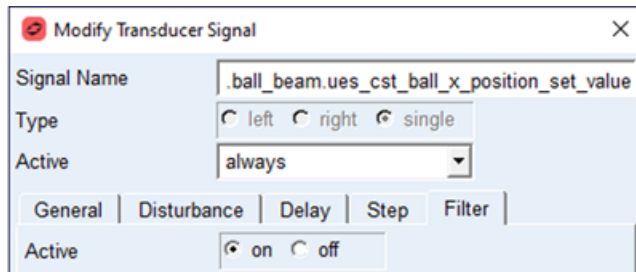

The Filter option lets the user create a low pass, high pass, band pass or band stop filter on the Mechatronics Signal. The Check Format and Display Plot button lets the user check the behavior of the filter in the frequency domain:


What's New

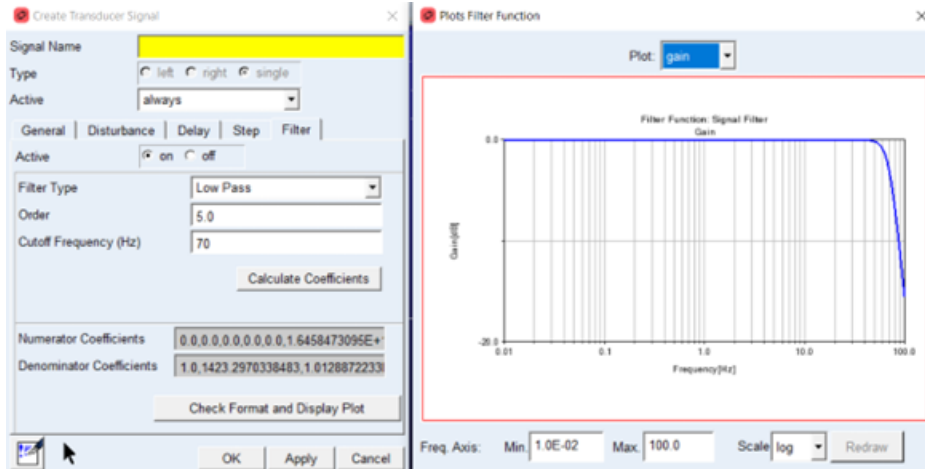

Adams PostProcessor

Print to PDF

Adams PostProcessor can now print pages directly to the PDF file format:

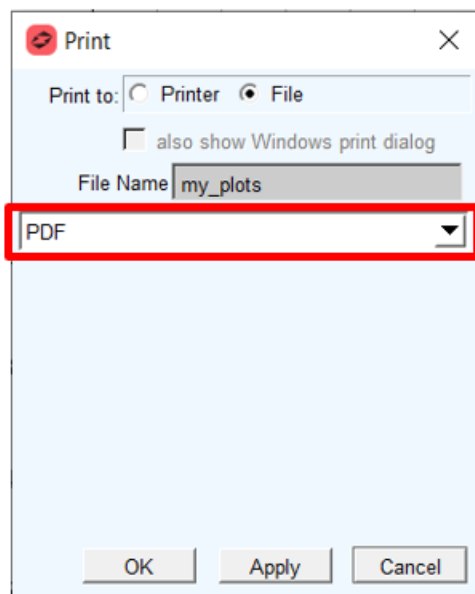

Adams RealTime

Adams Real Time now supports the forthcoming version of CDTire/Realtime. This forthcoming version of CDTire is expected to be released early in the year 2025.

Adams Solver


New RAMP Function

A RAMP function is now available in Adams Solver function expressions:

RAMP (x, x0, h0, m, rp)

Arguments

x	Solver expression for independent value (ex: TIME)
x0	The corner point at which the RAMP function begins.
h0	The value before the RAMP
m	The slope of the RAMP
rp	Rounding parameter

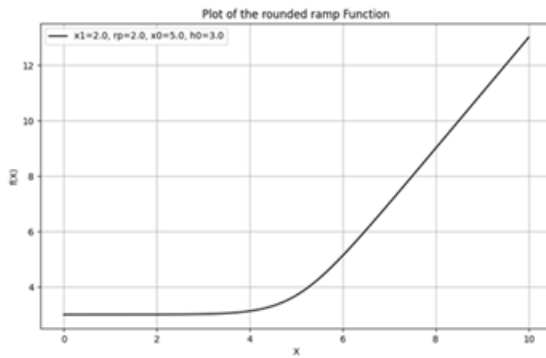

Adams View

CAD Interoperability Version Support

The following table lists the versions of the supported CAD formats that can be imported and exported in Adams 2024.2 .

Format	Import Version	Export Version
IGES (.igs)	5.2 & 5.3	5.3
STEP (.stp)	203/214/242 P	214
ACIS (.sat)	All → R27	Not Supported
CATIA V4 (.model, .dlv, .exp, session)	All 4.XX	Not Supported


What's New

Format	Import Version	Export Version
CATIA V5 (.CATPart, .CATProduct)	R10 → R33	Not Supported
CATIA V6 (.3dxml)	2014X → 2022X	Not Supported
Pro/Engineer part files (.prt, .asm)	13 → Creo 9	Not Supported
Inventor (.ipt, .iam)	All → 2023	Not Supported
Solidworks (.sldprt, .sldasm)	99 → 2023	Not Supported
Unigraphics (.prt)	11.1 → NX CR 1953, 1957 and 1969, 2212	Not Supported
JT : JtOpen (.jt)	7.0 → 10.5	Not Supported

Aggregate Mass Improvements


The Aggregate Mass tool in Adams View (and Adams Car) has been enhanced to provide additional tensor output when a Relative To marker is specified. In addition, it is now possible to create a marker at the computed aggregate CM location.

When specifying a Relative To marker, the following additional inertia tensor information is reported:

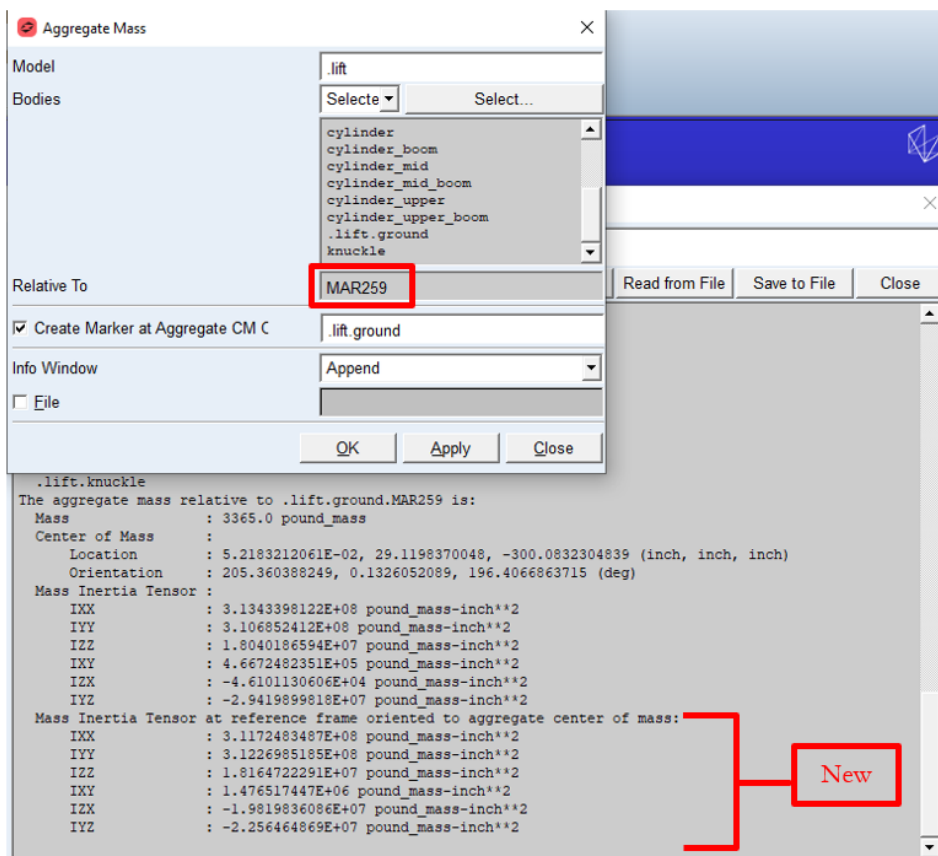


When specifying the Create Marker at Aggregate CM choice and picking a part, a marker is automatically created at the aggregate cm location, having the principal axes aligned with the aggregate inertia:

What's New

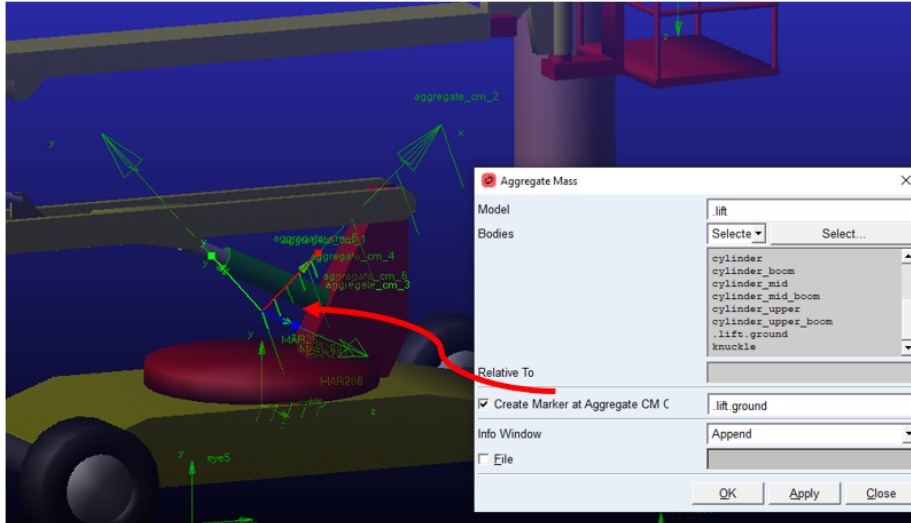

Function Builder – Bracket Highlights

Detecting matching bracket pairs in function expressions is easier now with dynamic bracket highlighting, shown in Function Builder:

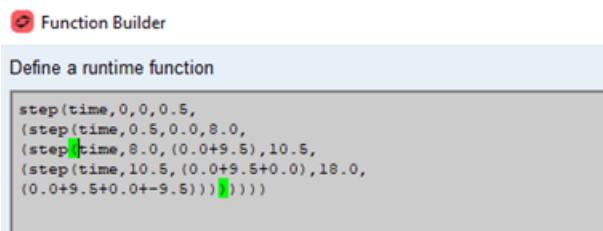


Highlights are shown for the following three types of closing brackets:

- (..expression..)
- [..expression..]
- {..expression..}

Function Builder – Built-in Search Field

Locating functions is now easier thanks to the new search field in Function Builder. The list of functions is now filtered by both the Search field and the Category dropdown selection. Type in a search string, then change the Category from the default of All Functions to something else to locate the function that you need.

What's New

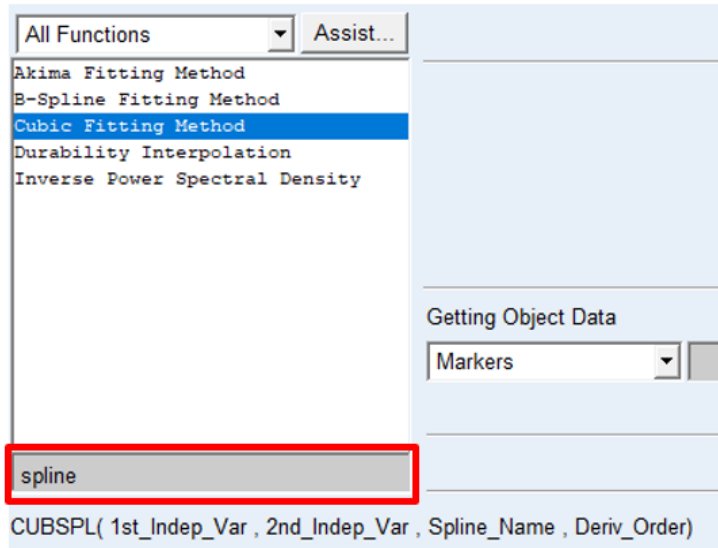

Adams 2024.1 Release Notes

Adams Car	88
Communicator Map	88
Edit in Template	89
Show & Hide Subsystems	90
Flexible Rim	90
User-Defined Plot and Report Templates	91
Tension Leafspring (Without Shackle)	93
Adams Co-simulation Interface	94
Supported Versions of Software for Marc Co-simulation	94
Adams Durability	94
Rainflow – Fatigue Cycle Counting	94
Acoustic Pressure Recovery in Flexible Bodies	96
Adams Flex	97
Rotor Dynamics Effects in Flex Bodies	97
Adams Machinery	99
GearAT: Gear MicroGeometry Variations	99
GearAT: Exact Gear Tooth Measurements	100
Romax to Adams	102
REXS File Import	102
Adams Solver	103
Utility Subroutines for Contact Node Incidents	103
New Handling of Angles – ADVANCED_ROTATION	104
Adams Tire	104
Runtime Inflation Pressure Changes (FTire)	104
Adams View	105
Importing CAD with Density – New Defaults	105


What's New

CAD Interoperability Version Support	106
--	-----

Adams Car

Communicator Map

A graphical representation of Communicator connections between subsystems is now available:

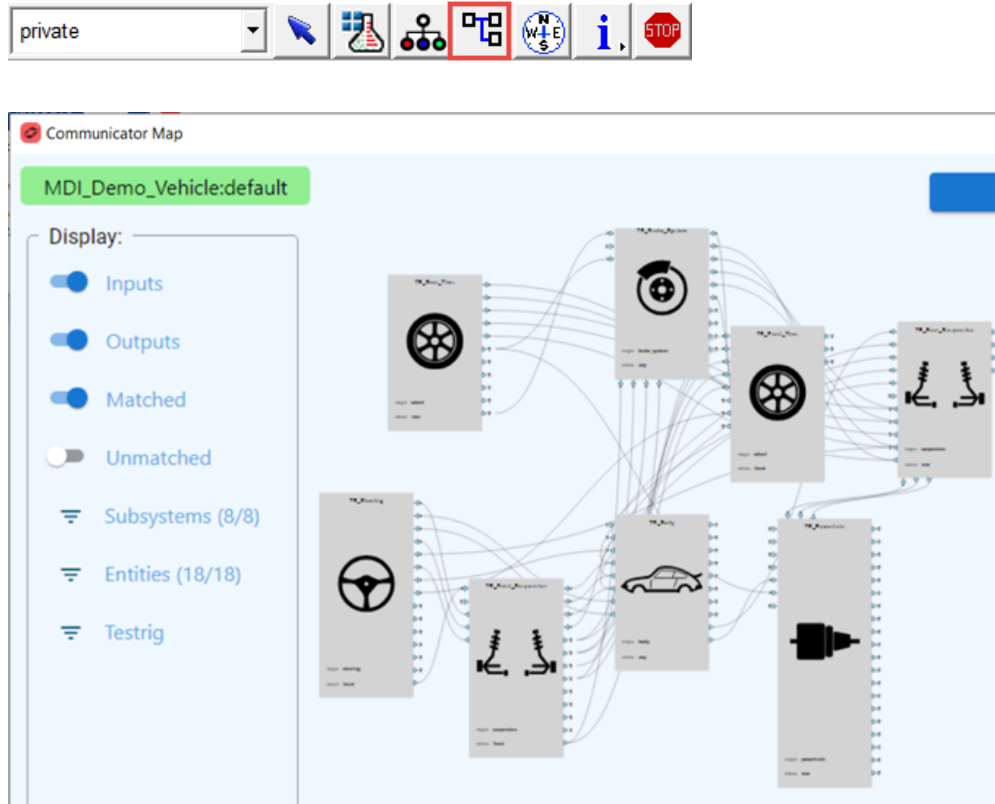

Featuring simple filtering controls, the Communicator Map draws communicator relationships in an easy to follow, graphical format. Subsystem blocks and connection lines show different levels of detail, all the way down to typical communicator connection output:


The screenshot shows a search bar labeled 'Search Ports' with a question mark icon. Below it is a table listing communicator connections with columns for Name, Class, Minor Role, Match, Matching Names, and Entity.

Name	Class	Minor Role	Match	Matching Names	Entity
cis_std_tire_ref	location	any	testrig.cos_std_tire_ref	std_tire_ref	none
cos_measure_for_distance	marker	any	testrig.cis_measure_for_di...	measure_for_distance	subcompact_body.ground...
cos_chassis_path_reference	marker	any	testrig.cis_chassis_path_re...	chassis_path_reference	subcompact_body.ground...
cos_body_subsystem	mount	any	testrig.cis_body_subsystem...	body_subsystem	subcompact_body.ges_cha...
cos_driver_reference	marker	any	testrig.cis_driver_reference	driver_reference	subcompact_body.ges_cha...


What's New

Edit in Template

Making changes to a template is much easier now with the new Edit in Template functionality that is found at the Assembly level of a vehicle model. This new automation functionality lets an expert user easily open a template in an Assembly from the Model Browser:

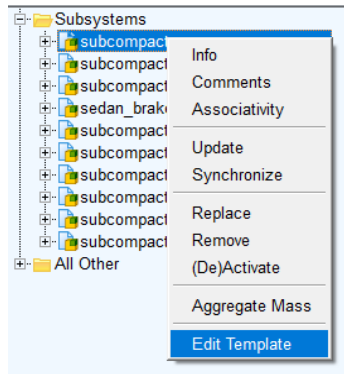

This is also available by right-clicking elements in the model:

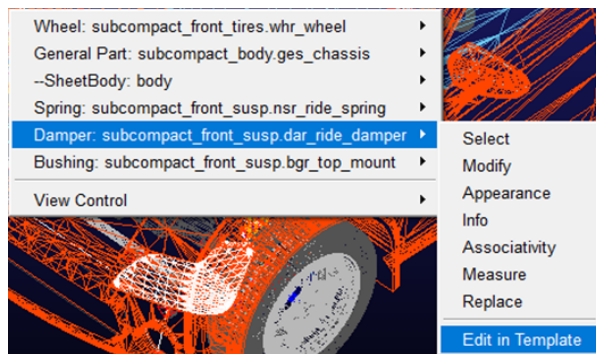

Selecting these actions will automatically locate the template file for a subsystem and load it into Template Builder for immediate modification.


Further automation is introduced for the return path when a template has been changed. Adams Car will now automatically apply the template changes to a subsystem and then update the assembly with the modified subsystem. This greatly streamlines the process of changing a template and realizing the changes in an assembly:



What's New


Show & Hide Subsystems

It is now easier to show/hide subsystems when inspecting a vehicle assembly. Right-clicking a subsystem in the Model Browser includes new menu picks for Show and/or Hide, as shown below:

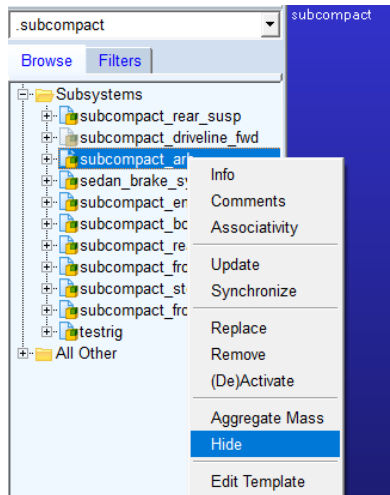


Flexible Rim

It is now possible to incorporate a flexible rim model into Adams Car. This new functionality is available with tire models that use CDTire, from Fraunhofer ITWM (<https://www.itwm.fraunhofer.de/en/departments/mf/cdtire.html>).

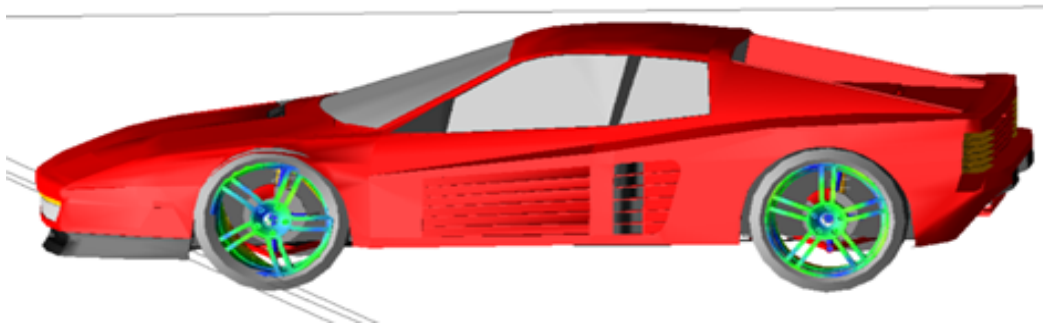

The interface for this new functionality is presented in the Flex Rim FE Preprocessing dialog box, as shown:

What's New

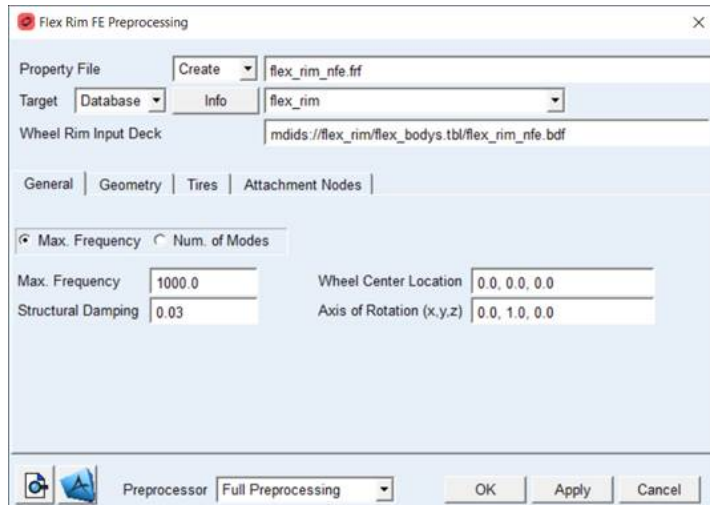

This takes care of the many steps needed to integrate a flexible body into a vehicle assembly.


Note:

F1 Context Help is not working for the Flex Rim Preprocessing dialog box. Open the Adams Help documentation from the Adams Help menu and search for 'flex rim' to locate the complete Help documentation. This is found in the Help section: *Adams Car Package* → *Adams Tire* → *Contact Methods* → *Flex Rim*.


User-Defined Plot and Report Templates

Adams Car uses Plot Template Files (.plt, located in /plot_configs.tbl) and Report Template Files (.rtp, located in /report_templates.tbl) to create standard Plots and Reports for all of the simulation Events. It is now easier to customize these templates via the Post-Processing section of Adams Car Preferences (*Settings* → *Preferences*):


What's New

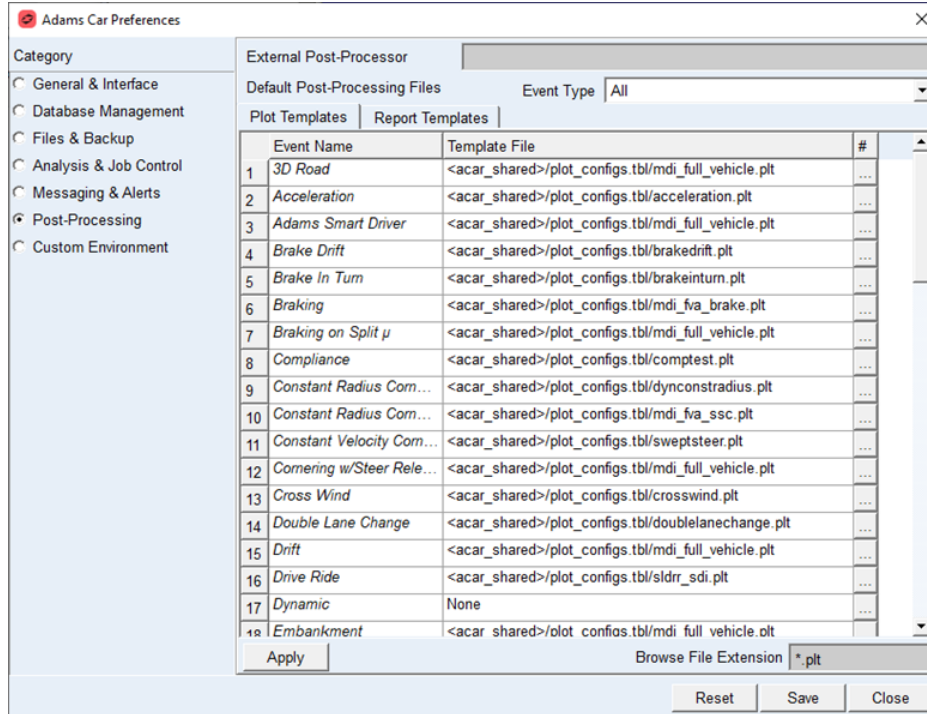


The settings above specify the default template files to be used. To use a different template without setting it as the default, use the new context menu picks in the Event Browser, as shown below:

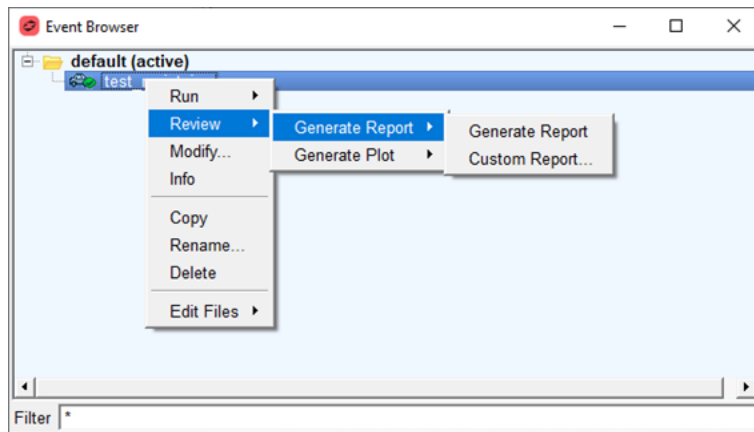

What's New

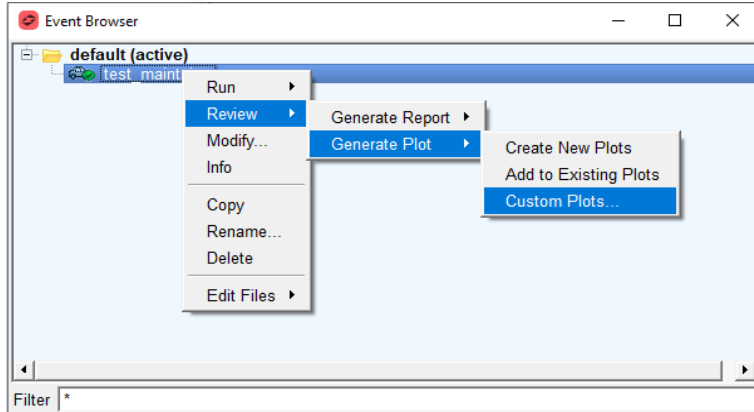


New options also exist in Adams PostProcessor for importing Plot/Report templates:

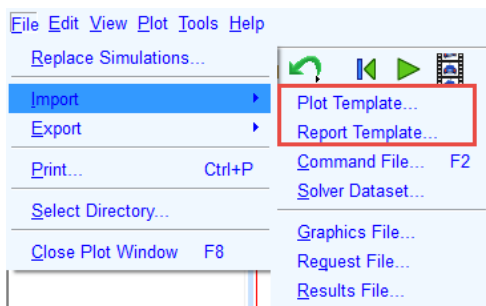

Tension Leafspring (Without Shackle)

The Leafspring Editor now supports creation of leafsprings with or without a shackle:

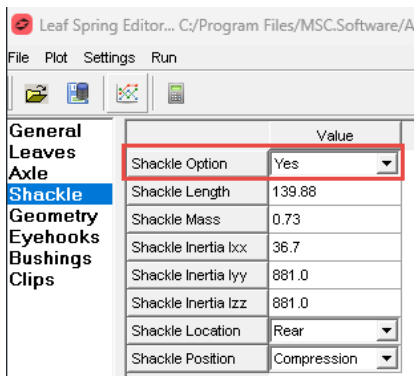

The new Shackle Option parameter can be modified in the Editor shown above, or directly using a text editor on the .lrf property file.

Adams Co-simulation Interface

Supported Versions of Software for Marc Co-simulation

An updated table of the Adams co-simulation Interface supported versions of Marc is shown below:

Marc version	ACSI supported version
Marc 2013.0	ACSI 2014.0, 2014.0.1
Marc 2013.1	ACSI 2014.0, 2014.0.1
Marc 2014.0	No support for ACSI
Marc 2014.1	No support for ACSI
Marc 2014.2*	ACSI 2015-2015.1, ACSI 2016* - 2019.0*
Marc 2015*	ACSI 2015-2015.1, ACSI 2016* - 2019.0*
Marc 2016 and later	ACSI 2015 and later


* The ACSI 2016 and later versions require a workaround for the case of Adams models co-simulating with Marc versions 2014.2 and 2015. Marc 2016 does not require this workaround. For details see the "Special requirements to run Marc" section of the Adams product documentation (Online Help) under "Adams Co-simulation Interface."

Adams Durability


Rainflow – Fatigue Cycle Counting

The Rainflow counting method computes the magnitude and quantity of different loading cycles found in a complex stress-time history. The number of cycles at different mean values and the corresponding min/max ranges of the cycles can be used to estimate fatigue damage in a component. A typical load-time history from a durability analysis, for example, might appear like so:

What's New

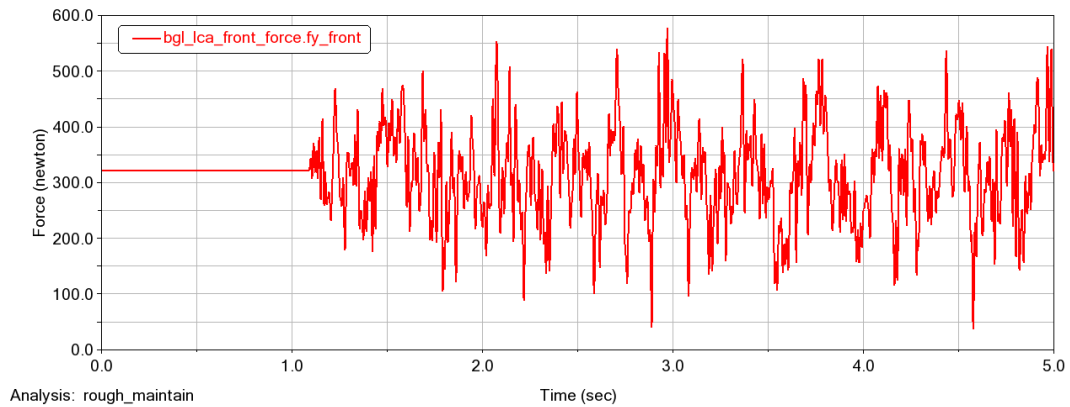

Rainflow cycle counting seeks to describe this signal as a collection of loading cycles, each cycle having a mean and amplitude value, as shown below:

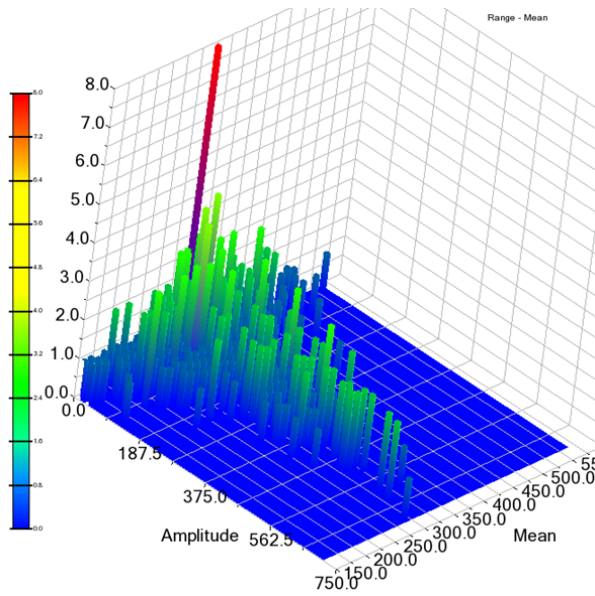


Several plot types are available based on this information:

1. Rainflow Histogram as a function of cycle amplitude and mean value,
2. Rainflow Histogram as a function of cycle start and end values,
3. Range Pairs - the number of cycles as a function of cycle amplitude,
4. Cumulative Range Pairs - a cumulative form of the data above,
5. Level Crossings - range amplitudes as a function of the number of cycles,
6. Equivalent Load & Damage - typically used if the time history represents stress in the material but if the relationship between loads and stress is understood then this may also be applied to load histories.

What's New

This new functionality is found in Adams PostProcessor when the Durability plugin (*Tools → Plugin Manager*) is loaded:

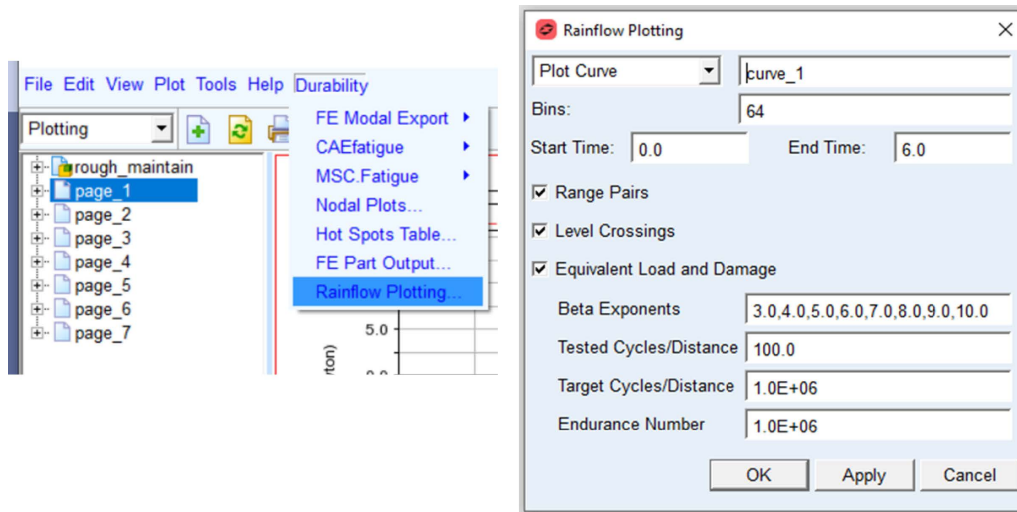

Notes:

These plots are typically overlayed with 2 or more data sources. Currently it is only possible to plot a single result on a single plot. To overlay plots of Range Pairs and Level Crossings for multiple results, do the following:


1. Plot the Range Pairs / Level Crossings of interest for the first result set.
2. Create a second, similar, plot for the 2nd result set of interest.
3. Use Copy / Paste to overlay plots: select the first curve of interest and select *Edit → Copy*.
4. Navigate to the second plot page and use the menus: *Edit → Paste* to add the previously-selected curve to the new page.

Acoustic Pressure Recovery in Flexible Bodies

Acoustic pressure recovery is now possible in Adams, using MNF files that have been generated in MSC Nastran 2024.1.

If a coupled fluid-structure interaction (FSI) is defined in the MSC Nastran model and one creates an MNF, there is an option to include acoustic modes from select fluid grids in the MNF. If this is done, the user can recover acoustic pressure time histories of Adams results using Durability without having to go back to MSC Nastran. This MNF information can be verified using the Adams Flex Toolkit, shown below.

What's New

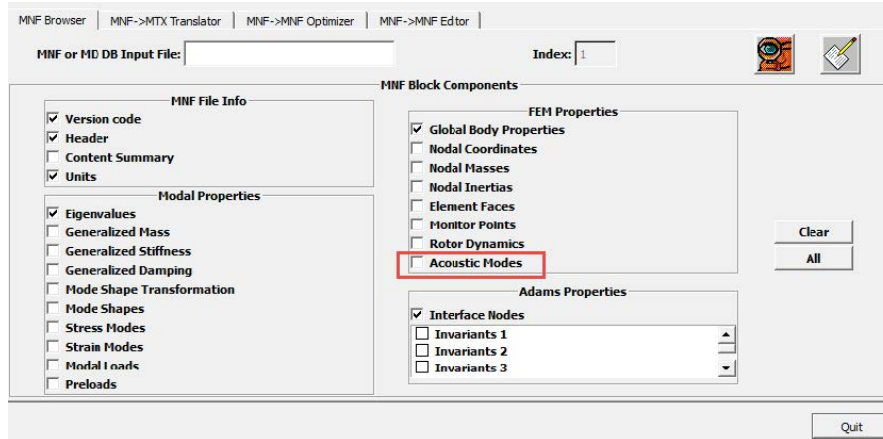


Adams Flex

Rotor Dynamics Effects in Flex Bodies


The Modal Neutral File (mnf) file format used for flexible bodies can now include rotor dynamics effects, as computed by a Finite Element package such as Nastran. A new simulation mode exists for running successive dynamic & linear analyses and a new charting option named Rotor Dynamics Campbell Plot is meant for these results.

Specifically, Adams Flex now recognizes mnf files containing Rotor Dynamics effects, as shown below. These effects are included in the mnf file using MSC Nastran 2024.1 and SOL107:

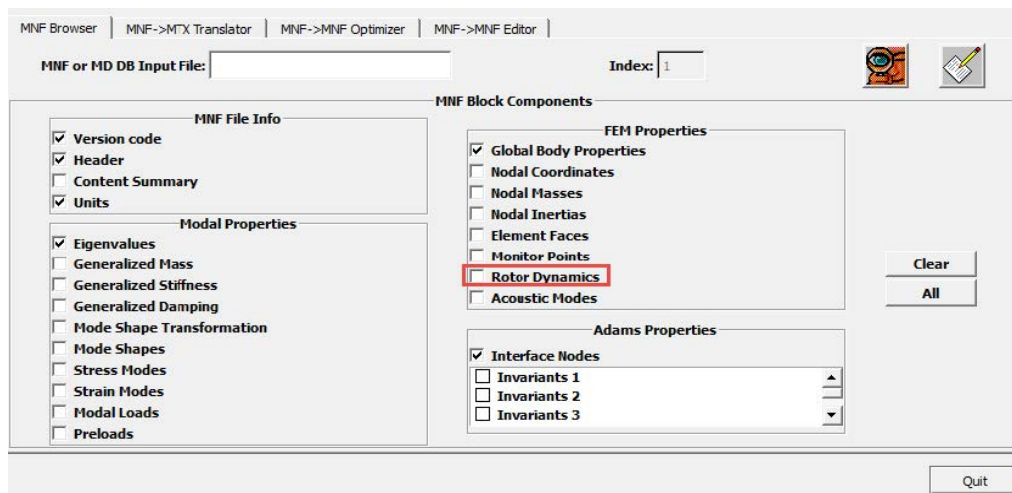


Rotor Dynamics effects for flex bodies must be enabled (Settings Solver → Flex Bodies...) as shown:


What's New

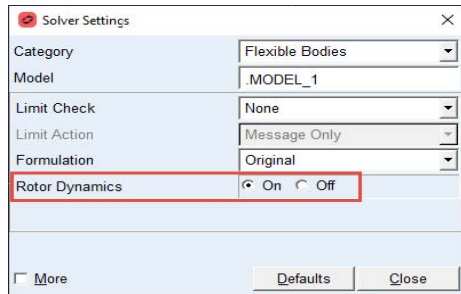

A new simulation sequence particular to rotor dynamics is included with the simulation controls:

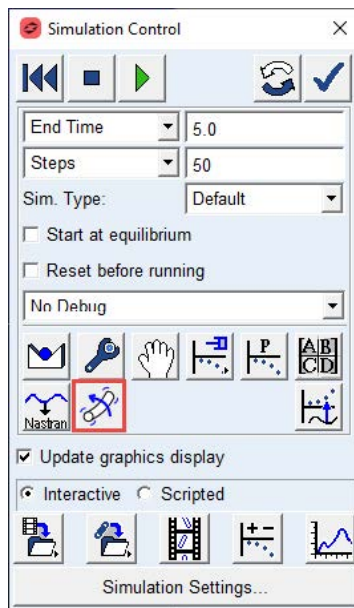

And the new plotting type for Rotor Dynamics is available in PostProcessor:

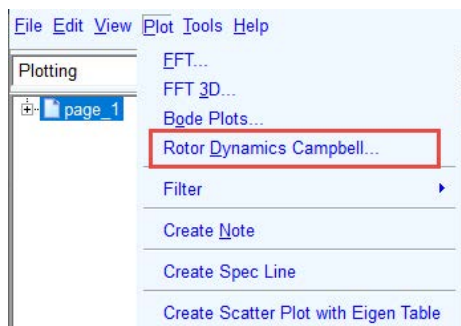


What's New

Adams Machinery


GearAT: Gear MicroGeometry Variations

It is now possible to create gears with micro variations in the geometry to simulate manufacturing roughness and similar imperfections:

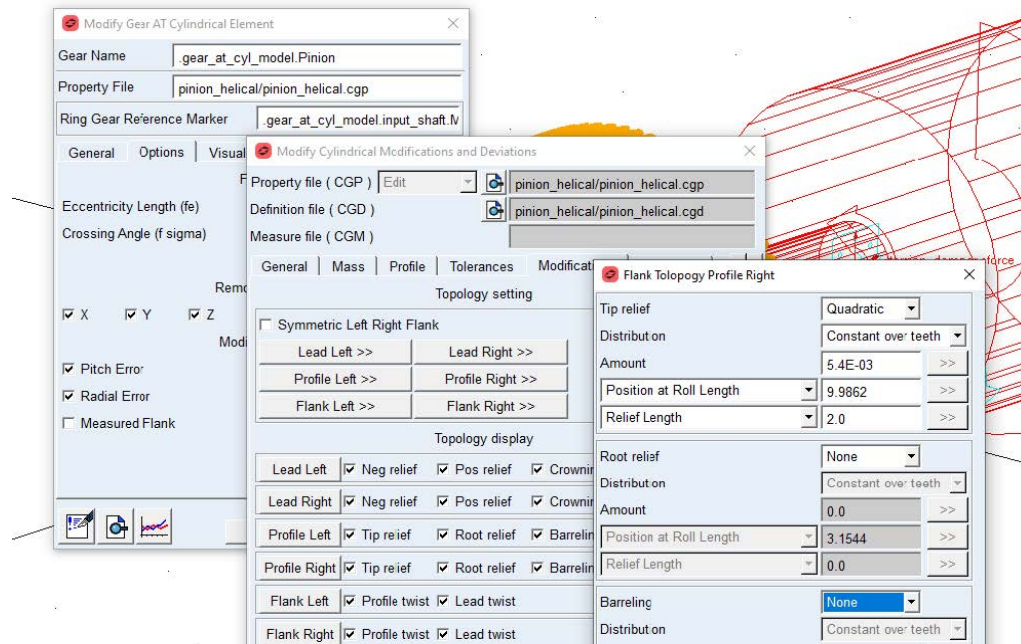

Deviations in geometry are specified with respect to the nominal shape; users can specify different patterns for the deviations as shown:


What's New

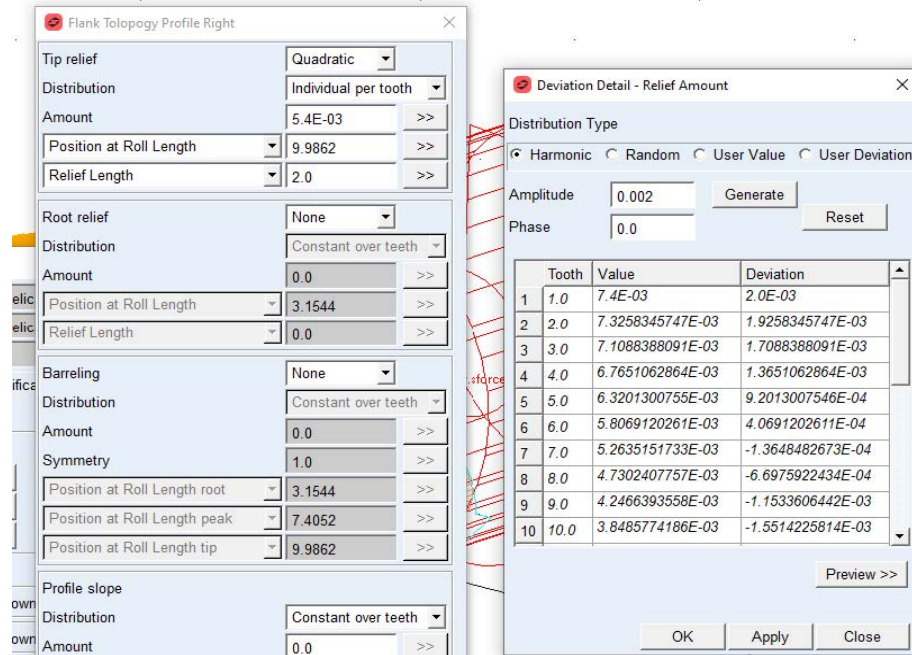

The manufactured gear can be measured on each tooth and flank, the produced measurements can be applied to each tooth so real topology and deviations are used in simulations.

GearAT: Exact Gear Tooth Measurements

The manufactured gear can be measured on each tooth and flank and the produced measurements can be applied to each tooth. This real topology and deviations is used for very detailed simulations.

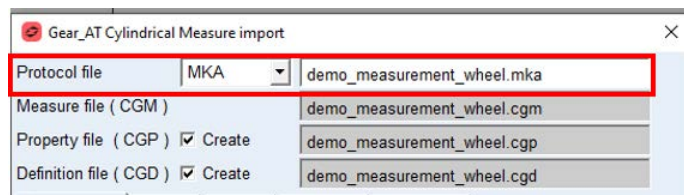

What's New

```

Gear AT MKA Reader Log Cylindrical

#####
$$$      MSC Software Gear AT MKA Reader      $$$
$$$      Version: 1.3                          $$$
$$$      Release Date: 2023-10-29              $$$
$$$      Date and Time: 2024-04-15 14:22:01    $$$
$$$#####
Detected >> Normal_Modul      Value = 1.67
Detected >> Number_Teeth      Value = 63
Detected >> Helix_Angle       Value = 34.0
Detected >> Pressure_Angle    Value = 15.0
Detected >> Profile_Shift_coeff_nom Value = 0.05414
Detected >> Width             Value = 31.0
Detected >> Tip_Diameter       Value = 133.04
Detected >> Root_Diameter      Value = 121.46
Detected >> Start_Measurement_Profile Value = [123.75, 123.75]
Detected >> End_Measurement_Profile Value = [133.04, 133.04]
Detected >> Start_Measurement_Lead Value = [0.0, 0.0]
Detected >> End_Measurement_Lead Value = [31.0, 31.0]
Detected >> Measurement_Ball_Diameter Value = 3.0
Detected >> Dimension_over_Balls Value = [131.671, 0.0, 0.054]
Detected >> Number_teeth_spaced Value = 10
Detected >> Base_tangent_length Value = [0.0, 0.0, 0.0]
Detected >> Deviation_Diameter Value = 127.91

Detected >> Detailed Measure for Tooth 63, Profile Contours Left 30
Detected >> Detailed Measure for Tooth 63, Profile Contours Right 30
Detected >> Detailed Measure for Tooth 63, Lead Contours Left 1
Detected >> Detailed Measure for Tooth 63, Lead Contours Right 1

Detected >> Simple Measure for Tooth 1, Profile Contours Left 1
Detected >> Simple Measure for Tooth 1, Profile Contours Right 1
Detected >> Simple Measure for Tooth 1, Lead Contours Left 1
Detected >> Simple Measure for Tooth 1, Lead Contours Right 1

Detected >> Simple Measure for Tooth 63, Profile Contours Left 1
Detected >> Simple Measure for Tooth 63, Profile Contours Right 1
Detected >> Simple Measure for Tooth 63, Lead Contours Left 1
Detected >> Simple Measure for Tooth 63, Lead Contours Right 1

Detected >> Deviations_left Block
Detected >> Deviations_right Block

#####
$$$      Successfully Terminated Good bye!    $$$
$$$      Version: 1.3                          $$$
$$$      Release Date: 2023-10-29              $$$
$$$      Date and Time: 2024-04-15 14:22:01    $$$
$$$#####


Save Log File

Close

```


Visualization tools are included to check the imported data:

What's New

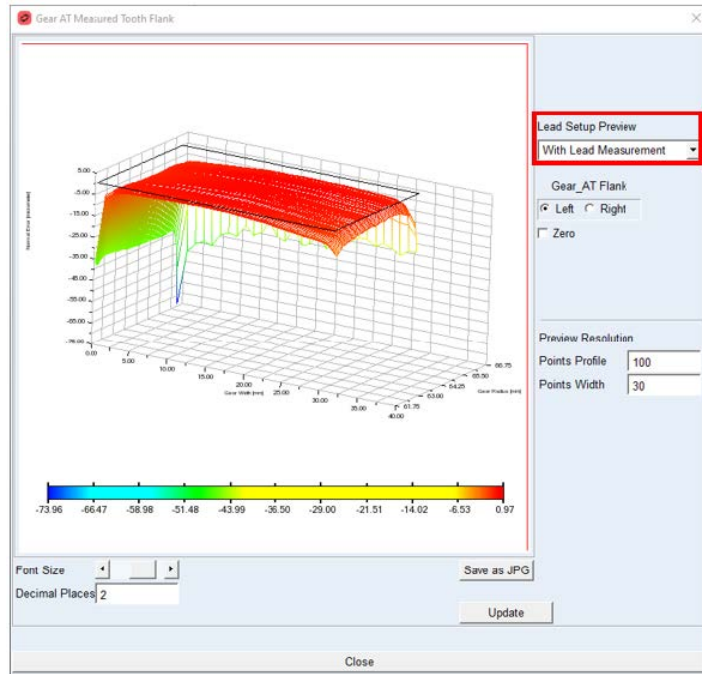

Romax to Adams


A new Getting Started guide is available in the standard Help documentation for Romax-to-Adams. A step by step example shows the process of easily converting a Romax model into an equivalent Adams model.

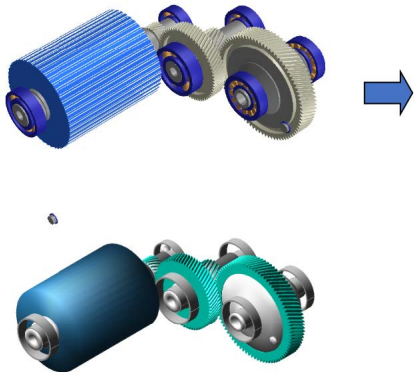

REXS File Import

It is now possible to import REXS model files into Adams if Romax (version 2023.1 or greater) is installed. The File Import dialog box can now accept this file format:

What's New

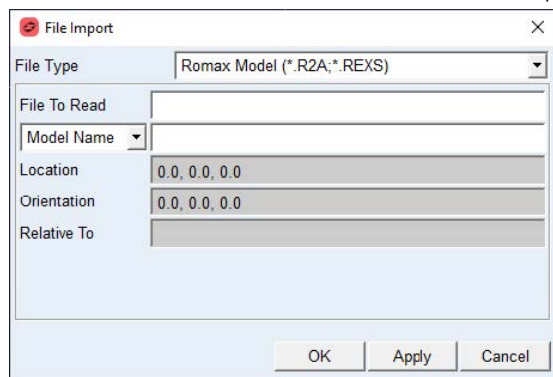

REXS models are converted, in the background using Romax, to the R2A (Romax to Adams) specification and then loaded in Adams.

Adams Solver

Utility Subroutines for Contact Node Incidents

For users that create contact subroutines (CNFSUB, CFFSUB) for flexible bodies, new utility subroutines exist that are used to identify node incidents and detailed contact data. These are:

N_NODE_INCIDENTS(id, oneflag, index, errflag)

Input Arguments:

id - integer specifying CONTACT ID
oneflag - integer specifying whether or not CNNSUB/CFFSUB should be called once or multiple times:
oneflag = 1 specifies CNFSUB to be called once
oneflag = 2 specifies CFFSUB to be called once

Output

index - integer specifying Contact incident, numbered 1 to N
errflag - an integer specifying success/failure of function call

FLEX_CONTACT_DATA(id, comp, data, errflag)

Input Arguments

id - integer specifying CONTACT ID
comp - integer specifying node incident data to be returned:
1. loci (available in both CNFSUB/CFFSUB)
2. locj (available in both CNFSUB/CFFSUB)
3. ni (available only in CNFSUB)
4. nj (available only in CNFSUB)
5. gap (available only in CNFSUB)
6. gapdot (available only in CNFSUB)
7. gapdotdot (available only in CNFSUB)
8. slip displacement (available only in CFFSUB)
9. slip velocity (available only in CFFSUB)
10. normal force at node (available only in CFFSUB)

Output Arguments

What's New


data - an double precision array of requested node incident data
errflag - an integer specifying success/failure of function call

New Handling of Angles – ADVANCED_ROTATION

Adams Solver has a new method for internally describing angles that is expected to have speed and robustness benefits for certain models. This new method avoids angular singularities during solution, preventing simulation restarts. However, in order to accomplish this, additional equations are added to the equation set so some robust models may run slightly slower. This is activated via the PREFERENCES Statement:

```
PREFERENCES/ADVANCED_ROTATION = {ON, OFF}
```

Or within the Adams View interface under Advanced Rotation:

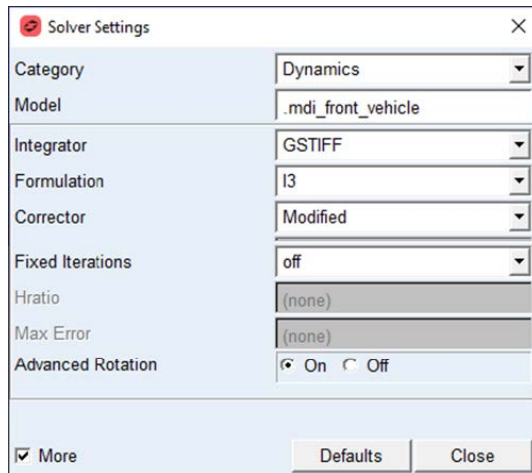


Adams Tire


Runtime Inflation Pressure Changes (FTire)

Simulating the effect of tire pressure changes on vehicle events is now possible when using the Cosin/FTire tire formulation. Tire pressure is specified using a runtime expression, as shown:

What's New

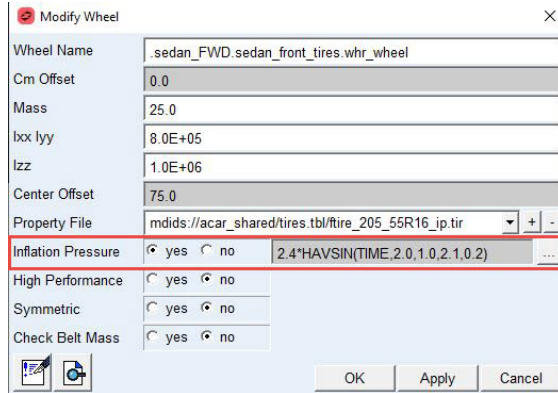

The effect of sudden tire pressure changes on a vehicle can easily be studied. The following example shows how the tire lateral force is greatly influenced by a drop in inflation pressure:

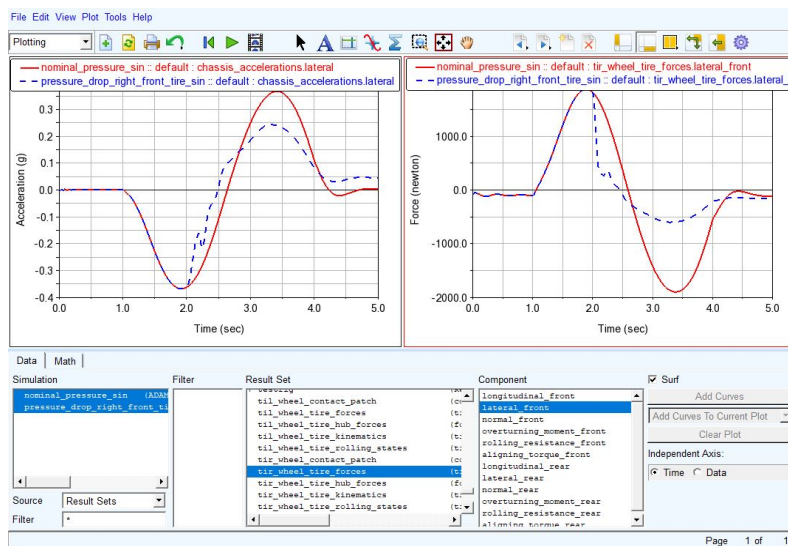



Adams View

Importing CAD with Density – New Defaults

Some CAD geometry types support a density specification. Prior versions would overwrite mass & density information for this operation. A new setting exists on the CAD import dialog box to avoid overwriting density information, as shown below. The default setting for this differs between Adams View and Adams Car as follows:

- Adams View: Ignore CAD Density defaults to Off.
- Adams Car: Ignore CAD Density defaults to On.

What's New

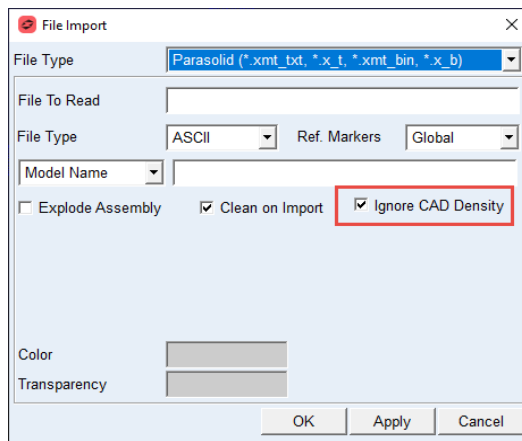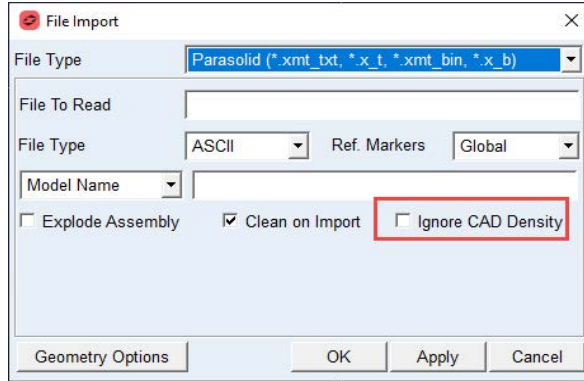

CAD Interoperability Version Support

The following table lists the versions of the supported CAD formats that can be imported and exported in Adams 2025.1 Beta .

Format	Import Version	Export Version
IGES (.igs)	5.2 & 5.3	5.3
STEP (.stp)	203/214/242 P	214
ACIS (.sat)	All → R27	Not Supported
CATIA V4 (.model, .dlv, .exp, session)	All 4.XX	Not Supported
CATIA V5 (.CATPart, .CATProduct)	R10 → R33	Not Supported
CATIA V6 (.3dxml)	2014X → 2022X	Not Supported
Pro/Engineer part files (.prt, .asm)	13 → Creo 9	Not Supported
Inventor (.ipt, .iam)	All → 2023	Not Supported

What's New

Format	Import Version	Export Version
Solidworks (.sldprt, .sldasm)	99 → 2023	Not Supported
Unigraphics (.prt)	11.1 → NX CR 1953, 1957 and 1969, 2212	Not Supported
JT : JtOpen (.jt)	7.0 → 10.5	Not Supported


Adams 2023.4 Release Notes

Adams Car	109
New Menu Structure	109
New API For Optimization & Multi-Run Applications	112
Improvements to Low-Speed Reverse Parking Events	112
Adams Co-simulation Interface	113
Supported Versions of Software for Marc Co-simulation	113
Adams PostProcessor	113
New 2D Order Plots from 3D FFT Plots	113
Adams Real Time	115
Separate Cores for Tires	115
Real Time Animation on Linux Discontinued after 2023.4	115
Adams Solver	115
New Contact Measurement Functions	115
Contact Performance Improvement	116
Adams View	116
CAD Interoperability Version Support	116

Adams Car

New Menu Structure

The menu structure has been updated to reflect a logical progression of tasks using the menus. To this end, a new Setup menu contains items that are done before the Simulate menu operations. Additionally, the menus make essential functions more easily discovered. The new '*Setup*' menu now appears between *Adjust* and *Simulate*:

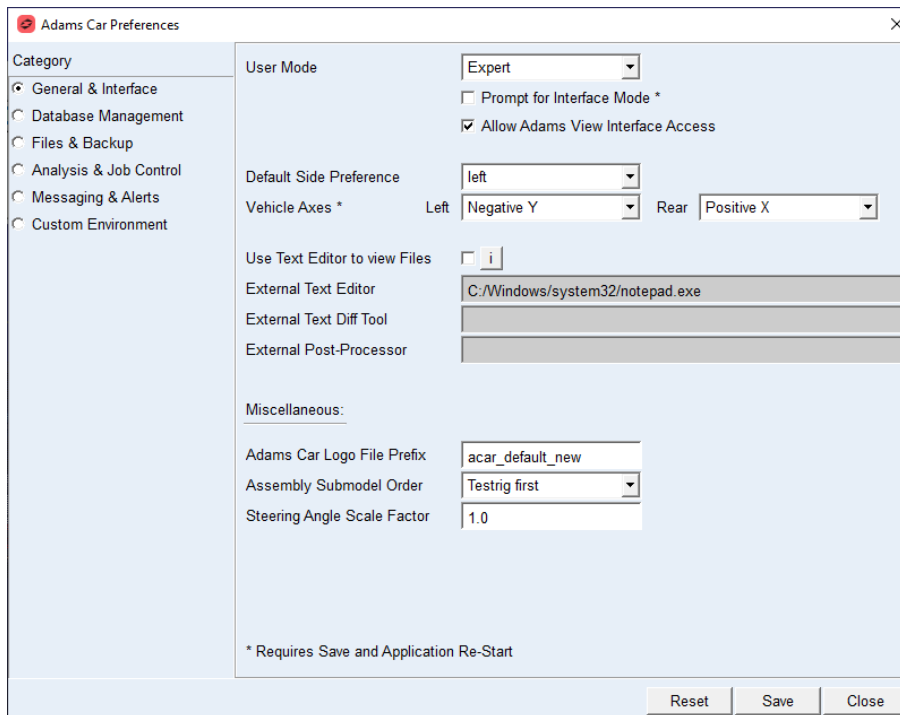


With this approach the *Adjust* menu is mainly used to modify individual items and the *Setup* menu is mainly used to apply subsystem-wide or assembly-related changes, for example:

```
File 'file://c:/ / .acar.cfg' successfully copied to
'file://c:/ / .acar.cfg.23-06-16.132321'.
save configuration - backup created of previous configuration file c:/ / .acar.cfg
```

Besides this, file operations (such as database (cdb) management) have been moved from the *Tools* menu into the *File* menu:

What's New

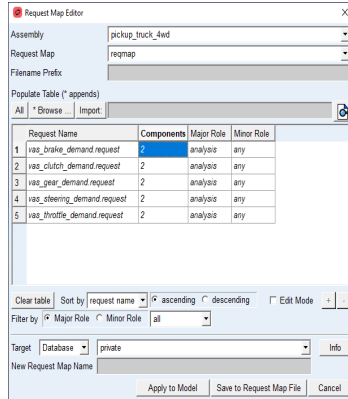

The following table maps old menu locations to new locations:

Old Menu Location	New Menu Location
File -> Info -> Modified Files	File -> Show -> Model Changes
File -> Info -> Subsystem	Setup -> Model Info -> Subsystem Info
File -> Manage -> Subsystems -> Synchronize	Setup -> Manage Subsystems -> Synchronize
File -> Info -> Assembly	Setup -> Model Info -> Assembly Info
File -> Manage -> Assemblies -> Add Subsystem	Setup -> Manage Assemblies -> Add Subsystem
File -> Manage -> Assemblies -> Add Testrig	Setup -> Manage Assemblies -> Add Testrig
File -> Manage -> Assemblies -> Remove Subsystem	Setup -> Manage Assemblies -> Remove Subsystem
File -> Manage -> Assemblies -> Remove Testrig	Setup -> Manage Assemblies -> Remove Testrig
File -> Manage -> Assemblies -> Replace Subsystem	Setup -> Manage Assemblies -> Replace Subsystem
File -> Manage -> Assemblies -> Replace Testrig	Setup -> Manage Assemblies -> Replace Testrig
File -> Manage -> Assemblies -> Testrig Activity	Setup -> Manage Assemblies -> Toggle Testrig Activity
File -> Manage -> Assemblies -> Toggle Subsystem Activity	Setup -> Manage Assemblies -> Toggle Subsystem Activity
File -> Manage -> Assemblies -> Update Variant	Setup -> Manage Variants -> Update Assembly Variant
File -> Manage -> Subsystems -> Update	Setup -> Manage Subsystems -> Update
File -> Manage -> Subsystems -> Update	Setup -> Manage Subsystems -> Update
File -> Manage -> Assemblies -> Create Variant	Setup -> Manage Variants -> Create Assembly Variant
File -> Manage -> Assemblies/Subsystems -> Delete Variant	Setup -> Manage Variants -> Delete Variant
File -> Manage -> Assemblies/Subsystems -> Rename Variant	Setup -> Manage Variants -> Rename Variant
Adjust -> Adjust Mass	Setup -> Mass Properties -> Design Mass Adjustment
Adjust -> Loading -> Table	Setup -> Mass Properties -> Loading Configuration
Adjust -> Shift	Setup -> Manage Subsystems -> Shift

What's New

Adjust -> Sprung Mass Table	Setup -> Mass Properties -> Sprung Mass Table
Adjust -> Actuators ->Table	Setup -> General Actuation -> Actuator Table
Adjust -> Kinematic Toggle	Setup -> Model Simplification -> Kinematic Toggle
Simulate -> Full Vehicle -> Vehicle Setup -> Delete Road Geometry	Setup -> Vehicle Environment -> Delete Road Geometry
Simulate -> Full Vehicle -> Vehicle Setup -> Set Full Vehicle Parameters	Setup -> Full Vehicle Assembly -> Full Vehicle Parameters
Simulate -> General Actuation Analysis -> Actuation Input File -> Open	Setup -> General Actuation -> Actuation Input File -> Open
Simulate -> General Actuation Analysis -> Actuation Input File -> Open	Setup -> General Actuation -> Actuation Input File -> Save
Simulate -> Full-Vehicle Analysis -> Path Optimization	Setup -> Vehicle Environment -> Path Optimization
Simulate -> Full-Vehicle Analysis -> Event Builder	Setup -> Vehicle Environment -> Event Builder
Simulate -> Full-Vehicle Analysis -> Road Builder	Setup -> Vehicle Environment -> Road Builder
Simulate -> Full-Vehicle Analysis -> Vehicle Set-Up -> Set Powertrain Parameters	Setup -> Full Vehicle Assembly -> Powertrain Parameters
Simulate -> Full-Vehicle Analysis -> Vehicle Set-Up -> Set SDI Request Activity	Setup -> Output & Requests -> Driving Machine
Simulate -> Full-Vehicle Analysis -Road Conversion	Setup -> Vehicle Environment -> Road Conversion
Simulate -> Full-Vehicle Analysis -> Set Road for Individual Tires	Setup -> Vehicle Environment -> Set Road for Individual Tires
Simulate -> Full-Vehicle Analysis -> Vehicle Set-Up -> Static Vehicle Set-Up	Setup -> Full Vehicle Assembly -> Static Vehicle Set-Up
Simulate -> Suspension Analysis -> Create Static Loadcase	Setup -> Suspension Assembly -> Create Static Loadcase
Simulate -> Suspension Analysis -> Set Suspension Parameters	Setup -> Suspension Assembly -> Suspension Parameters
Review -> Analysis Management -> Run (acf)	Simulate -> ACF Submit
Tools -> Database Management -> Add	File -> Manage Databases -> Database Management -> Add
Tools -> Database Management -> Create	File -> Manage Databases -> Database Management -> Create
Tools -> Database Management -> Database Migration	Tools -> Database Conversion -> Database Migration
Tools -> Model Diagnostics -> Highlight Connectivity	Setup -> Model Diagnostics -> Highlight Connectivity
Tools -> Model Diagnostics -> Model Auditor	Setup -> Model Diagnostics -> Model Auditor
Tools -> Model Diagnostics -> Spline Check/Repair	Setup -> Model Diagnostics -> Spline Check/Repair
Tools -> Model Diagnostics -> Spline Comparison	Setup -> Model Diagnostics -> Spline Comparison
Tools -> Model Reduction -> Anti-Roll Bars	Setup -> Model Simplification -> Anti-Roll Bars
Tools -> Model Reduction -> Remove Interface Parts	Setup -> Model Simplification -> Remove Interface Parts
Tools -> Model Reduction -> Tires	Setup -> Model Simplification -> Tires
Tools -> Requests -> Request Activity	Setup -> Output & Requests -> Request Activity
Tools -> Requests -> Request Map Activity	Setup -> Output & Requests -> Request Map Activity
Tools -> Requests -> Request Map Editor	Setup -> Output & Requests -> Request Map Editor
Tools -> Database Management -> Database Version	Tools -> Database Conversion -> Database Version

What's New

Upgrade	Upgrade
Tools -> Database Management -> Publish Assembly	File -> Publish -> Assembly
Tools -> Database Management -> Publish Subsystem	File -> Publish -> Subsystem
Tools -> Database Management -> Remove from Session	File -> Manage Databases -> Database Management -> Remove
Tools -> Database Management -> Set Default Writable	File -> Manage Databases -> Database Management
Tools -> Model Diagnostics -> Entity Info	Setup -> Model Info -> Entity Info
Tools -> Model Reduction -> Assembly Repositioning	Setup -> Manage Assemblies -> Reposition
Tools -> Model Reduction -> Remove Switch Parts	Setup -> Model Simplification -> Remove Switch Parts
n/a	File -> Save -> Preferences

New API For Optimization & Multi-Run Applications

A new Application Programming Interface (API) for Adams Car has been created to simplify the process of simulating & evaluating Adams Car models. This API, written in Python, simplifies:

- The inspection and simulation of existing Event or Event Set files,
- Opening, creating, saving & modifying Subsystems and Assemblies,
- The retrieval of Objective values and Result Set vectors and much more.

Complete examples are found in the Adams Car installation folder under the `lacar\examples\python_api\` folder. Documentation of the various classes & methods is found in Help, entitled '*Adams Car API Help*'.

Here is an abbreviated example for how to run an Event found in an Event Set file and extract a key metric from the simulation results:

```
from msc.ADAMS.acar.event import EventSetManager
esm = EventSetManager()
esm.import_event_sets("example1.esf")
my_event = esm['default']['api_example1_01_sdi']
my_event.execute('interactive')
my_event.generate_report()
print(my_event.report_metrics.keys())
print(my_event.report_metric_value('rear_axle_load'))
```

Some of the objects that can be called from this Python API include:

- Assembly, Subsystem, Testrig
- Database
- Event, Event Set, EventSetManager
- ExportFMU
- Utils

Improvements to Low-Speed Reverse Parking Events

Robustness improvements have been made to the Driving Machine that is used in machine-controlled parking events (closed loop steering events following a prescribed path), specifically for driving in reverse. This particularly applies to the case where uneven road profiles and realistic tires (that exhibit a delay in the build-up of lateral forces) would previously result in undesired steering response.

The Connecting Contour parameter, found in the Event Builder for Trajectory Planning, has also been enhanced with an 'auto' option. This new 'auto' option can select between the (default) cubic method and

What's New

the circular method, depending on driving conditions. The circular method typically works best for reverse driving, low-speed events.

If users select 'auto' for the Connecting Contour, the Driving Machine will use a "circular" connecting contour for reverse driving (when $\text{gear} < 0$). This switches back to the default "cubic" connecting contour for forward driving if $\text{gear} > 0$. This allows for using the same event settings for both forward and backwards driving.

In addition, assuming that the gyro is mounted at the location of the rear axle, the minimum preview distance (by default set to 5 meters) is reduced by the wheelbase if $\text{gear} < 0$. It should also be noted that a correction of the throttle/brake controller was made and now properly takes the gravitation force into account in the feedforward longitudinal controller while driving in reverse on a slope.

Adams Co-simulation Interface

Supported Versions of Software for Marc Co-simulation

An updated table of the Adams co-simulation Interface supported versions of Marc is shown below:

Marc version	ACSI supported version
Marc 2013.0	ACSI 2014.0, 2014.0.1
Marc 2013.1	ACSI 2014.0, 2014.0.1
Marc 2014.0	No support for ACSI
Marc 2014.1	No support for ACSI
Marc 2014.2*	ACSI 2015-2015.1, ACSI 2016* - 2019.0*
Marc 2015*	ACSI 2015-2015.1, ACSI 2016* - 2019.0*
Marc 2016 and later	ACSI 2015 and later

* The ACSI 2016 and later versions require a workaround for the case of Adams models co-simulating with Marc versions 2014.2 and 2015. Marc 2016 does not require this workaround. For details see the "Special requirements to run Marc" section of the Adams product documentation (Online Help) under "Adams Co-simulation Interface."

Adams PostProcessor

New 2D Order Plots from 3D FFT Plots

New Order Analysis plots are available when working with 3D FFT Order Analysis Spectrum plots (the General 3D FFT plot is not supported). This new functionality allows a user to create a 2D Curve Slice from an existing 3D FFT plot, as shown below:

What's New

FFT 3D

✕

Curve Name

.plot_1.curve_1

Plot Type

Order Analysis Order Spectrum

Rotational Velocity

L_1.Last_Run.PART_2_XFORM.WZ

Min: 300.0 deg/sec = 50.0 RPM

Max: 3000.0 deg/sec = 500.0 RPM

X-Axis:

Order

Y-Axis:

Mag

Z-Axis:

RPM

Start Velocity (rpm)

End Velocity (rpm)

Velocity Slice Size

45.0

Percentage Overlap

75

Window Type

Hamming

Points (Power of 2)

64

☐ Detrend Input Data


Plot on New Page

Apply

Cancel

Order plots can be created for:

- Amplitude vs RPM at Orders (example above),
- Amplitude vs Order at an RPM (example below).

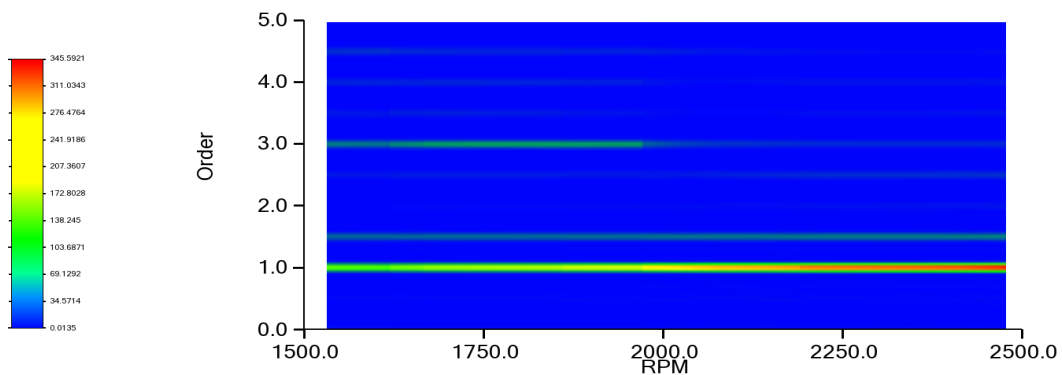

Adams Real Time

Separate Cores for Tires

Real Time simulations running on SIMulation Workbench (SimWB) can realize frame rate improvements by assigning specific computer cores to the tire models in the vehicle.

By default, a tire model will run within the cores specified by MSC_ADAMS_THREAD_AFFINITY_SET0. Adams Solver will call the tire models and wait for the tire models to finish the force calculations.

For the tires that use the Standard Tire Interface (STI), thus the Adams Tire models and third-party tire models using the STI plugin, one can specify that the tire models should use separate cores for their force calculation by setting the environment variable MSC_ADAMS_TIRE_AFFINITY. In this way, the vehicle model frame rate will not suffer from all tire force calculations. For each tire a dedicated core needs to be specified and should not interfere with the cores specified by MSC_ADAMS_THREAD_AFFINITY_SET0. When having 4 tires, using 6 threads for the vehicle model, the specification could look like:

```
MDI_ADAMS_FORCE_NTHREAD=6
MSC_ADAMS_THREAD_AFFINITY_SET0=2-7
MSC_ADAMS_TIRE_AFFINITY=8,9,10,11
```

Real Time Animation on Linux Discontinued after 2023.4

The Real Time animation capability currently offered on Linux will be discontinued after the 2023.4 release. Hexagon is planning an improved real time animation capability for a future release.

Adams Solver

New Contact Measurement Functions

Additional information about CONTACT elements can now be accessed using the new runtime function:

```
CONTACT_DATA(id, comp, flag)
```

This function provides, based on the 'comp' input setting, runtime measurement of the following CONTACT parameters:

1. Penetration Depth
2. Penetration Velocity
3. Penetration Boring Velocity
4. Slip Deformation Magnitude
5. Slip Velocity Magnitude (Speed)

The 'flag' input setting determines if the Maximum (0) or Minimum (1) of all incidents for this CONTACT, at this time, is returned.

Additionally, the CONTACT() runtime function has been expanded to include *Normal Magnitude* and *Friction Magnitude*. The complete list of outputs available with the CONTACT() runtime function is now:

1. Fm
2. Fx
3. Fy

What's New

4. Fz
5. Tm
6. Tx
7. Ty
8. Tz
9. Normal Mag
10. Friction Mag

For users creating CNFSUB() and CFFSUB() subroutines, new utility subroutines are available like so:

- N_CONTACT_INCIDENTS() - return the number of contact incidents associated with this contact element for this iteration.
- CONTACT_INCIDENT_INDEX() - return the current contact incident. Assumed to be called from a CNFSUB() or a CFFSUB() when the subroutine author needs to keep track of multiple contact incident locations for a single contact element.

Contact Performance Improvement

Performance improvements of up to 3X in wall time can be realized in simulations involving rigid body contact when using the HHT integrator. This speed-up will depend on model size, contact parameters and the number of Euler singularities that Solver encounters during the simulation.

Adams View

CAD Interoperability Version Support

The following table lists the versions of the supported CAD formats that can be imported and exported in Adams 2023.4.

Format	Import Version	Export Version
IGES (.igs)	5.2 & 5.3	5.3
STEP (.stp)	203/214/242 P	214
ACIS (.sat)	All → R27	Not Supported
CATIA V4 (.model, .dlv, .exp, session)	All 4.XX	Not Supported
CATIA V5 (.CATPart, .CATProduct)	R10 → R33	Not Supported
CATIA V6 (.3dxml)	2014X → 2022X	Not Supported
Pro/Engineer part files (.prt, .asm)	13 → Creo 9	Not Supported
Inventor (.ipt, .iam)	All → 2023	Not Supported
Solidworks (.sldprt, .sldasm)	99 → 2023	Not Supported

What's New

Format	Import Version	Export Version
Unigraphics (.prt)	11.1 → NX CR 1953, 1957 and 1969, 2212	Not Supported
JT : JtOpen (.jt)	7.0 → 10.5	Not Supported



Adams 2023.3 Release Notes

Adams Car	119
Point Motion Actuators	119
Background Simulation Shell Shows ACF Filename	119
Improvements to Events	120
Car True Batch Mode	120
Adams Controls	121
New FMU File-Saving Options	121
Encrypted FMUs for dSPACE SCALEXIO	122
Adams Co-simulation Interface	122
Supported Versions of Software for Marc Co-simulation	122
Adams Flex	122
Improved Flex-to-Rigid Swap	122
Adams Machinery	123
BearingAT: Cylindrical Roller Bearings Without Inner Ring	123
Adams PostProcessor	123
Performance Improvements with Large Flexible Bodies	123
Order Analysis Plotting	124
Abbreviation Option for Plot Unit Labels	125
Adams Real Time	126
New Setup Guide for VI-grade Driving Simulator	126
Tire Performance Improvements & New Capabilities	126
Belt Dynamics and 3D Enveloping Contact in Real Time	126
Adams View	126
CAD Interoperability Version Support	126

Adams Car

Point Motion Actuators


Adams Car traditionally has supported Actuator types of joint force, joint motion, point force & point torque. With this release it is now possible to create an Actuator of type 'point motion':

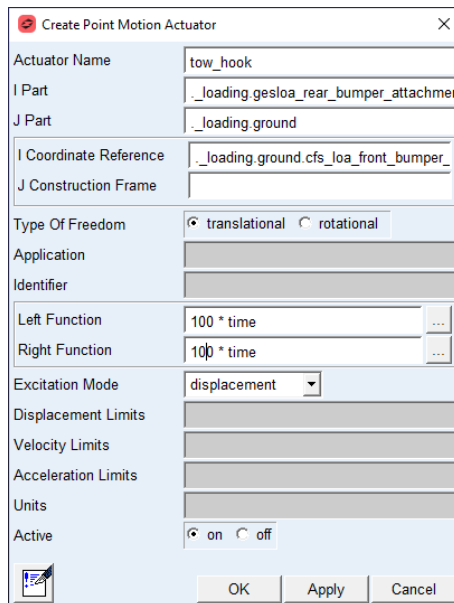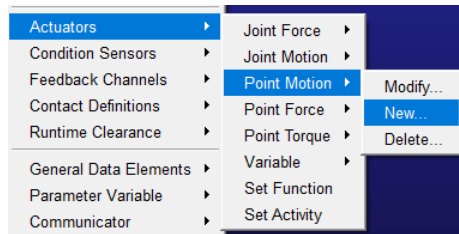

Background Simulation Shell Shows ACF Filename

Background simulations launched from Adams Car now show both the name and location of the currently-running ACF file in the title-bar of the simulation window. This is helpful when multiple simulations are being executed concurrently in different windows. Finding a specific simulation is now possible by inspecting the title-bar for the desired ACF file.

What's New

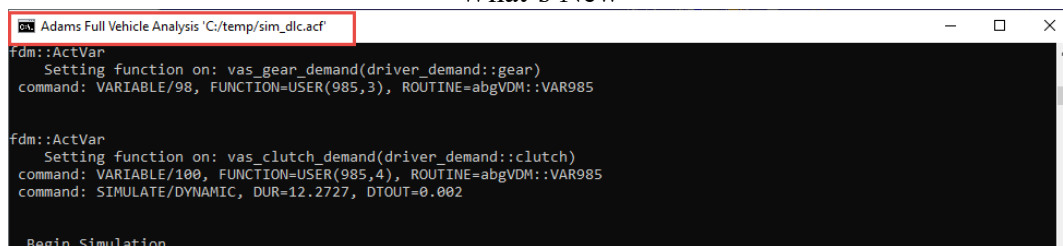

```
Adams Full Vehicle Analysis 'C:/temp/sim_dlc.acf'
fdm::ActVar
  Setting function on: vas_gear_demand(driver_demand::gear)
  command: VARIABLE/98, FUNCTION=USER(985,3), ROUTINE=abgVDM::VAR985

fdm::ActVar
  Setting function on: vas_clutch_demand(driver_demand::clutch)
  command: VARIABLE/100, FUNCTION=USER(985,4), ROUTINE=abgVDM::VAR985
  command: SIMULATE/DYNAMIC, DUR=12.2727, DTOUT=0.002

Begin Simulation
```

Improvements to Events

The following improvements have been made to the standard Events available in Adams Car:

- A new 'Disengage clutch' option is available for the Braking and Braking-in-turn events.
- The Frequency Response event is now more flexible when Input Type = Swept Sine, allowing for specification of the initial & maximum frequencies, the frequency rate and the event start time.
- A 'Steering Release' option is new for the Step Steer event. Allows user to specify a time when the steering wheel is to be released.

Car True Batch Mode

Past versions of Adams Car could be simulated in 'batch' mode, but a requirement existed that the computer must have a valid graphics card & graphics environment. In this release of Adams Car the batch mode scripting can operate on machines that do not contain graphics cards (as found on 'compute servers').


The majority of Adams Car functionality will work in this new environment, but some of the utility applications such as the Road Builder or Leaf Spring Editor may not yet function properly. To use the old behavior for graphics, set the environment variable: HMI_ACAR_LEGACY_BATCH_MODE=1

Improved Flex-to-Rigid Swap

It is now possible to 'undo' a rigid-to-flex (MNF Import) operation, replacing a flexible body with a rigid part. Previously, a flexible body could have its inertia invariants set to rigid to approximate a rigid part but that method required the retention of the (possibly large) mnf file and it also required an Adams Flex license. With this new swap behavior, a smaller Adams Solver model can be realized and the Adams Flex license is not required.

Users can simply right-click on a flexible body to find the two options of "Make Rigid (Retain Mesh)" and "Make Rigid (Original Geometry)". The "Retain Mesh" method simply keeps the flexible body in the model and sets the inertia invariants of the flex body to approximate a rigid body. Choosing the "Original Geometry" method attempts to replace an existing flexible body with the original rigid geometry if it is present in the model. The user is prompted for action when mass & inertias don't match between the rigid & flexible bodies, like so:

What's New

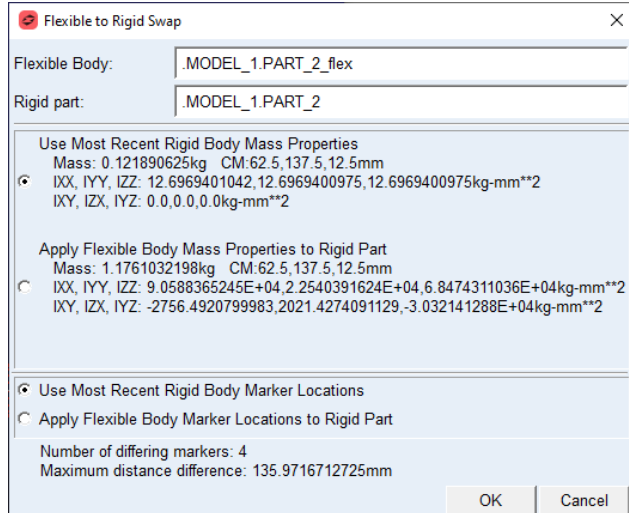

Note:

Existing *.acar.cfg files from older Adams versions (prior to v2023.2) undergo a one-time conversion process to a new format. This new format is not understood by previous (v2023.1 and prior) Adams versions, so launching older Adams versions will not reflect changes made in the newer format.

For users who regularly switch between older and newer versions, it is recommended to save an old-style acar.cfg to a different name (acar_legacy.cfg) and use the 'ACar Preferences' section of the Registry Editor to reference this old-style file. Then, simply maintain the default Preference setting in newer versions. Refer the article [Adams Car preferences, private configuration file changes and incompatibility](#) for further details.

Adams Controls

New FMU File-Saving Options

Functional Mockup Units (FMUs) exported from Adams now contain two new parameters that control which output files are retained when an FMU is run as a 'child' from within another process. The new options named save_messages and save_results are of type Boolean and will appear as fixed parameters for an FMU exported from Adams. Both parameters default to FALSE, but can be set to TRUE in a host application to turn on output of the Adams Solver Message (.msg) and Results (.res) files, respectively.

These new parameters are an easier way to enable saving of these file types. Previously users would have to set the MSC_ADAMS_REAL_TIME string parameter to specific keywords; these Boolean parameters should be more intuitive. Note that writing of the .res and .msg files requires some computing resources so the fastest performance will be when these parameters are set to the default of FALSE. Turn on the .msg and .res files when debugging or verification is required.

Encrypted FMUs for dSPACE SCALEXIO

Adams FMUs exported to the dSPACE SCALEXIO platform now support the 'Encrypted' option. These FMUs are intended for co-simulation with dSPACE SCALEXIO; in past releases the Adams model within the FMU could be inspected. This new functionality encrypts the Adams (.adm) model, providing a level of security when sharing models that potentially contain proprietary information.

Adams Co-simulation Interface

Supported Versions of Software for Marc Co-simulation

An updated table of the Adams co-simulation Interface supported versions of Marc is shown below:

Marc version	ACSI supported version
Marc 2013.0	ACSI 2014.0, 2014.0.1
Marc 2013.1	ACSI 2014.0, 2014.0.1
Marc 2014.0	No support for ACSI
Marc 2014.1	No support for ACSI
Marc 2014.2*	ACSI 2015-2015.1, ACSI 2016* - 2019.0*
Marc 2015*	ACSI 2015-2015.1, ACSI 2016* - 2019.0*
Marc 2016 and later	ACSI 2015 and later

* The ACSI 2016 and later versions require a workaround for the case of Adams models co-simulating with Marc versions 2014.2 and 2015. Marc 2016 does not require this workaround. For details see the "Special requirements to run Marc" section of the Adams product documentation (Online Help) under "Adams Co-simulation Interface."

Adams Flex


Improved Flex-to-Rigid Swap

It is now possible, in both Adams View and Adams Car, to 'undo' a rigid-to-flex (MNF Import) operation, replacing a flexible body with a rigid part. Previously, a flexible body could have its inertia invariants set to rigid to approximate a rigid part but that method required the retention of the (possibly large) mnf file and it also required an Adams Flex license. With this new swap behavior, a smaller Adams Solver model can be realized and the Adams Flex license is not required.

Users can simply right-click on a flexible body to find the two options of "Make Rigid (Retain Mesh)" and "Make Rigid (Original Geometry)". The "Retain Mesh" method simply keeps the flexible body in the model and sets the inertia invariants of the flex body to approximate a rigid body. Choosing the "Original

What's New

Geometry” method attempts to replace an existing flexible body with the original rigid geometry if it is present in the model. The user is prompted for action when mass & inertias don't match between the rigid & flexible bodies, like so:

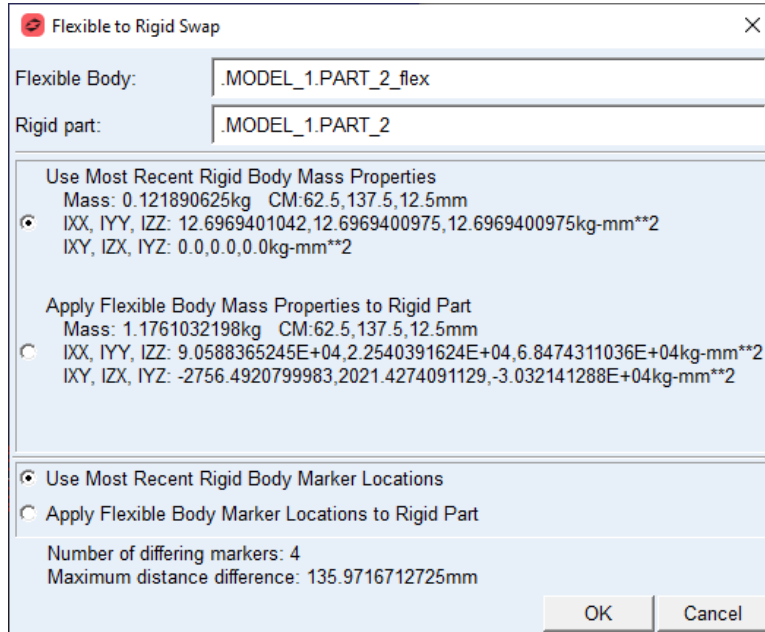

Adams Machinery

BearingAT: Cylindrical Roller Bearings Without Inner Ring

It is now possible to create cylindrical roller bearings without an inner ring. This applies to bearings created directly in Adams as well as those created from a REXS file import.

Adams PostProcessor

Performance Improvements with Large Flexible Bodies

Models containing large flexible bodies may exhibit performance improvements in the following areas:

- Loading existing animations can be up to 4X faster for some models.
- Preparing animations for the first time (“memory pre-caching”) can be up to 40% faster.

Preparing animations need only happen once due to the following improvements made to flexible body caching:

- Memory pre-caching will be saved to disk when you switch result set or animation type so that the time to prepare the animation is avoided when you return to it.
- Flex body cache files (.fcf) persist from session to session. This means that the work to prepare the flex body for animation is saved when you leave a session and reused when you return to the model

What's New

in a new session as long as the .fcf can be found. This avoids the time to prepare animations in subsequent sessions.

Order Analysis Plotting

This is an extension to Adams Post Processor's 3D FFT capability to allow generation of a 3D plot of an Adams result set component signal's amplitude over RPM slices versus order. The RPM is from a user-chosen reference rotational velocity Adams result set component. This reference rotational velocity must be monotonically increasing or, at least, have an average that monotonically increases. Adams can pick out such averages if, for example, the signal is sinusoidal about an increasing mean as in the case of many motor-driven rotating machinery applications.

FFT 3D

Curve Name: .plot_1.curve_1

Plot Type: Order Analysis Order Spectrum

Rotational Velocity: L_1.Last_Run.PART_2_XFORM.WZ
Min: 300.0 deg/sec = 50.0 RPM
Max: 3000.0 deg/sec = 500.0 RPM

X-Axis: Order

Y-Axis: Mag

Z-Axis: RPM

Start Velocity (rpm):

End Velocity (rpm):

Velocity Slice Size: 45.0

Percentage Overlap: 75

Window Type: Hamming


Points (Power of 2): 64

☐ Detrend Input Data

Plot on New Page

Apply Cancel

Order Analysis plots can be visualized as either 3D surfaces or colormaps, as shown below, that represent magnitude with respect to order and input rotational velocity:

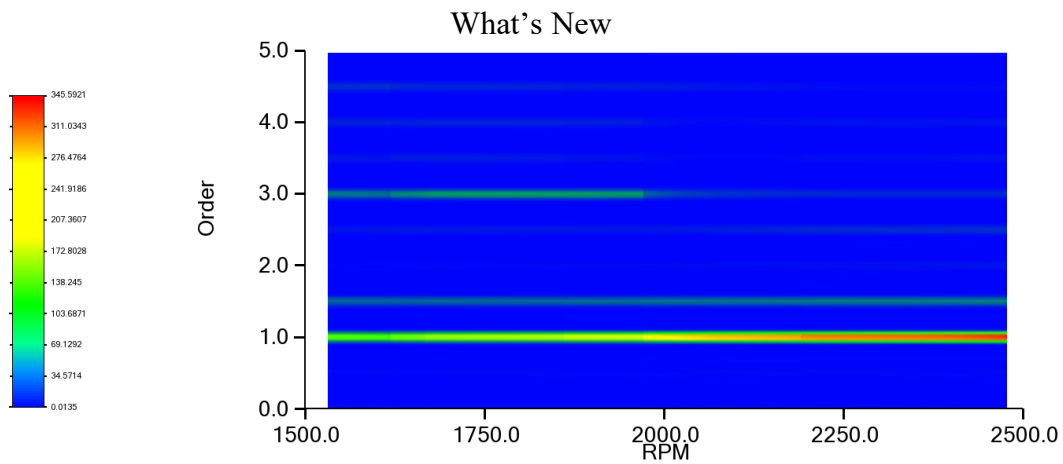

Abbreviation Option for Plot Unit Labels


It is now easy to change unit labels in plots to Abbreviations from Full Names. Examples of abbreviations for units vs full names might be:

Force: newton vs N

Time: sec vs s

Torque: newton-mm vs N-mm

This setting is found in Adams PostProcessor under *Edit* → *Preferences* as shown below:

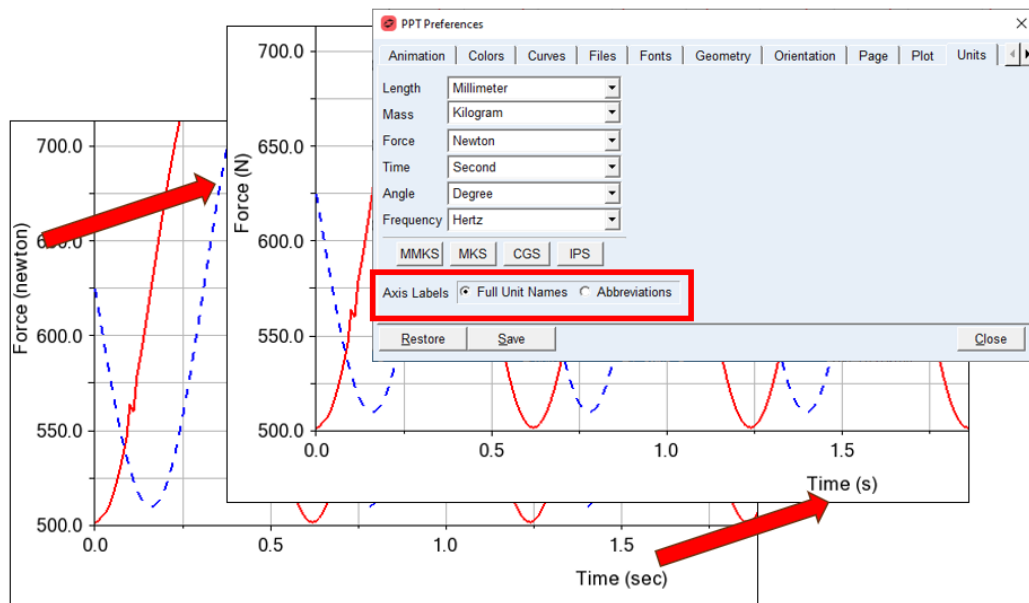

Adams Real Time

New Setup Guide for VI-grade Driving Simulator

A new document has been created that illustrates how to use an Adams Real Time model (exported from Adams Car) with VI-DriveSim and the VI-grade DESKTOP Simulator running in SIMulation Workbench (SimWB) on a Concurrent Redhawk Realtime OS. See the Adams Real Time documentation, located under the 'Adams Advanced Package' section of the documentation.

Tire Performance Improvements & New Capabilities

Models using the PAC2002 tire format can run up to *15% faster* in Real Time simulations, as compared to the previous version.

Belt Dynamics and 3D Enveloping Contact in Real Time

Tire models using *belt dynamics* effects can now run in Real Time. Tire property files that specify belt dynamics must be changed to use the new '*INTERNAL*' option to realize the performance benefits. Any simulation in Adams using tires with belt dynamics can be changed from the old settings of:

```
BELT_DYNAMICS = 'YES' OR BELT_DYNAMICS = 'EXTERNAL'
to the new setting of
BELT_DYNAMICS = 'INTERNAL'
```

As well, tires using the *3D enveloping contact* feature now run in Real Time simulations.

Adams View

CAD Interoperability Version Support

The following table lists the versions of the supported CAD formats that can be imported and exported in Adams 2023.3.

Format	Import Version	Export Version
IGES (.igs)	5.2 & 5.3	5.3
STEP (.stp)	203/214/242 P	214
ACIS (.sat)	All → R27	Not Supported
CATIA V4 (.model, .dlv, .exp, session)	All 4.XX	Not Supported
CATIA V5 (.CATPart, .CATProduct)	R10 → R33	Not Supported
CATIA V6 (.3dxml)	2014X → 2022X	Not Supported
Pro/Engineer part files (.prt, .asm)	13 → Creo 9	Not Supported
Inventor (.ipt, .iam)	All → 2023	Not Supported

What's New

Format	Import Version	Export Version
Solidworks (.sldprt, .sldasm)	99 → 2023	Not Supported
Unigraphics (.prt)	11.1 → NX CR 1953, 1957 and 1969, 2212	Not Supported
JT : JtOpen (.jt)	7.0 → 10.5	Not Supported


Adams 2023.2 Release Notes

Adams Car	129
Adams Car Preferences	129
Request Map Editor Updates	130
Adams Controls	131
Allow Additional Files when Building FMUs	131
Adams Co-simulation Interface	131
Supported Versions of Software for Marc Co-simulation	131
Adams Drill	132
Adams Drill 2022.4 is the Last Release	132
Adams Linear	132
FE_PARTs Work with Adams Linear & Animation	132
Adams Machinery	132
GearAT: Multi-Gear Shafts	132
Adams Real Time	133
Update Earlier Adams Car FMUs	133
Adams Solver	133
Direct Export to .mat (HDF5) Format	133
Adams View	134
Warnings & Errors Now Color-Coded	134
CAD Interoperability Version Support	134

Adams Car

Adams Car Preferences

Setting preferences in Adams Car has been simplified with the new Preferences (*Settings* → *Preferences*) panel. Past versions required users to edit the *.acar.cfg file in a text editor to persist settings; now it is much easier in a graphical user interface, like so:

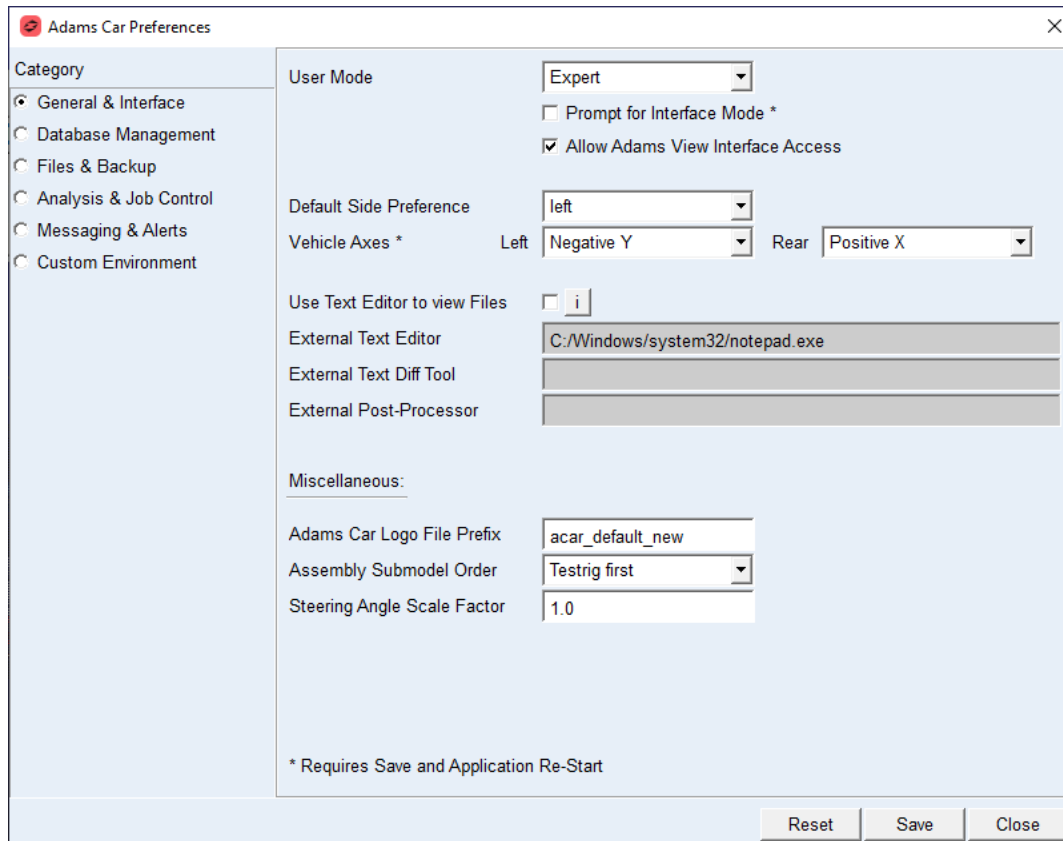

Note:

Changes made in the Preferences panel get written to the private *.acar.cfg file. The location of this file is reported in the Command Window (press F3 to open Command Window):

```
File 'file://c:/.../.acar.cfg' successfully copied to
'file://c:/.../.acar.cfg.23-06-16.132321'.
save configuration - backup created of previous configuration file c:/.../.acar.cfg
```

What's New

Note:

Existing *.acar.cfg files from older Adams versions (prior to v2023.2) undergo a one-time conversion process to a new format. This new format is not understood by previous (v2023.1 and prior) Adams versions, so launching older Adams versions will not reflect changes made in the newer format.

For users who regularly switch between older and newer versions, it is recommended to save an old-style acar.cfg to a different name (acar_legacy.cfg) and use the 'ACar Preferences' section of the Registry Editor to reference this old-style file. Then, simply maintain the default Preference setting in newer versions. Refer the article [Adams Car preferences, private configuration file changes and incompatibility](#) for further details.

Request Map Editor Updates


The Request Map Editor functionality is now used for both RPC and MAT file export. As such, the Request Map Editor and Request Map Activity dialog boxes contain minor cosmetic changes to better support both formats:

	Request Name	Components	Major Role	Minor Role
1	vas_brake_demand.request	2	analysis	any
2	vas_clutch_demand.request	2	analysis	any
3	vas_gear_demand.request	2	analysis	any
4	vas_steering_demand.request	2	analysis	any
5	vas_throttle_demand.request	2	analysis	any

Adams Controls

Allow Additional Files when Building FMUs

Adams Controls can be used to create Functional Mockup Unit (FMU) files. The export process for FMU creation has been enhanced to let the user include arbitrary files in the fmu. This is useful for cases where the fmu model requires an additional dll or data file, for example, to run properly. There are several ways to create an FMU file in Adams View or Adams Car; the 'Car General FMU Export' dialog box, below, shows the new *Add to FMU* field that allows users to browse for files that will be packaged into the fmu:

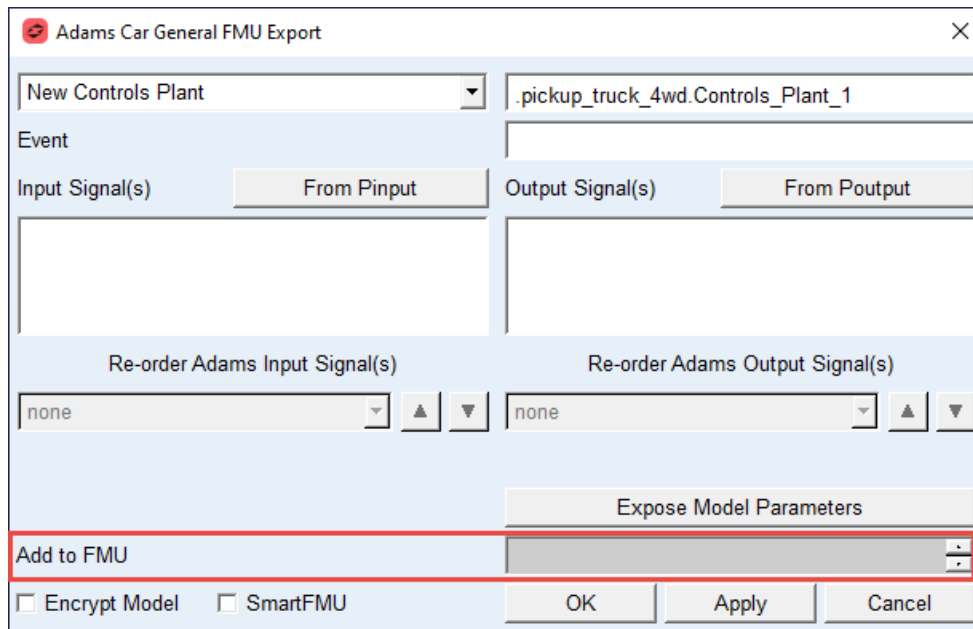

Adams Co-simulation Interface

Supported Versions of Software for Marc Co-simulation

An updated table of the Adams co-simulation Interface supported versions of Marc is shown below:

Marc version	ACSI supported version
Marc 2013.0	ACSI 2014.0, 2014.0.1
Marc 2013.1	ACSI 2014.0, 2014.0.1
Marc 2014.0	No support for ACSI
Marc 2014.1	No support for ACSI
Marc 2014.2*	ACSI 2015-2015.1, ACSI 2016* -

What's New

Marc version	ACSI supported version
	2019.0*
Marc 2015*	ACSI 2015-2015.1, ACSI 2016* - 2019.0*
Marc 2016 and later	ACSI 2015 and later

* The ACSI 2016 and later versions require a workaround for the case of Adams models co-simulating with Marc versions 2014.2 and 2015. Marc 2016 does not require this workaround. For details see the “Special requirements to run Marc” section of the Adams product documentation (Online Help) under “Adams Co-simulation Interface.”

Adams Drill

Adams Drill 2022.4 is the Last Release

Beginning with Adams 2023.1, Adams Drill is no longer included in Adams releases. If you have any questions about the transition, please contact your Hexagon Account Manager.

Adams Linear

FE_PARTs Work with Adams Linear & Animation

FE_PART elements now support Adams Linear animations. In the prior release, the FE_PART worked with Adams Linear solutions but animation was not supported. It is now possible to perform Linear simulations in Adams with models containing FE_PARTs and view tables for eigenvalues & vibration results as well as animate the linearized system.

Note:

Only the formulation of “3D Beam” for the FE_PART is supported in Adams Linear for this release. The “2D Beam” methods will not work with Adams Linear for this release.


Adams Machinery

GearAT: Multi-Gear Shafts

Modeling geared systems having multiple gears on a single shaft that are in contact with other gears has traditionally been a difficult task. GearAT has been enhanced to automatically orient gears in contact so that initial conflicts (penetration of gear teeth) are avoided and complex geared systems begin the simulation in a suitable configuration.

Multiple full-flex gear elements can be mounted to flexible shaft elements and oriented into consistent initial configurations for a gear system. In the past, this process was laborious and error-prone; in this release much of the connection & orientation logic is handled by GearAT.

What's New

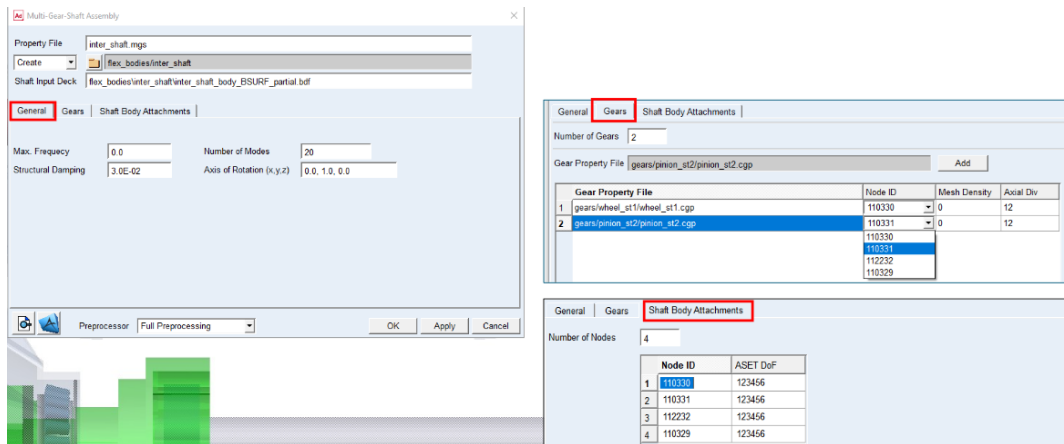

Adams Real Time

Update Earlier Adams Car FMUs

FMUs generated before Adams 2021.3 and contain Adams Car model .adm files need to be updated in order to be solved in 2021.3 and beyond. Due to the elimination of the Adams Chassis product, there is no “apresolver” library anymore which may be referenced by older .adm files. So, please regenerate such FMUs from this version or later of Adams.

Adams Solver

Direct Export to .mat (HDF5) Format

It is now possible to export simulation results directly to the Matlab .mat format from an Adams Solver simulation. The .mat format is version 7.3, which is an HDF5-based format. The OUTPUT statement for Adams Solver now supports the following new option:

OUTPUT/MATSAVE

This statement can be added to your model in Adams View & Adams Car via the *Settings* → *Solver* → *Output* menu picks, selecting the 'More' checkbox, then selecting the 'Durability Files' sub-category:

```
File 'file://c:/.../.acar.cfg' successfully copied to  
'file://c:/.../.acar.cfg.23-06-16.132321'.  
save configuration - backup created of previous configuration file c:/.../.acar.cfg
```

Enabling this setting will export REQUEST elements in the model to the .mat format. Which REQUESTs are saved differ like so:

1. Adams View models: all REQUEST elements in the model are saved to a .mat file when the simulation completes.

What's New

2. Adams Car models: if a Request Map file is used (*Tools* → *Requests* → *Request Map Editor*) then only the REQUESTs defined in the Request Map file are exported. If Request Maps are not used then all active REQUESTs are exported to the .mat file.

Note:

This release of Adams Python also includes the **h5py** (<https://docs.h5py.org/en/stable/>) module for working with HDF5 files via Python scripting, for example:

```
import h5py

# Print all keys (result names) found in .mat file:

with h5py.File('somefile.mat') as f:


    for res_key in f.keys():

        print(res_key
```

Adams View

Warnings & Errors Now Color-Coded

Warning & Error messages that appear in the Message Window in Adams View & Adams Car are now displayed using different colors. It should now be easier to distinguish between the three levels of Information, Warning & Error Messages:

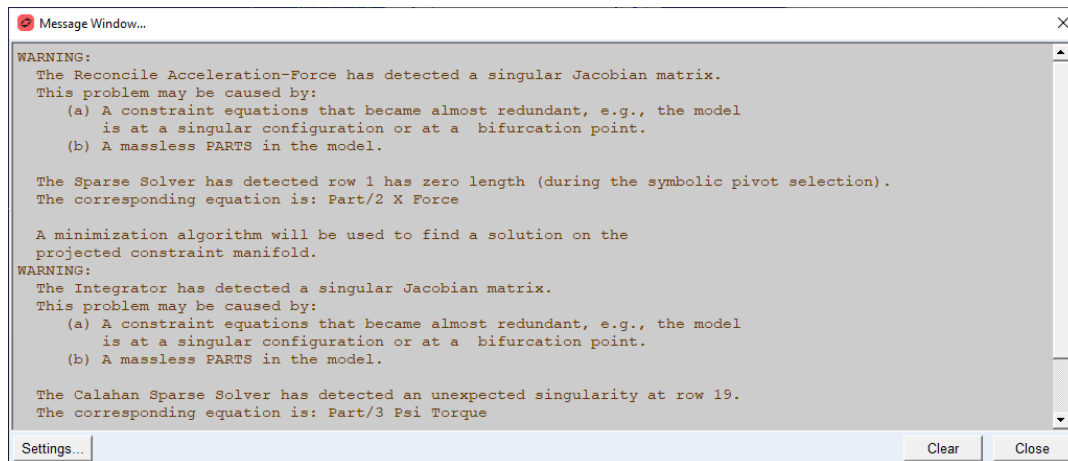

CAD Interoperability Version Support

The following table lists the versions of the supported CAD formats that can be imported and exported in Adams 2023.2.

What's New

Format	Import Version	Export Version
IGES (.igs)	5.2 & 5.3	5.3
STEP (.stp)	203/214/242 P	214
ACIS (.sat)	All → R27	Not Supported
CATIA V4 (.model, .dlv, .exp, session)	All 4.XX	Not Supported
CATIA V5 (.CATPart, .CATProduct)	R10 → R31	Not Supported
CATIA V6 (.3dxml)	2011 → 2013X	Not Supported
Pro/Engineer part files (.prt, .asm)	13 → Creo 8.0	Not Supported
Inventor (.ipt, .iam)	All → 2021	Not Supported
Solidworks (.sldprt, .sldasm)	99 → 2021	Not Supported
Unigraphics (.prt)	11 → NX CR 1953, 1957 and 1969	Not Supported
JT : JtOpen (.jt)	7.0 → 10.5	Not Supported

Adams 2023.1 Release Notes

Adams Car	137
Automatic Ride Height Adjustment in Suspension Analyses	137
Adams Co-simulation Interface	137
Supported Versions of Software for Marc Co-simulation	137
Adams Drill	138
Adams Drill 2022.4 is the Last Release	138
Adams Linear	138
Linear Support for FE_PARTs	138
Adams Machinery	138
Romax to Adams Translator: Expanded List of Elements	138
Gear AT: New orientation method for cylindrical gear pair by clearance study	139
EMag AT: New Detailed Motor Type	141
Adams PostProcessor	142
Animation Performance Improvements	142
Adams Real Time	143
Switching Mini-Maneuvers in Real Time	143
Parametric Support for dSPACE FMUs	143
Adams Solver	143
New INTEGRATOR Setting: ADAPTIVITY	143
Adams Vibration	144
ODS Animation Performance Improvements	144
Adams View	144
New Nonlinear Bushing Element	144
AutoSave in Adams View & Adams Car	145
CAD Interoperability Version Support	146

Adams Car


Automatic Ride Height Adjustment in Suspension Analyses

To make it easier to set the ride height prior to subsequent analyses, the suspension testrig (__MDI_SUSPENSION_TESTRIG) now includes a body (chassis) part constrained to ground with an adjustable force. The user sets the target ride height, and the body moves up or down during the initial static equilibrium phase, prior to the desired suspension analysis.

Background: When you enable *Ride Height Adjustment*, you specify the target ride height relative to the design position. The target ride height is achieved during static equilibrium. In subsequent transient or quasi-static, or static analyses of that event, the ride height remains fixed.



The alignment button , when running a suspension analysis, displays a new option for *Body Ride Height*, as shown below:

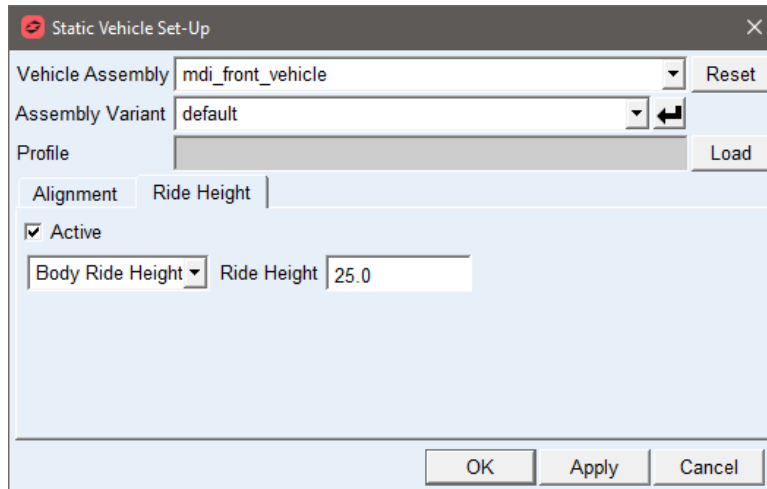

Adams Co-simulation Interface

Supported Versions of Software for Marc Co-simulation

An updated table of the Adams co-simulation Interface supported versions of Marc is shown below:

Marc version	ACSI supported version
Marc 2013.0	ACSI 2014.0, 2014.0.1
Marc 2013.1	ACSI 2014.0, 2014.0.1
Marc 2014.0	No support for ACSI

What's New

Marc version	ACSI supported version
Marc 2014.1	No support for ACSI
Marc 2014.2*	ACSI 2015-2015.1, ACSI 2016*-2019.0*
Marc 2015*	ACSI 2015-2015.1, ACSI 2016*-2019.0*
Marc 2016 and later	ACSI 2015 and later

* The ACSI 2016 and later versions require a workaround for the case of Adams models co-simulating with Marc versions 2014.2 and 2015. Marc 2016 does not require this workaround. For details see the “Special requirements to run Marc” section of the Adams product documentation (Online Help) under “Adams Co-simulation Interface.”

Adams Drill

Adams Drill 2022.4 is the Last Release

Beginning with Adams 2023.1, Adams Drill is no longer included in Adams releases. If you have any questions about the transition, please contact your Hexagon Account Manager.

Adams Linear

Linear Support for FE_PARTs

Prior to this release of Adams, models containing FE_PARTs could not be used for an Adams Linear analysis. This release supports models with FE_PARTs but only in tabular output form. Animation of Linear results with models containing FE_PARTs is not yet supported; this will appear in a future release.

Adams Machinery

Romax to Adams Translator: Expanded List of Elements



More Romax modelling entities may now be translated into Adams Machinery components, including:

- Straight / Spiral Bevel Gear types: modelled with the Romax Detailed or Romax Concept methodologies
- Hypoid Gear types: modelled with the Romax Detailed or Romax Concept methodologies
- Romax Loading Planetary Gear Set: mapped to equivalent arrangement of Adams PARTs and general constraints
- Improved handling of mass properties related to Shaft & Bore dimensions for Romax Detailed and Romax Concept gears

Gear AT and Bearing AT: Consolidation under Machinery ribbon containers

In previous release of Adams, Gear AT and Bearing AT menus were accessible from Machinery ribbon each having its dedicated container. In this release, Gear AT and Bearing AT menu buttons were moved to reside within the Machinery Gear and Bearing containers, respectively.


What's New

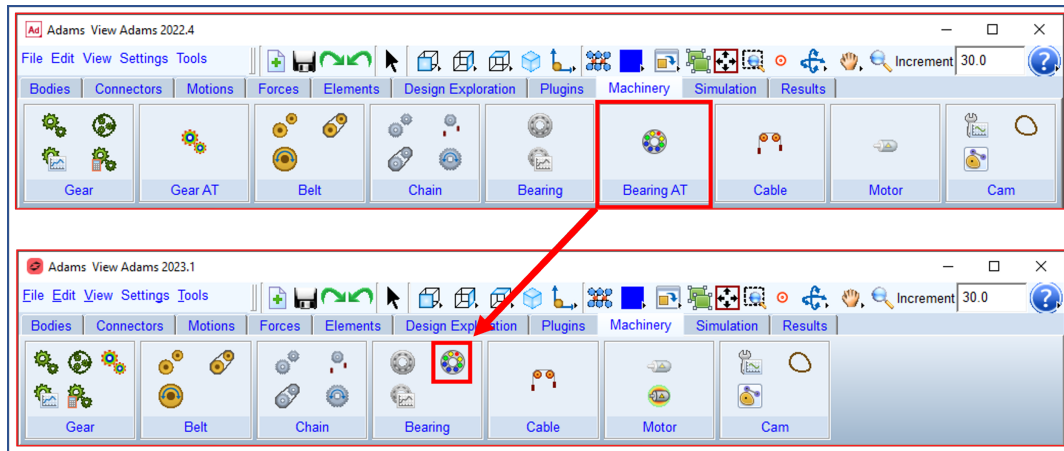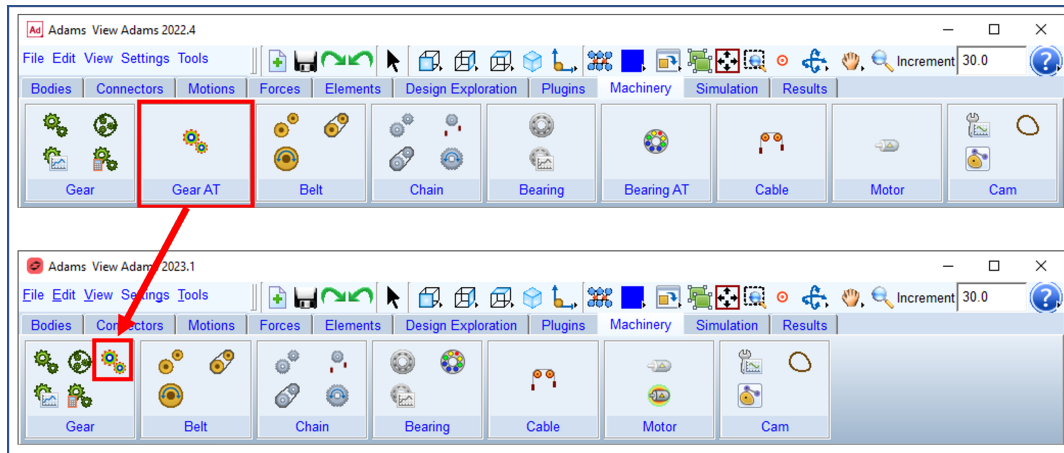




Gear AT: New orientation method for cylindrical gear pair by clearance study

Prior to this release of Adams, Gear AT cylindrical gear elements were parametrized in a gear pair during gear force creation by use of formula, so the gear meshing was properly set up. However, this approach imposed some limitations when complex gear trains had to be set up, such as planetary stage, gear train with idler gear and when a gear shaft misalignment had to be imposed at design position.

What's New

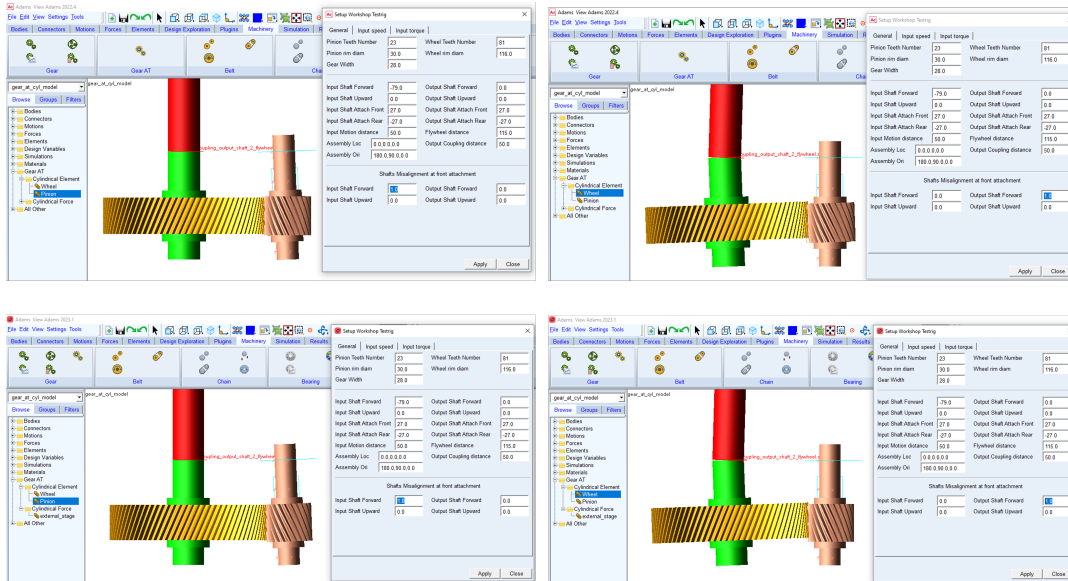

In current Adams release those limitations are removed by using new orientation method which is based on clearance study. In background, Adams creates model to run clearance study of a gear pair using gear rim solid geometry to correctly orient the gears. Please note that the process will fail in case there is no clearance possible in current gear pair set up.

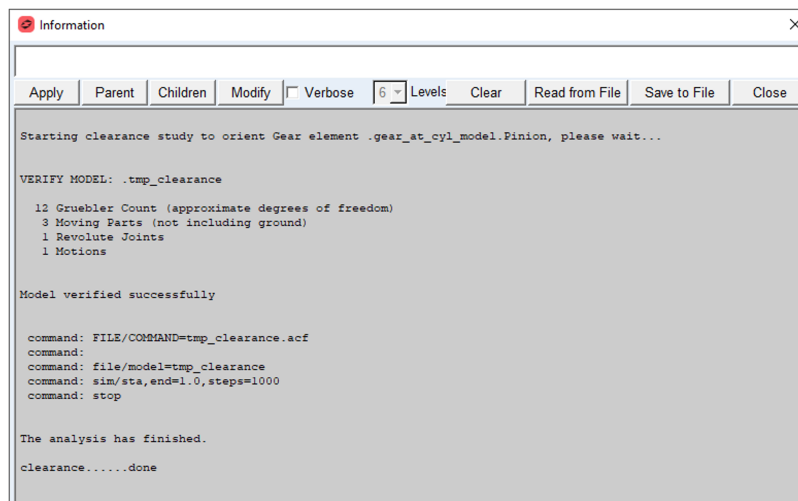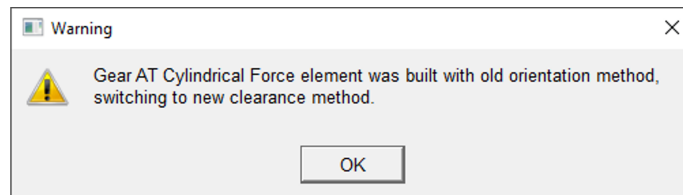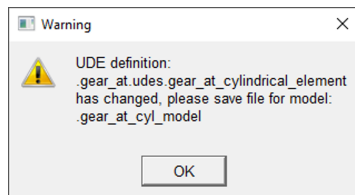

Bearing AT: TeimOrbit Support for Cylindrical and Needle Roller Bearings

What's New

Property files for Cylindrical & Needle Roller Bearings have been consolidated into a single file using the TeimOrbit file format. This file format is human-readable and logically structured, which simplifies the task of organizing and inspecting property files. Users will now use a single property file of type *.NPF and single contact file of type *.NCF (for the needle roller bearing) where previously four files were needed (*.NPF, *.NIF, *.NOF and *.NCF for contact). Similarly for the cylindrical roller bearing, there will be now a single property file of type *.RPF and single contact file of type *.RCF where previously four files were needed (*.RPF, *.RIF, *.ROF and *.RCF for contact).

If older-style property files are referenced when creating a bearing, the user is prompted to accept a conversion procedure that produces the new-style property file.


The number of rollers is limited to 150 elements and the number of bearings is capped at 50. It is anticipated that these limits will increase in the next release of Adams

EMag AT: New Detailed Motor Type

It is now possible to define a motor element based on magnetic force density data (*.tab) files, typically produced from a package such as Ansys Maxwell. A high-fidelity EMag AT motor requires the following pieces of information:

1. Common electromotor parameters.
2. Harmonic Force data files .emh (as a collection of Fourier series , created from the original time-domain .tab files) for the 4 drive cycles (drive forward/reverse, brake forward/reverse), or optionally directly the time-domain .tab files.
3. Stator and Rotor FE models as .bdf (nastran bulk data files).

What's New

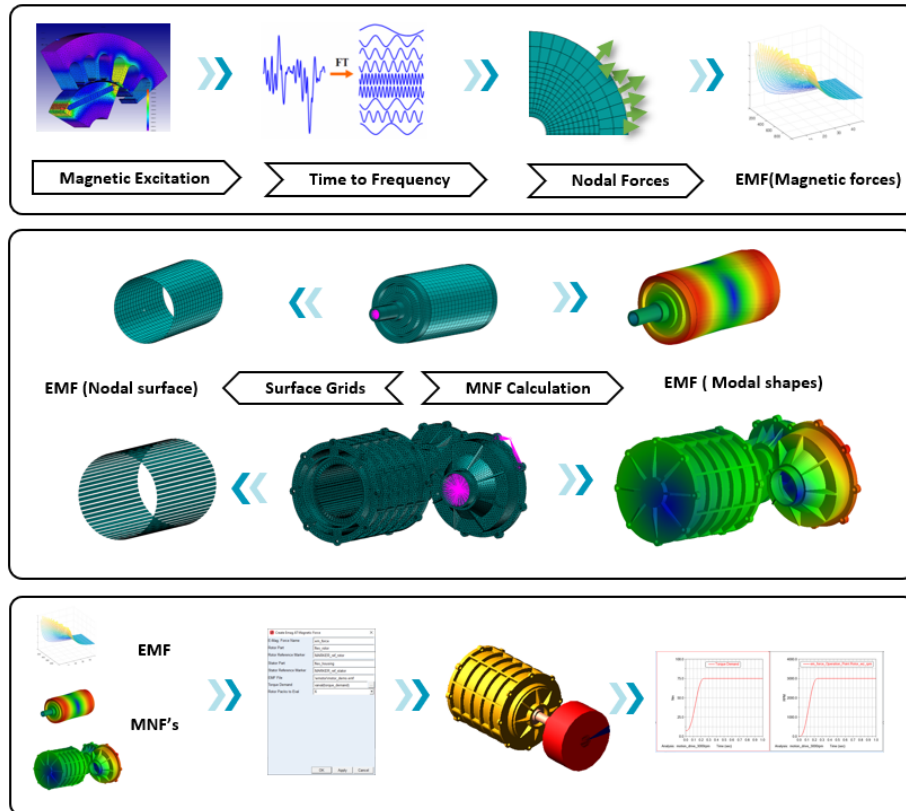

Adams PostProcessor

Animation Performance Improvements

Animation performance has been enhanced for models containing large FE_PARTs. In addition, Clearance computations in PostProcessor have been improved, specifically:

- FE_PART animation: models containing FE_PART elements with larger numbers of nodes (20+ nodes) animate significantly faster; select models show between 3X and 8X speed improvement for animation display.
- Clearance computations in PostProcessor show improvement for models containing large flexible bodies. Up to 4X improvement has been observed for the computation time required to display Clearance results in PostProcessor with select models containing flexible bodies having a large number of nodes & modes.

Adams Real Time

Switching Mini-Maneuvers in Real Time


While running Real Time simulations, the time to switch between mini-maneuvers may result in a large runTime spike. This is largely due to initial conditions computations that are executed immediately after switching mini-maneuvers. You can dramatically reduce the time to switch between mini-maneuvers by setting the environment variable ADAMS_REALTIME_MINI_FAST.

Note:

You need to ensure that function expressions set on the actuators, such as steering, throttle, etc, through the .xml event files are continuous as no initial condition operations are performed, otherwise acceleration spikes may occur.

Parametric Support for dSPACE FMUs

Functional Mockup Units (FMUs) created for the dSPACE platform now support parametrics. With this functionality, it is easy to change an operating parameter of a model before the simulation and investigate different model configurations. When exporting an Adams model as an FMU, users can choose to 'Expose Model Parameters', as shown below.

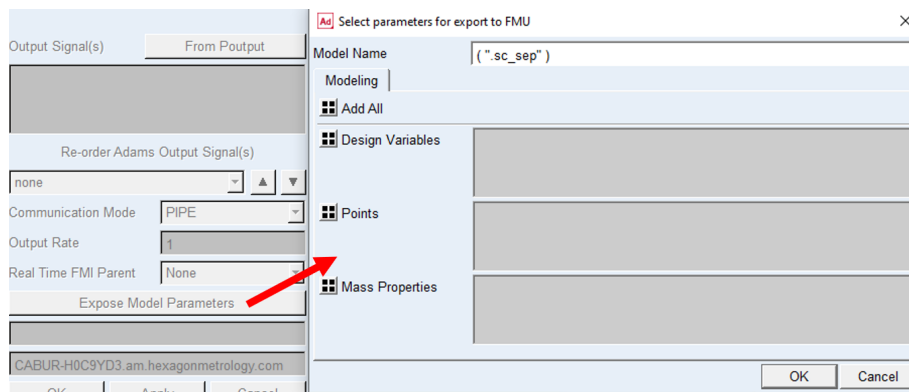

FMUs exported from Adams View can have Design Variables, Point Locations & Mass Properties as parameters. In Adams Car this list also includes Property Files and User Defined Element (UDE) parameters.

Adams Solver

New INTEGRATOR Setting: ADAPTIVITY

The (default, as opposed to the legacy Fortran Solver) Adams C++ Solver supports a new argument named ADAPTIVITY that is intended to make simulations more robust when the integrator is taking a very small

What's New

stepsize. ADAPTIVITY, which is on by default, relaxes the ERROR tolerance when the integrator stepsize is very small and applies to GSTIFF (I3 and SI2 formulations) and HHT. This change has yielded better Solver robustness across a range of problematic models.

Note:

The ADAPTIVITY formulation in the (default) C++ Solver differs from the legacy Fortran Solver. Users familiar with ADAPTIVITY in the Fortran Solver should not assume identical behavior with the C++ Solver

ADAPTIVITY is turned **on by default for this release** (C++ Solver only) and may be deactivated by setting ADAPTIVITY = 0 on the INTEGRATOR command.

Adams Vibration

ODS Animation Performance Improvements


Operating Deflection Shape (ODS) animation performance has been improved, specifically for models containing large flexible bodies. The process of creating an ODS animation object can be nearly 2X faster for some models. Navigating between animation frequencies can be up to 8X faster for other large models.

Adams View

New Nonlinear Bushing Element


Traditional bushing elements in Adams View have linear force-displacement and force-velocity characteristics. It is now possible to create a Nonlinear Bushing in Adams View having nonlinear relationships for the individual force components with respect to displacement and velocity.

This new bushing type can be accessed via the Advanced Bushing element, in the Forces panel:

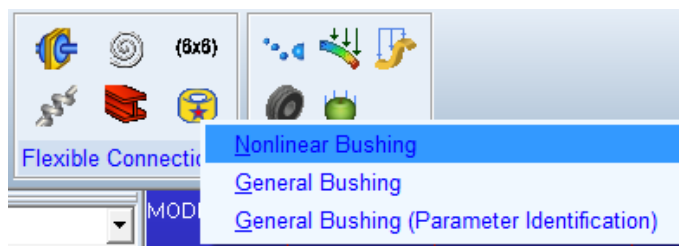


When creating/modifying this bushing a Property File reference is required to define the characteristics. Property File contents can be viewed/edited graphically via the Curve Manager:

What's New

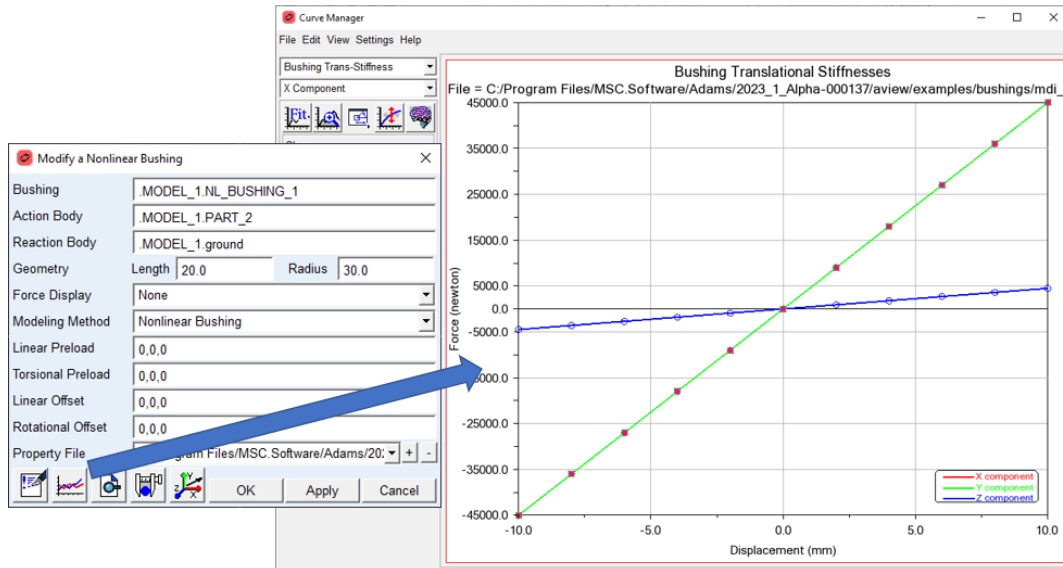

AutoSave in Adams View & Adams Car

Adams View and template-based products (such as Adams Car) now provide AutoSave functionality, automatically saving the session as a bin file every X number of minutes. This feature must be enabled via the 'Settings & License' pick from the Adams startup menu and is found under the *Shared* → *Preferences* node:

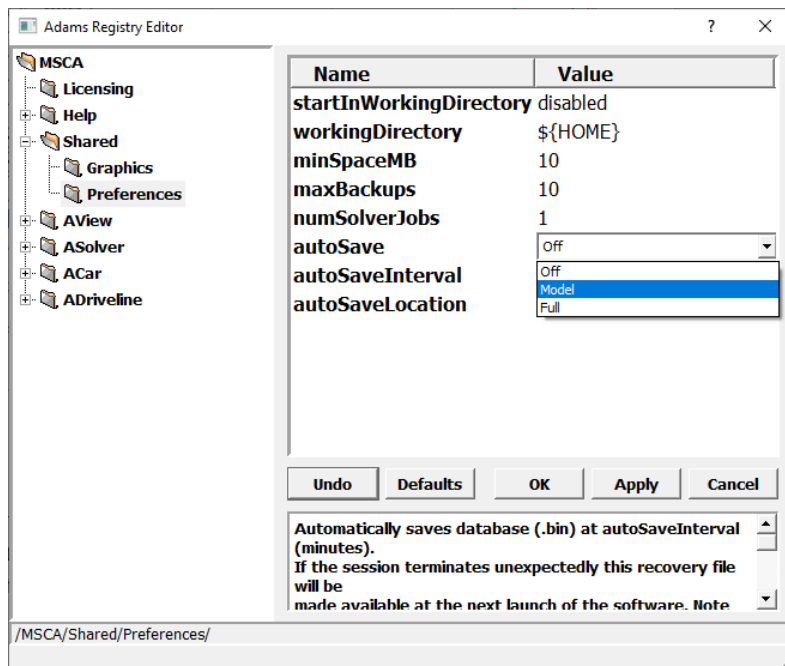

CAD Interoperability Version Support

The following table lists the versions of the supported CAD formats that can be imported and exported in Adams 2023.1.

Format	Import Version	Export Version
IGES (.igs)	5.2 & 5.3	5.3
STEP (.stp)	203/214/242 P	214
ACIS (.sat)	All → R27	Not Supported
CATIA V4 (.model, .dlv, .exp, session)	All 4.XX	Not Supported
CATIA V5 (.CATPart, .CATProduct)	R10 → R31	Not Supported
CATIA V6 (.3dxml)	2011 → 2013X	Not Supported
Pro/Engineer part files (.prt, .asm)	13 → Creo 8.0	Not Supported
Inventor (.ipt, .iam)	All → 2021	Not Supported
Solidworks (.sldprt, .sldasm)	99 → 2021	Not Supported
Unigraphics (.prt)	11 → NX CR 1953, 1957 and 1969	Not Supported
JT : JtOpen (.jt)	7.0 → 10.5	Not Supported

Running Adams Products

Starting Adams Products	148
Setting Preferences	151
Setting Your Working Directory	152
Tool Tips	153

Starting Adams Products

This sections described how you can start your Adams products on Linux and on Windows.

Starting Adams Products on Linux

The Adams Toolbar is a starting point to using Adams products on Linux. The toolbar is shown below.

Adams Toolbar tool - Right click to set up Toolbar, manage memory models, access online help and Technical Support resources and more



Product tools - Click to run product or right-click to configure products and create user libraries.

Hold the cursor over a tool to see the name of the associated product.

You can also use the Adams Toolbar to:

- Customize, keep track of, and organize multiple libraries of standard Adams products
- Create binaries
- Manage custom memory models and product preferences

For more information on these or other Adams Toolbar operations, see the Running and Configuring online help (from the *Help* menu in any product, select *Adams Help*, on the left pane, select *Configuring Adams*).

To start a product on Linux:

1. To display the Adams Toolbar, at the command prompt, enter the command *adamsx* where *x* is the version number, for example *adams2022_1*.
2. Click on the tool representing the product you want to start.

Note:

We recommend that you use the Adams Toolbar to start your Adams products, but if you want to automate certain operations, use the text-based Program Menu. For more information, see the Running and Configuring online help.

Starting Adams Products on Windows

You start any Adams product from the Start menu. You can also use the Start menu to:

- Change your license type
- Generate problem reports
- Set Adams preferences

For more information on these or other operations, see the Running and Configuring online help.

To start a product on Windows:


- From the *Start* menu, point to *Programs*, point to *Adams 2025.1 Beta*, point to the name of the product you want to start.

Tip:

Select the corresponding desktop icon for the product, if you installed it on your desktop.

To start a product from DOS shell in Windows:

- *Start* → *Programs* → *Adams 2025.1 Beta* → *Command Prompt*.
- An alternative is to add the */bin* directory under the Adams installation directory to your user PATH environment variable. You can do this via the Control Panel:
 - a. Type *environment* in the Control Panel search box.
 - b. Select the *Edit environment variables for your account* pick.

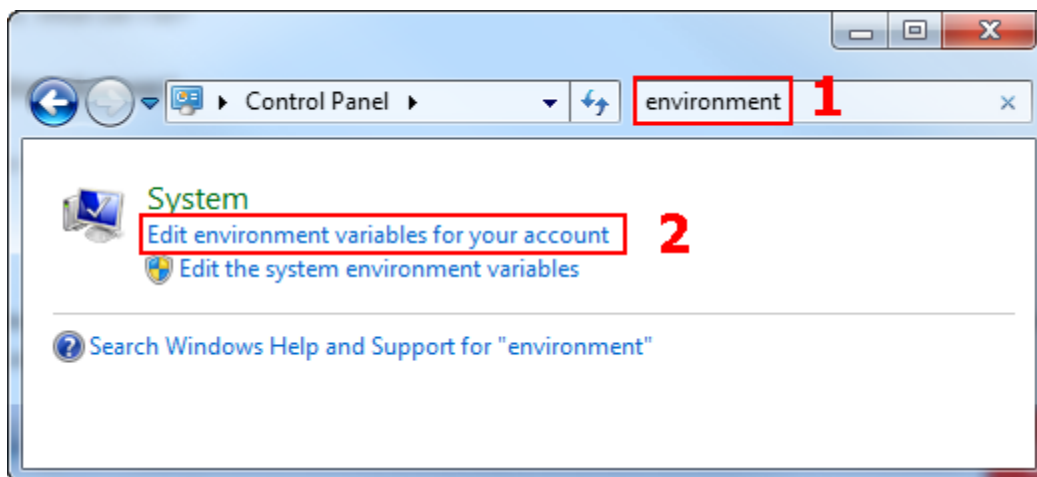


- Check to see if you already have a PATH variable defined under “*User variables*”. If it exists then edit it, add a semicolon “;” to the end of the existing value, and then add the “bin” directory under the Adams installation directory. Otherwise select *New...*, use PATH for the variable name and add the “bin” directory under the Adams installation directory as the value. The default location of this directory is:

Running Adams Products

Windows Adams:

C:\Program Files\MSC.Software\Adams\2023_1_XXXXXX\bin
where XXXXXX denotes build number.

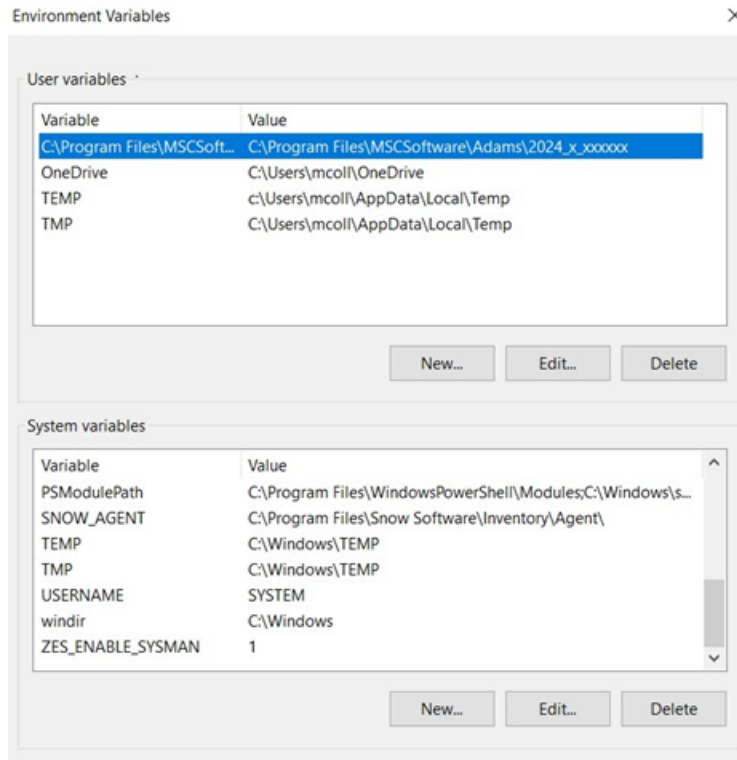

- Once you are done click *OK*.

Note:

Windows appends your User PATH to the System PATH environment variable, so there is no need to copy the existing System PATH variable to your user PATH variable. This behavior is unique to the User PATH variable. For all other environment variables, a User variables definition overrides a System Variables definition.

Setting Preferences

This section describes how you can set preferences, such as your working directory, graphics setting, and memory model size.

Setting Preferences on Linux

You use the Registry Editor from the Adams Toolbar to set a variety of preferences. For information on the preferences you can set, see the Running and Configuring online help.

To display the Registry Editor:

- From the *Adams Toolbar*, right-click any product tool, and then select *Change <Product Name> Settings*.

Setting Preferences on Windows

You use the Settings menu to modify:

- Graphics settings
- Memory model size

To display the Settings dialog box:

- From the *Start* menu, point to *Programs*, point to *Adams 2025.1 Beta*, and then select *Settings & License*.

Setting Your Working Directory

During a session in a default or custom product, you can select the directory where you want to place your model and output files.

For Adams View, you can set the working directory from the Welcome dialog box.

To set your working directory:

1. From the *File* menu, select *Select Directory*.
2. In the dialog box that appears, select the working directory.

Tool Tips

Tool tips display information about the item the cursor is currently over in an Adams product. The following shows the tool tip that appears when you place the cursor over the link geometry tool.



Tool Tip

To display tool tips:

- Move the cursor over the item in the interface on which you'd like information.
A brief description of the item appears.


Getting Help

Online Help	155
Tutorials and Examples	160

Getting Help

Online Help

To help you use the Adams products, Hexagon provides online help (HTML format). To view the online help and tutorials, you can use your default Web browser. An example of online help is shown below.

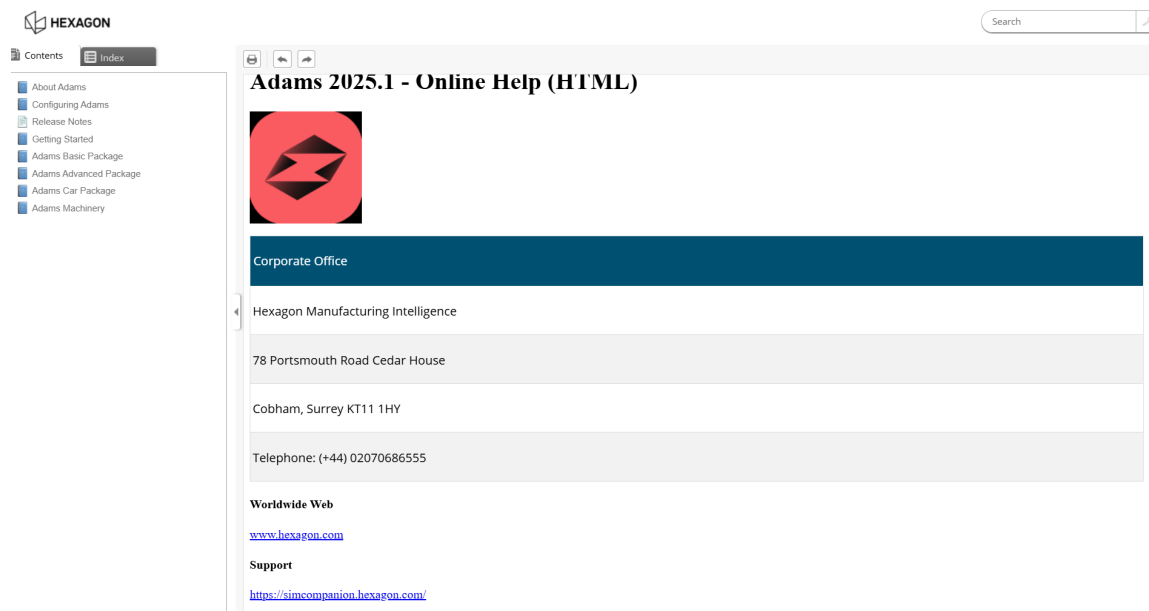

Versions of Web Browsers

For the Adams Help system, all you need is a Windows, Macintosh, or Linux computer running a fairly new browser with JavaScript enabled. If JavaScript is not enabled, then the Help set will not display in its entirety.

Accessing the Online Help

You can view help for a dialog box, a product, or for all Adams products. The figure below shows the help for all Adams products, called the integrated master site. You can use this site to view any product's help and search across all product help. You can also access release notes for all products, and view the documents in Adobe Reader.

Note:

The PDFs is no longer embedded with the help system from Adams 2025.1 Beta release. The PDFs made available in the Hexagon Product Document Center (<https://nexus.hexagon.com/>)

Getting Help

To get help on a dialog box:

1. Click in the dialog box for which you need help.
2. Press *F1*.

Adams launches a browser window that contains information about the dialog box.

To get general help on your product:

- From your product's *Help* menu, select *Product Name Help* (where *Product Name* is the name of your Adams product).

Adams launches a browser window that contains the starting point for your product's online help.

To open the Adams online help from the Adams Toolbar:

- Right-click the Adams Toolbar tool, and then select *Online Help*.

Your default browser starts and displays the master site for Adams online help.


To open the Adams online help from the Start Menu:

- From the *Start* menu, point to *Programs*, point to *Adams 2025.1 Beta*, and then select *Online Help*.

Your default browser starts and displays the master site for Adams online help.

Navigating through the Help


The navigation panel on the left side of the Help window displays the help topics for each Adams product. Click the closed book icon () to expand, or the open book icon () to collapse the entries beneath. Topics with no icon contain no subordinate topics. Use the left () and right () arrows to page forward and backwards through the help topics.

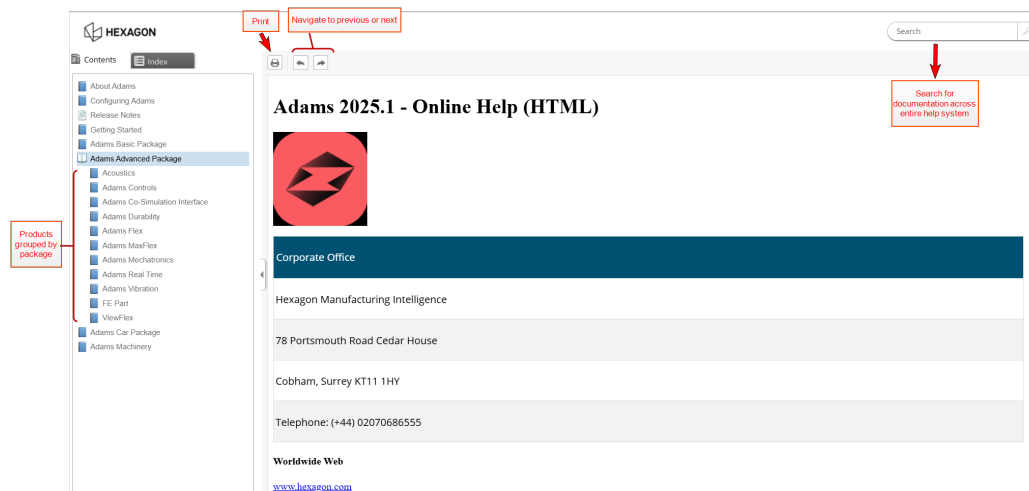

Getting Help

Left Pane Adjustment


To adjust the left pane size, drag the icon  in the separator as shown below.

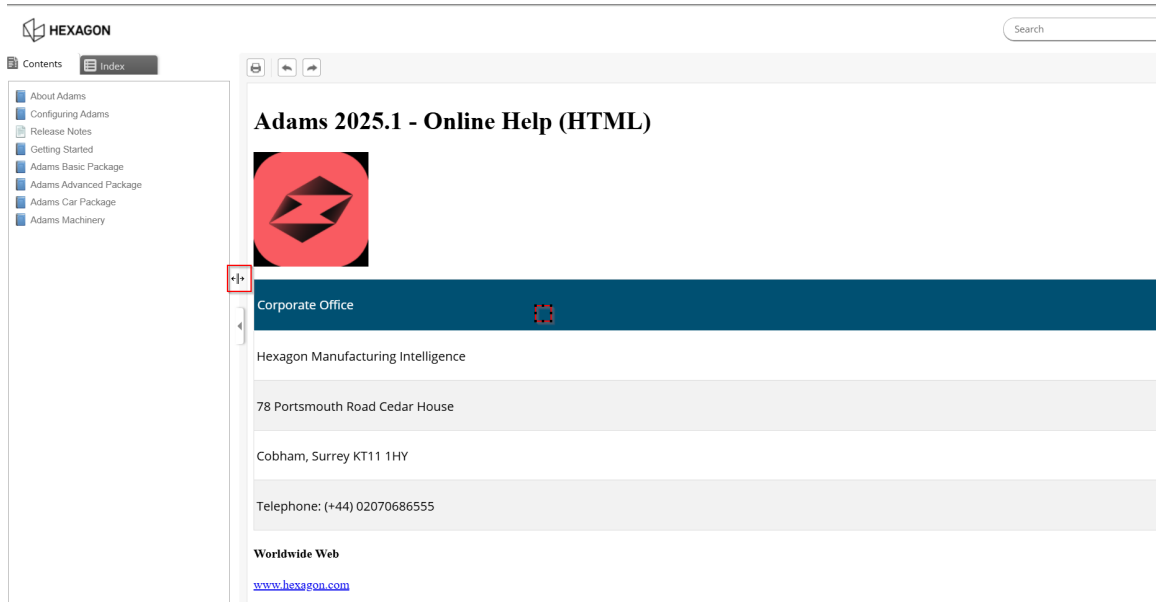

Note: The adjustment of the Left Pane is not available in Internet Explorer.


Searching

You can search all the help files in HTML format for a particular product or all Adams products.

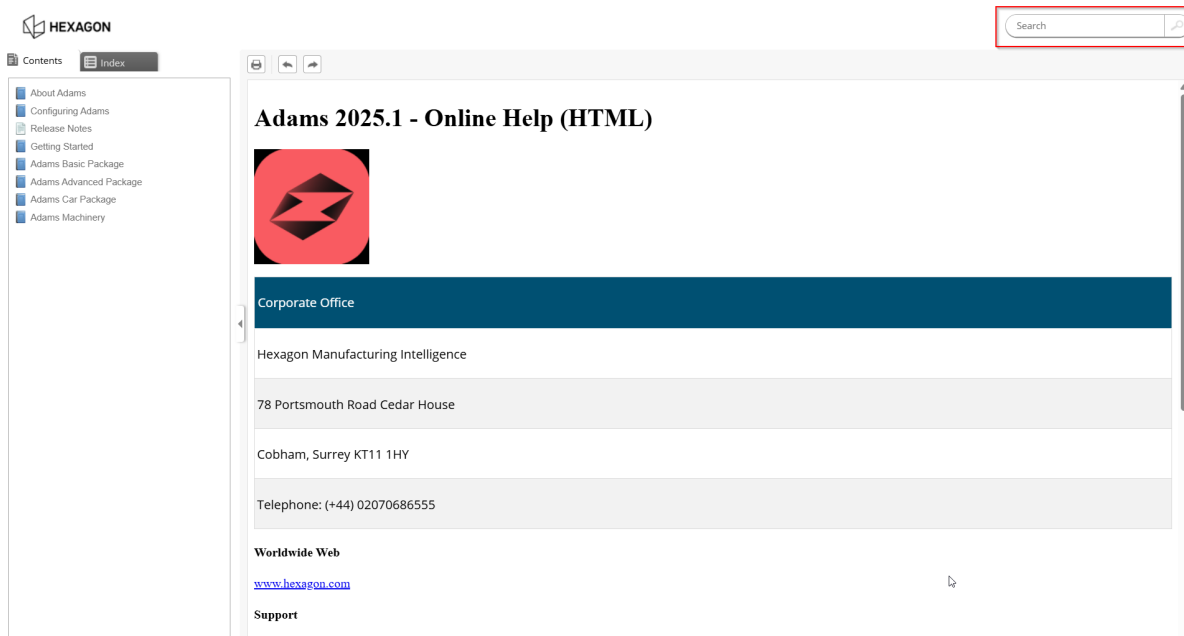

Getting Help

The results are shown on the same page below.

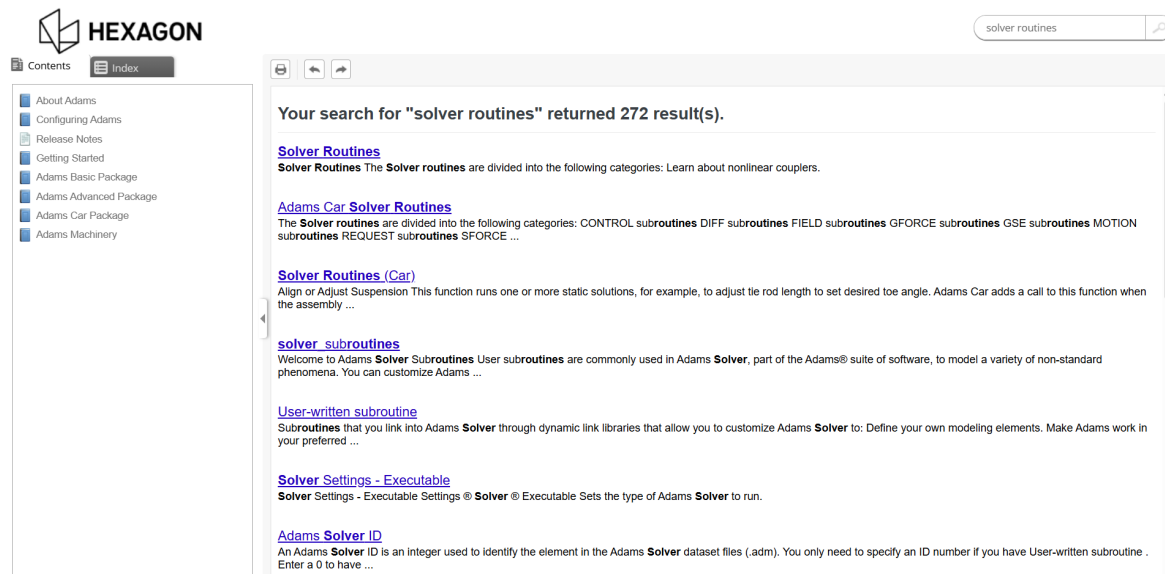

Printing


To print a file:

- In the help system you can select the Print button  to print the topic that you are viewing
- Print the PDF files from Hexagon Product Document Center (<https://nexus.hexagon.com/>)

Index

The Index tab displays product specific help in alphabetical list of keywords associated with help topics. To view index entries, you can select a letter group to display the entries for that group. When you click on an index entry, the related topic will display in the topic frame.

Getting Help

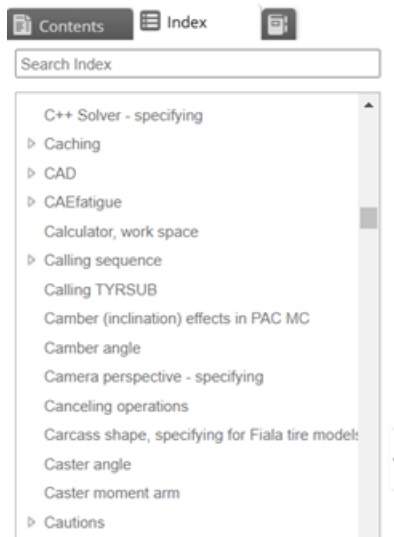

Tutorials and Examples

Adams products have a set of tutorials or getting started guides that step you through examples of using the product's features, as well as introduce the basic concepts of the product. The getting started guides are online. In addition, many of the products have examples of its features that are stored in Knowledge Base Articles.

You will find links to all the tutorials and examples for a product under its Examples tab.

To access the tutorials and examples:

- From the online help, from the left pane, select *Getting Started* and select the product that you are interested in.
- From the online help for a product, from the pane on the left, select *Examples*.

Supported Versions of Integration Products

Support for Easy5 and MATLAB	162
Supported Environments for Adams Real Time	163
Supported Versions of Integration Products	164

Support for Easy5 and MATLAB

Easy5

This release of Adams Controls is certified to run with Easy5 2024.2 .

Easy5 version support is subject to change. For the latest information, see updates to the Release Guide here:

<http://simcompanion.hexagon.com/>.

MATLAB

This release of Adams Controls is certified to run with MATLAB 2023b, 2024a on Linux and Windows. For more information on MATLAB platforms and compatibility, see:

<http://www.mathworks.com/support>

Note:

If you want to co-simulate with Easy5 or MATLAB and you are running Adams Controls on one of the platforms that Easy5 or MATLAB does not support, you should consider using TCP/IP communication. This allows Adams Controls to communicate with Easy5 or MATLAB even though the codes are running on different platforms.

Important:

In MATLAB 2023b and MATLAB 2024a on the Windows platform - Co-simulation with Adams does not support the DIRECT mode for inter-process communication. Only TCP/IP and PIPE modes of inter-process communication are supported.

Supported Environments for Adams Real Time

Concurrent SIMulation Workbench

Adams Solver supports Concurrent's SIMulation Workbench® (SimWB) real time modeling environment on the RedHawk™ Linux® operating system. In addition to participating in real time co-simulations facilitated by SimWB, standalone Adams can be run on the RedHawk Linux operating system. For this release of Adams, Adams Solver is certified in the following environment:

- iHawk® running RedHawk Linux 9.2 and 8.4 with SIMulation Workbench Control Center 2023.2-0 and 2024.1-0.
- The Adams Red Hat Linux 8.10 installer should be deployed on the RedHawk machine.

dSPACE SCALEXIO

Adams Real Time FMUs will run on dSPACE with the SCALEXIO firmware updated to 2021-A. You must install the dSPACE Hypervisor extension and configure a Linux-based virtual machine (Ubuntu 20.04/22.04). The Adams 2025.1 Installation and Operations Guide provides details of the installation procedure.

Supported Versions of Integration Products

Supported Versions of Integration Products

Company	Product Name	Product Version	Adams Product	Platform (x64)
The Math Works, Inc.	<i>MATLAB*</i> (The minimum features of MATLAB required for interfacing with Adams are MATLAB, Simulink, MATLAB Coder and Simulink Coder)	2023b, 2024a	Adams Controls	Red Hat Enterprise Linux 8.10 Suse 15SP4/SP6 Redhat 9.2 Ubuntu 20 Ubuntu 22 Windows 1022H2 Windows 1123H2 Windows 1124H2
Hexagon	Easy5**	2024.2	Adams Controls	Red Hat Enterprise Linux 8.10 Suse 15SP4/SP6 Redhat 9.4 Ubuntu 20 Ubuntu 22 Windows 1022H2 Windows 1123H2 Windows 1124H2
Functional Mock-up Interface (FMI)#	FMU Export Co-Simulation FMU Import Co-Simulation FMU Import Model Exchange	1.0, 2.0	Adams Controls	Red Hat Enterprise Linux 8.10 Suse 15SP4/SP6 Redhat 9.4 Ubuntu 20 Ubuntu 22 Windows 1022H2 Windows 1123H2 Windows 1124H2
Hexagon	MSC.Nastran	V69.X and above	Adams Durability Adams Flex	All Linux and Windows

Supported Versions of Integration Products

Company	Product Name	Product Version	Adams Product	Platform (x64)
Hexagon	Marc	2005 and above	Adams Durability	All Linux and Windows
		2003 and above	Adams Flex	
Hexagon	Fatigue	2001 and above	Adams Durability	All Linux and Windows
nCode	FE-Fatigue	Version 5.2 and above	Adams Durability	All Linux and Windows
ANSYS, Inc.	ANSYS	V6.0 and above	Adams Durability	All Linux and Windows
		V5.4 and above	Adams Flex	
Dassault Systemes, SIMULIA division	ABAQUS/ADAMS	Version 6.3 and above	Adams Durability	All Linux and Windows
		Version 6.1-1 and above	Adams Flex	
Siemens Digital Manufacturing Solutions division	I-DEAS Mechanism Design	I-DEAS NX 10 and above	Adams Durability	All Linux and Windows
		I-DEAS 8, 9, NX 10 and above	Adams Flex	
ANSYS, Inc.	EnSight	10.1.1b (but later than 8.2.1f may likely function)	Adams PostProcessor	All Linux and Windows
cosin scientific software AG	FTire	Version 2020-3 22743	Adams Tire	All Linux and Windows

Notes:	With regards to compilers, Adams 2025.1 officially supports the Professional Edition of Microsoft Visual Studio 2022, but the Community Edition 2022 has been found to function in the following scenarios (for more details on compiler support see Hardware and Software Specifications section of the Adams Installation and Operations Guide): *Function Evaluation and co-simulation mode for Adams and MATLAB/Simulink; External System Library (ESL) import of MATLAB/Simulink models into Adams.
---------------	--

Supported Versions of Integration Products

	**Function Evaluation and co-simulation mode for Adams and Easy5; External System Library (ESL) import of Easy5 2024.2
--	---

models into Adams.

#FMI co-simulation and model exchange FMUs generated with Easy5
2024.2